YAMAHA

# PARTS CATALOGUE

# XT660Z (11D1) EUROPE

1G11D-300E1

( )

YAMAHA GENUINE Parts & Accessories

XT660Z
PARTS CATALOGUE
©2009 by Yamaha Motor Italia S.p.a.
1st edition, May 2009
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Italia S.p.a.
is expressly prohibited.
Printed in Italy.

# FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|---|---|---|---|
| 2F5–83310–60 | FRONT FLASHER LIGHT ASSY | 2 | |
| 115–83311–60 | .BULB (6V–18W) | 1 | |

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.


| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|---|---|---|---|
| 2N4–24110–00–X5 | FUEL TANK COMP. | 2 | MXR |
| 3J1–24240–10 | .GRAPHIC, FUEL TANK | 1 | FOR MXR |

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.


6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

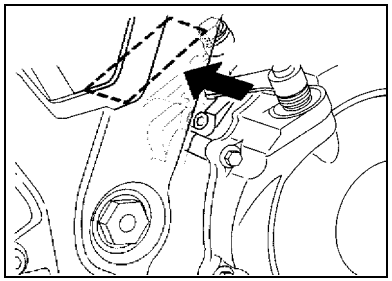

Frame Serial No.

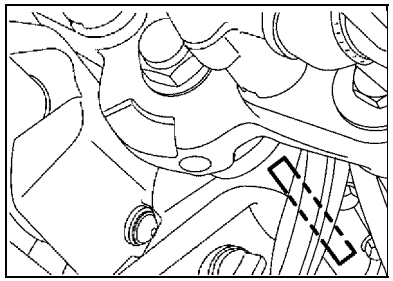

8. Applicable Colour Code (The (*) mark shows Model colour.)

| Abbreviation | Colour Name | Colour Code |
|---|---|---|
| BWC1(*) | BLUISH WHITE COCKTAIL 1 | 0390 |
| LGB | LOW GLOSS BLACK | 0098 |
| SL | SILVER | 0035 |
| SMX(*) | BLACK METALLIC X | 0903 |
| YNS5(*) | YELLOWISH GRAY SOLID 5 | 1101 |
| | | |
| | | |
| | | |
| | | |
| | | |


9. Quantity Column Information

| Column No. | Name Of Q'ty Column | Destination |
|---|---|---|
| 1 | 010 | EUROPE |
| 2 | 020 | BELGIUM - NETHERLANDS |
| 3 | 030 | PORTUGAL |
| | | |
| | | |


# MODEL LABEL

(1) A label called “Model Label” is affixed in the location as indicated in (3) below.
When using this parts catalogue, please be sure to cross–reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.


(2) “Model Label” Indication

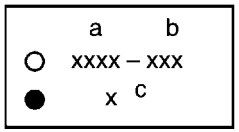


a: Model Type Code
b: Production Code No.
c: Colouring Type

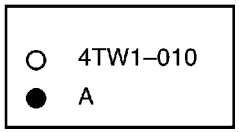


(3) Model Label Affixing Location

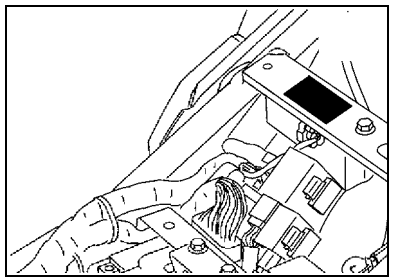

(4) Colouring Information

| Model Code | Colouring Type Code | Colour Code | Colour Name | Abbreviation |
|---|---|---|---|---|
| 11D1 | A | 0903 | BLACK METALLIC X | SMX |
| | B | 0390 | BLUISH WHITE COCKTAIL 1 | BWC1 |
| | C | 1101 | YELLOWISH GRAY SOLID 5 | YNS5 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

(5) Model Code – Production Code Number of Model Listed in This Parts Catalogue

| Model Code | Production Code No. | Country (destination) |
|---|---|---|
| 11D1 | 010 | EUROPE |
| | 020 | BELGIUM |
| | | NETHERLANDS |
| | 030 | PORTUGAL |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

| Model Code | Production Code No. | Country (destination) |
|---|---|---|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

# CONTENTS

## ENGINE



CYLINDER HEAD ..... 1
CYLINDER ..... 2
CRANKSHAFT & PISTON ..... 3
VALVE ..... 4
CAMSHAFT & CHAIN ..... 5
WATER PUMP ..... 6
RADIATOR & HOSE ..... 7
OIL PUMP ..... 9
INTAKE ..... 11
INTAKE 2 ..... 13
AIR INDUCTION SYSTEM ..... 14
EXHAUST ..... 15
CRANKCASE ..... 17
CRANKCASE COVER 1 ..... 18
STARTER ..... 20
CLUTCH ..... 21
TRANSMISSION ..... 23
SHIFT CAM & FORK ..... 25
SHIFT SHAFT ..... 26


## CHASSIS


FRAME ..... 27
FENDER ..... 29
REAR ARM ..... 30
REAR SUSPENSION ..... 32
STEERING ..... 33
FRONT FORK ..... 34
FUEL TANK ..... 36
SEAT ..... 38
FRONT WHEEL ..... 40
FRONT BRAKE ..... 41
REAR WHEEL ..... 42
REAR BRAKE ..... 44
STEERING HANDLE & CABLE ..... 45
FRONT MASTER CYLINDER ..... 46
STAND & FOOTREST ..... 47
REAR MASTER CYLINDER ..... 49
COWLING ..... 51
GENERATOR ..... 52
FLASHER LIGHT ..... 53
METER ..... 54
HEADLIGHT ..... 55
TAILLIGHT ..... 56
HANDLE SWITCH & LEVER ..... 58
ELECTRICAL 1 ..... 59
ELECTRICAL 2 ..... 61


## INDEX



NUMERICAL INDEX ..... 63

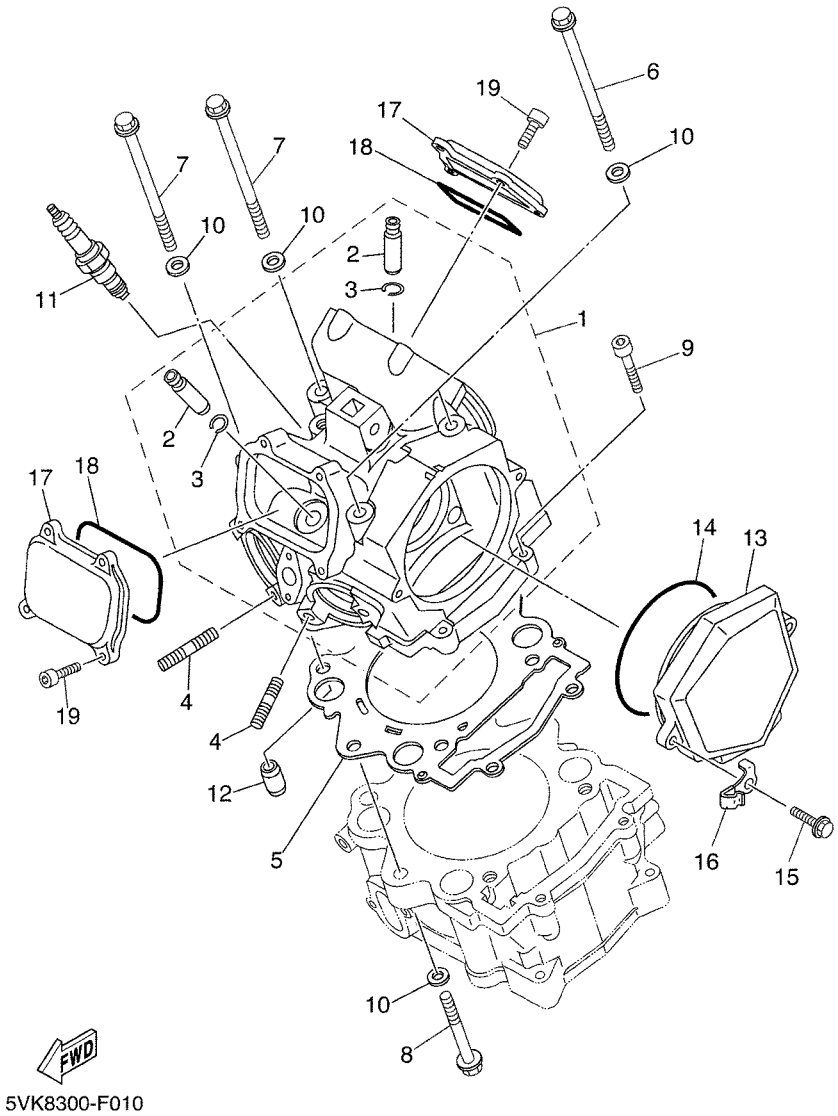


5VK8300-F010

## FIG. 1 CYLINDER HEAD


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E1101–00 | CYLINDER HEAD ASSY | 1 | 1 | 1 | | | |
| 2 | 4G0–11133–11 | .GUIDE, VALVE 1 | 4 | 4 | 4 | | | |
| 3 | 93440–10X00 | .CIRCLIP | 4 | 4 | 4 | | | |
| 4 | 95617–08618 | BOLT, STUD | 4 | 4 | 4 | | | |
| 5 | 5VK–11181–00 | GASKET, CYLINDER HEAD 1 | 1 | 1 | 1 | | | |
| 6 | 90105–09002 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 7 | 90105–09004 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 8 | 90105–09003 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 9 | 91317–06030 | BOLT | 2 | 2 | 2 | | | |
| 10 | 90201–096J9 | WASHER, PLATE | 6 | 6 | 6 | | | |
| 11 | 94701–00X09 | PLUG, SPARK (NGK CR7E) | 1 | 1 | 1 | | | |
| 12 | 93612–16X00 | PIN, DOWEL | 2 | 2 | 2 | | | |
| 13 | 5VK–E1185–00 | COVER, CYLINDER HEAD SIDE 3 | 1 | 1 | 1 | | | |
| 14 | 93210–96X00 | O-RING | 1 | 1 | 1 | | | |
| 15 | 90105–06X06 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 16 | 90465–10044 | CLAMP | 1 | 1 | 1 | | | |
| 17 | 5VK–E1186–00 | COVER, CYLINDER HEAD SIDE 2 | 2 | 2 | 2 | | | |
| 18 | 93210–78X00 | O-RING | 2 | 2 | 2 | | | |
| 19 | 91317–06018 | BOLT | 8 | 8 | 8 | | | |

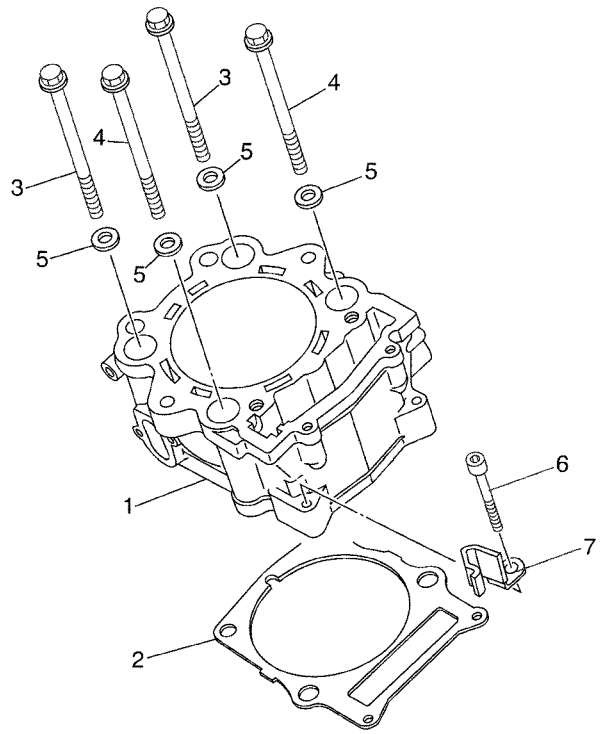


5VK8300-F020

**FIG. 2 CYLINDER**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–11311–00 | CYLINDER 1 | 1 | 1 | 1 | | | |
| 2 | 5VK–11351–00 | GASKET, CYLINDER | 1 | 1 | 1 | | | |
| 3 | 90105–10078 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 4 | 90105–10077 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 5 | 90201–101A4 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 6 | 91317–06040 | BOLT | 2 | 2 | 2 | | | |
| 7 | 90465–10045 | CLAMP | 1 | 1 | 1 | | | |

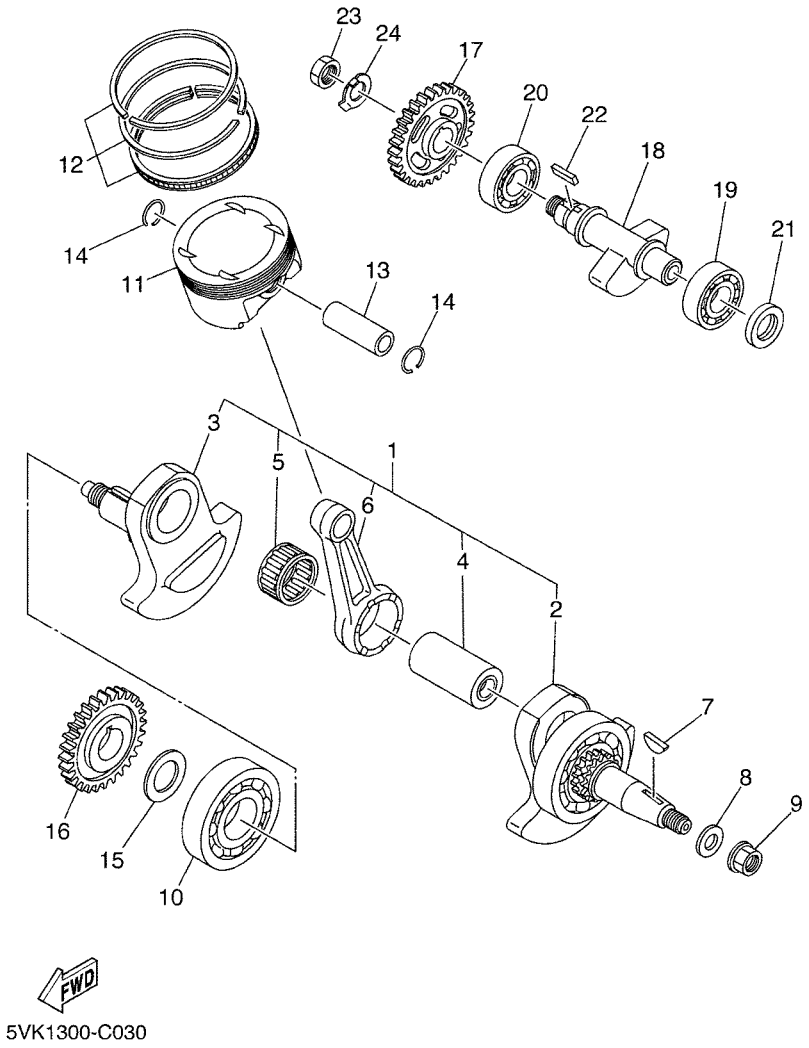


5VK1300-C030

## FIG. 3 CRANKSHAFT & PISTON


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–11400–00 | CRANKSHAFT ASSY | 1 | 1 | 1 | | | |
| 2 | 5VK–11401–09 | .CRANK SUB ASSY 1 | 1 | 1 | 1 | | | |
| 3 | 5VK–11422–00 | .CRANK 2 | 1 | 1 | 1 | | | |
| 4 | 5VK–11681–00 | .PIN, CRANK 1 | 1 | 1 | 1 | | | |
| 5 | 93310–84010 | .BEARING | 1 | 1 | 1 | | | |
| 6 | 5VK–11651–00 | .ROD, CONNECTING | 1 | 1 | 1 | | | |
| 7 | 90280–05001 | KEY, WOODRUFF | 1 | 1 | 1 | | | |
| 8 | 90201–16013 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 9 | 90179–16448 | NUT | 1 | 1 | 1 | | | |
| 10 | 93306–308Y0 | BEARING | 1 | 1 | 1 | | | |
| 11 | 5VK–11631–00 | PISTON (STD) | 1 | 1 | 1 | | | |
| 12 | 5VK–11603–00 | PISTON RING SET (STD) | 1 | 1 | 1 | | | |
| 13 | 5VK–11633–00 | PIN, PISTON | 1 | 1 | 1 | | | |
| 14 | 93450–24824 | CIRCLIP | 2 | 2 | 2 | | | |
| 15 | 90201–30X00 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 16 | 5VK–E1536–00 | GEAR, DRIVE | 1 | 1 | 1 | | | |
| 17 | 5VK–E1531–00 | GEAR, BALANCE WEIGHT | 1 | 1 | 1 | | | |
| 18 | 5VK–E1454–00 | WEIGHT 1 | 1 | 1 | 1 | | | |
| 19 | 93306–305YJ | BEARING | 1 | 1 | 1 | | | |
| 20 | 93306–305YH | BEARING | 1 | 1 | 1 | | | |
| 21 | 93101–25106 | OIL SEAL | 1 | 1 | 1 | | | |
| 22 | 90282–05058 | KEY, STRAIGHT | 1 | 1 | 1 | | | |
| 23 | 90170–18003 | NUT | 1 | 1 | 1 | | | |
| 24 | 90215–18X00 | WASHER, LOCK | 1 | 1 | 1 | | | |

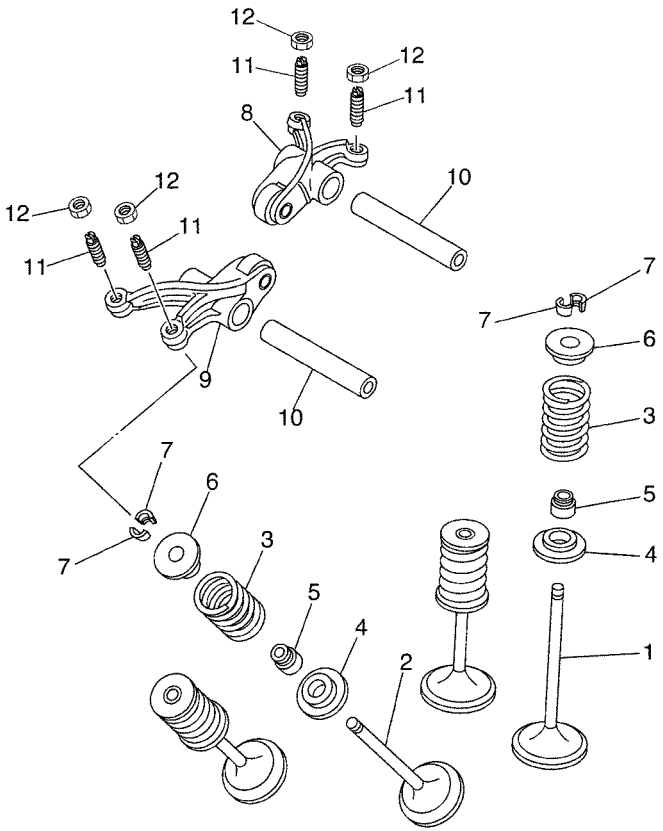


5VK1300-C040

**FIG. 4 VALVE**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–12111–00 | VALVE, INTAKE | 2 | 2 | 2 | | | |
| 2 | 5VK–12121–00 | VALVE, EXHAUST | 2 | 2 | 2 | | | |
| 3 | 5VK–12113–00 | SPRING, VALVE INNER | 4 | 4 | 4 | | | |
| 4 | 3YF–12116–00 | SEAT, VALVE SPRING | 4 | 4 | 4 | | | |
| 5 | 5H0–12119–00 | SEAL, VALVE STEM | 4 | 4 | 4 | | | |
| 6 | 3YF–12117–01 | RETAINER, VALVE SPRING | 4 | 4 | 4 | | | |
| 7 | 4G0–12118–00 | COTTER, VALVE | 8 | 8 | 8 | | | |
| 8 | 5VK–E2151–00 | ARM, VALVE ROCKER | 1 | 1 | 1 | | | |
| 9 | 5VK–E2161–00 | ARM, VALVE ROCKER 2 | 1 | 1 | 1 | | | |
| 10 | 5VK–12146–00 | SHAFT, ROCKER | 2 | 2 | 2 | | | |
| 11 | 5BP–12159–01 | SCREW, VALVE ADJUSTING | 4 | 4 | 4 | | | |
| 12 | 90170–06128 | NUT | 4 | 4 | 4 | | | |

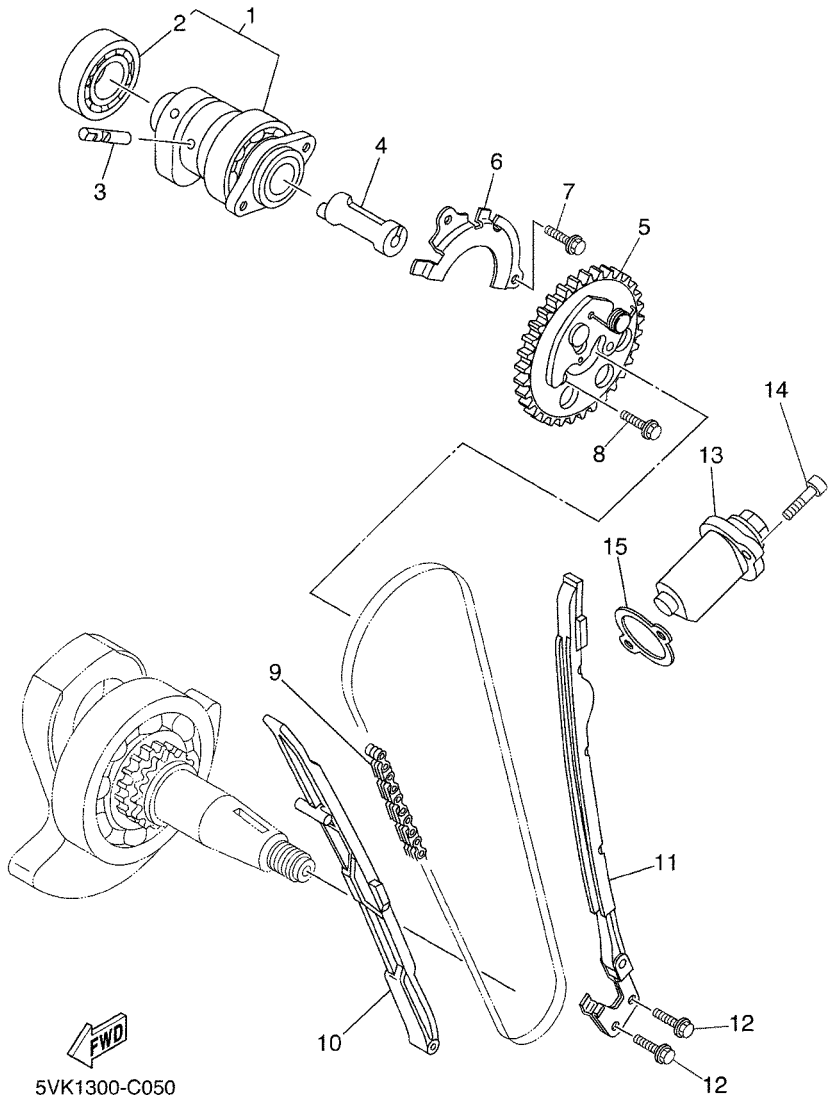

5VK1300-C050

## FIG. 5 CAMSHAFT & CHAIN


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E2170–10 | CAMSHAFT ASSY 1 | 1 | 1 | 1 | | | |
| 2 | 93306–07209 | .BEARING | 1 | 1 | 1 | | | |
| 3 | 5VK–12284–00 | PIN, DECOMPRESSION LEVER | 1 | 1 | 1 | | | |
| 4 | 5VK–12290–00 | LEVER, DECOMPRESSION SPRING | 1 | 1 | 1 | | | |
| 5 | 5VK–12280–01 | DECOMPRESSION ASSY | 1 | 1 | 1 | | | |
| 6 | 5VK–E111F–00 | PLATE | 1 | 1 | 1 | | | |
| 7 | 95027–06012 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 8 | 90105–07004 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 9 | 94591–57126 | CHAIN (98XRH2010-126M) | 1 | 1 | 1 | | | |
| 10 | 5VK–E2231–00 | GUIDE, STOPPER 1 | 1 | 1 | 1 | | | |
| 11 | 5VK–E2241–00 | GUIDE, STOPPER 2 | 1 | 1 | 1 | | | |
| 12 | 90119–06X05 | BOLT, WITH WASHER | 2 | 2 | 2 | | | |
| 13 | 5VK–E2210–00 | TENSIONER ASSY, CAM CHAIN | 1 | 1 | 1 | | | |
| 14 | 91317–06025 | BOLT | 2 | 2 | 2 | | | |
| 15 | 4DW–12213–00 | GASKET, TENSIONER CASE | 1 | 1 | 1 | | | |

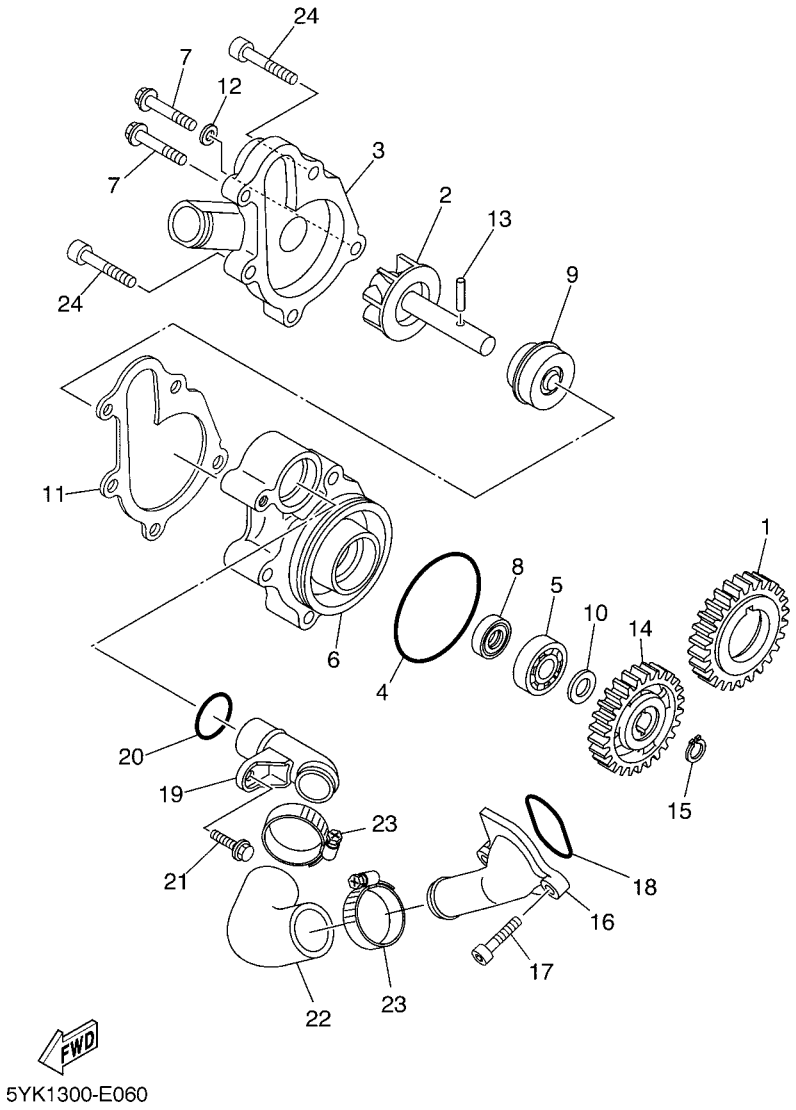

5YK1300-E060


## FIG. 6 WATER PUMP

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E2436–00 | GEAR, DRIVE | 1 | 1 | 1 | | | |
| 2 | 5VK–12450–00 | IMPELLER SHAFT ASSY | 1 | 1 | 1 | | | |
| 3 | 5VK–12422–00 | COVER, HOUSING | 1 | 1 | 1 | | | |
| 4 | 93210–61750 | O-RING | 1 | 1 | 1 | | | |
| 5 | 93306–00106 | BEARING | 1 | 1 | 1 | | | |
| 6 | 5VK–12421–00 | HOUSING, WATER PUMP | 1 | 1 | 1 | | | |
| 7 | 95027–06025 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 8 | 93101–12173 | OIL SEAL | 1 | 1 | 1 | | | |
| 9 | 11H–12438–10 | SEAL, MECHANICAL | 1 | 1 | 1 | | | |
| 10 | 90201–12541 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 11 | 5VK–12428–00 | GASKET, HOUSING COVER 2 | 1 | 1 | 1 | | | |
| 12 | 90430–06014 | GASKET | 1 | 1 | 1 | | | |
| 13 | 93603–16219 | PIN, DOWEL | 1 | 1 | 1 | | | |
| 14 | 5VK–12459–00 | GEAR, IMPELLER SHAFT | 1 | 1 | 1 | | | |
| 15 | 99009–12400 | CIRCLIP | 1 | 1 | 1 | | | |
| 16 | 5VK–E2469–00 | JOINT 1 | 1 | 1 | 1 | | | |
| 17 | 91317–06020 | BOLT | 2 | 2 | 2 | | | |
| 18 | 93210–33X00 | O-RING | 1 | 1 | 1 | | | |
| 19 | 5VK–12481–00 | PIPE 1 | 1 | 1 | 1 | | | |
| 20 | 93210–21X00 | O-RING | 1 | 1 | 1 | | | |
| 21 | 91317–06012 | BOLT | 1 | 1 | 1 | | | |
| 22 | 5VK–E2577–00 | HOSE 2 | 1 | 1 | 1 | | | |
| 23 | 90450–32X03 | HOSE CLAMP ASSY | 2 | 2 | 2 | | | |
| 24 | 91317–06050 | BOLT | 3 | 3 | 3 | | | |

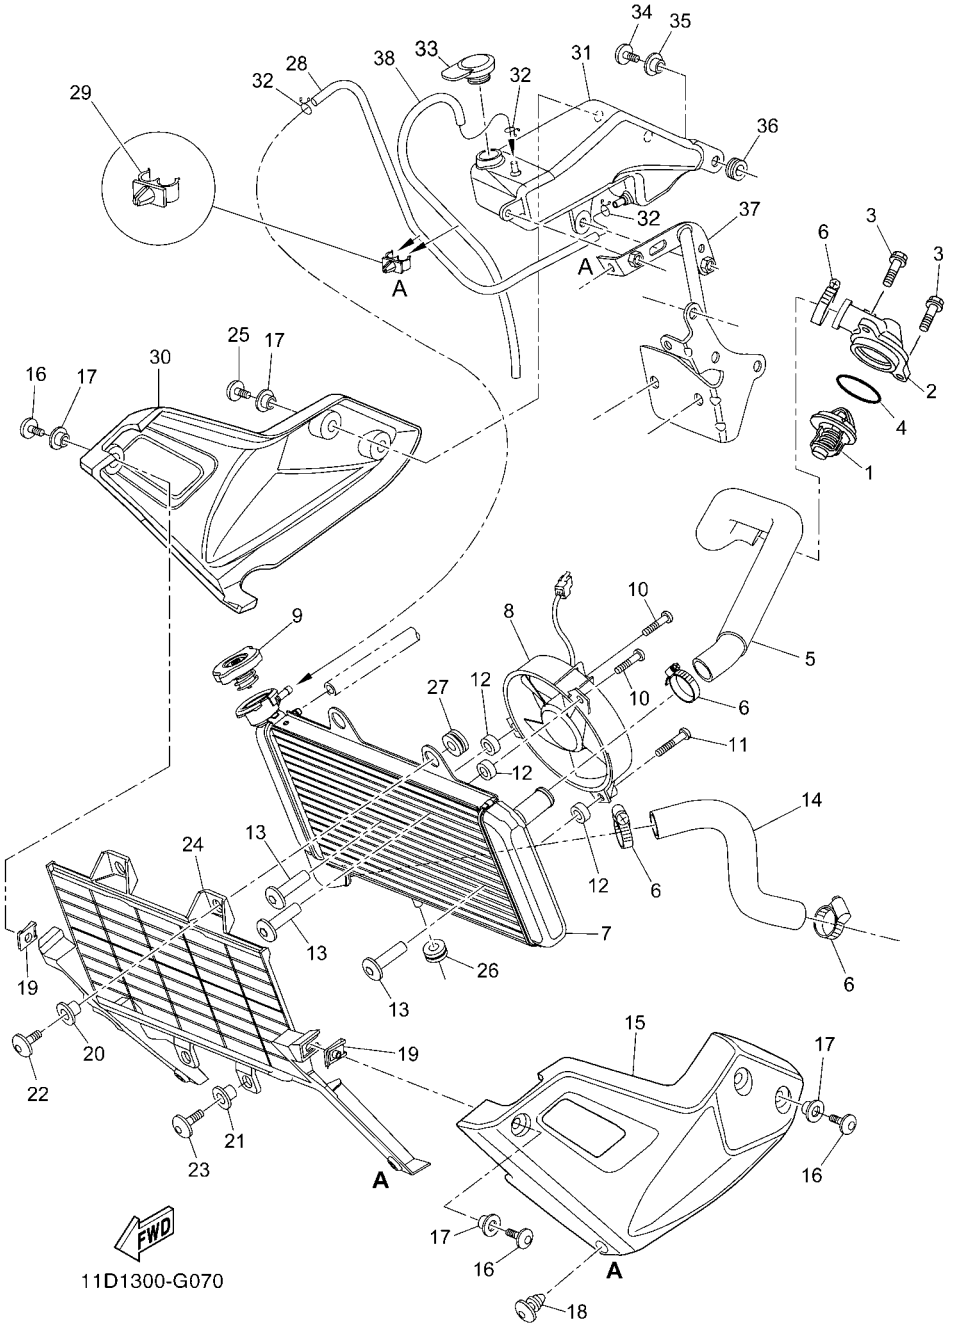


## FIG. 7 RADIATOR & HOSE

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–12410–00 | THERMOSTAT ASSY | 1 | 1 | 1 | | | |
| 2 | 5VK–E2413–00 | COVER, THERMOSTAT | 1 | 1 | 1 | | | |
| 3 | 90105–06X06 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 4 | 93210–41X00 | O-RING | 1 | 1 | 1 | | | |
| 5 | 11D–E2578–00 | HOSE 3 | 1 | 1 | 1 | | | |
| 6 | 90450–32X03 | HOSE CLAMP ASSY | 4 | 4 | 4 | | | |
| 7 | 11D–E2461–00 | RADIATOR ASSY | 1 | 1 | 1 | | | |
| 8 | 11D–E2405–00 | BLOWER ASSY | 1 | 1 | 1 | | | |
| 9 | 5VK–E2462–00 | CAP, RADIATOR | 1 | 1 | 1 | | | |
| 10 | 5B2–E2675–00 | BOLT, BLOWER HOLDING | 2 | 2 | 2 | | | |
| 11 | 5B2–E2623–00 | BOLT | 1 | 1 | 1 | | | |
| 12 | 5B2–E2671–00 | NUT 1 | 3 | 3 | 3 | | | |
| 13 | 11D–E2662–00 | COLLAR 1 | 3 | 3 | 3 | | | |
| 14 | 11D–E2579–00 | HOSE 4 | 1 | 1 | 1 | | | |
| 15 | 11D–E240J–00 | RADIATOR COVER ASSY1 | 1 | 1 | 1 | | | |
| 16 | 90111–06X19 | BOLT,HEX. SOCKET BUTTON | 4 | 4 | 4 | | | |
| 17 | 90387–06X02 | COLLAR | 6 | 6 | 6 | | | |
| 18 | 90269–07007 | RIVET | 2 | 2 | 2 | | | |
| 19 | 2VW–F1736–00 | NUT,PLATE | 2 | 2 | 2 | | | |
| 20 | 90387–06042 | COLLAR | 2 | 2 | 2 | | | |
| 21 | 90387–06648 | COLLAR | 2 | 2 | 2 | | | |
| 22 | 90111–06X20 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 23 | 90111–06X19 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 24 | 11D–E2498–00 | PROTECTOR | 1 | 1 | 1 | | | |
| 25 | 90111–06X17 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 26 | 90480–15363 | GROMMET | 1 | 1 | 1 | | | |
| 27 | 90480–18276 | GROMMET | 2 | 2 | 2 | | | |

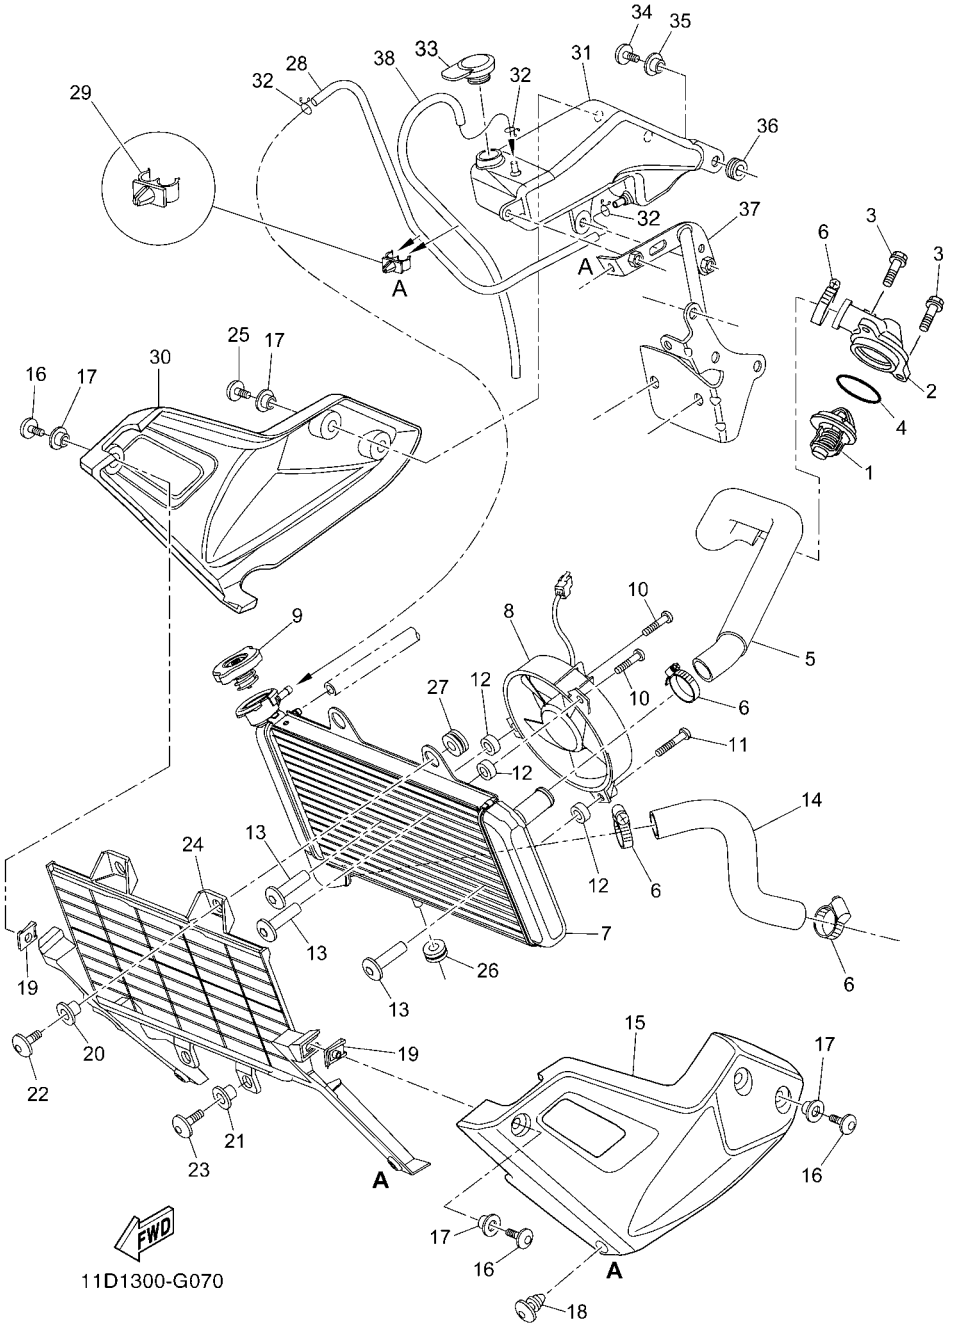


## FIG. 7 RADIATOR & HOSE

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90445–08X06 | HOSE | 1 | 1 | 1 | | | |
| 29 | 90464–08126 | CLAMP | 1 | 1 | 1 | | | |
| 30 | 11D–E240K–00 | RADIATOR COVER ASSY 2 | 1 | 1 | 1 | | | |
| 31 | 11D–F1871–00 | TANK, RECOVERY | 1 | 1 | 1 | | | |
| 32 | 90467–08003 | CLIP | 3 | 3 | 3 | | | |
| 33 | 5DS–F1771–00 | BODY, CAP | 1 | 1 | 1 | | | |
| 34 | 90110–06202 | BOLT, HEXAGON SOCKET HEAD | 3 | 3 | 3 | | | |
| 35 | 90387–06161 | COLLAR | 3 | 3 | 3 | | | |
| 36 | 90480–14014 | GROMMET | 3 | 3 | 3 | | | |
| 37 | 11D–F1873–00 | BRACKET, RECOVERY TANK | 1 | 1 | 1 | | | |
| 38 | 90445–08X05 | HOSE | 1 | 1 | 1 | | | |


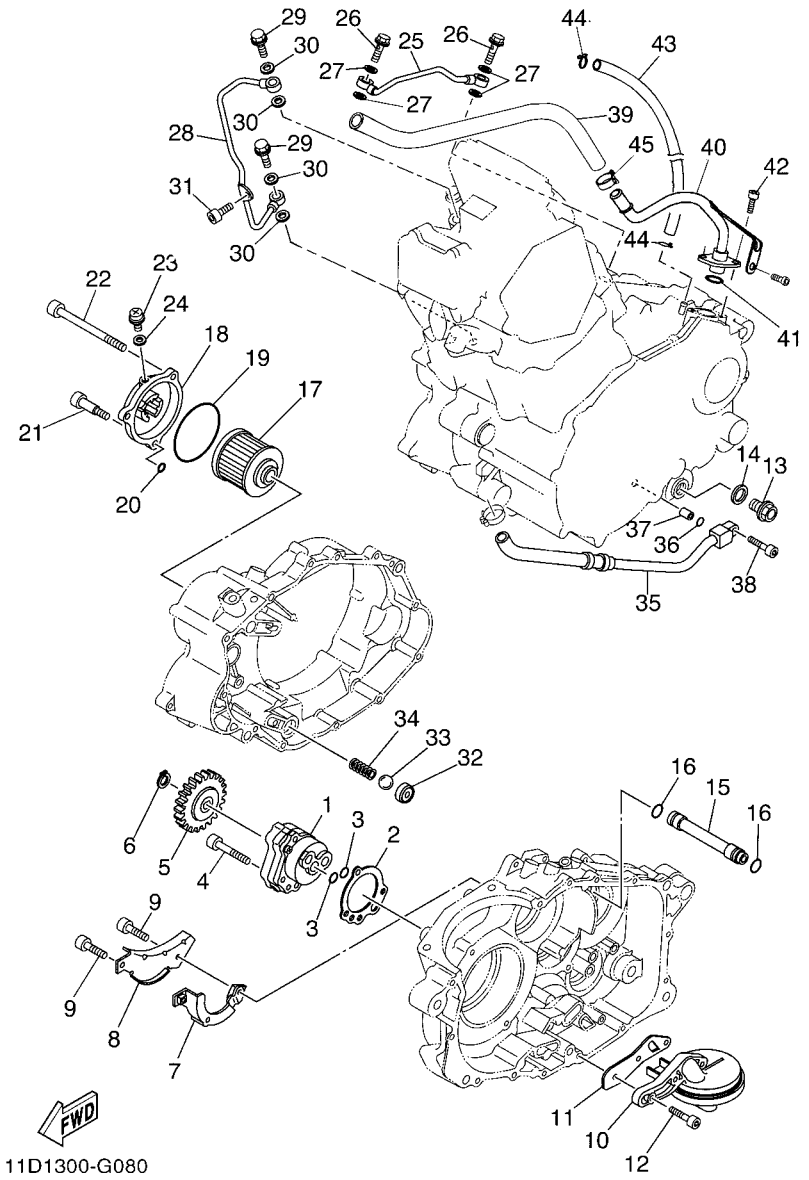



**FIG. 8 OIL PUMP**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5LP–13300–00 | OIL PUMP ASSY | 1 | 1 | 1 | | | |
| 2 | 5LP–13329–00 | GASKET, PUMP COVER | 1 | 1 | 1 | | | |
| 3 | 93210–13X00 | O-RING | 2 | 2 | 2 | | | |
| 4 | 92017–06035 | BOLT, BUTTON HEAD | 3 | 3 | 3 | | | |
| 5 | 3AJ–13325–00 | GEAR, PUMP DRIVEN | 1 | 1 | 1 | | | |
| 6 | 93410–11X00 | CIRCLIP | 1 | 1 | 1 | | | |
| 7 | 5VK–E3356–00 | COVER, PUMP 2 | 1 | 1 | 1 | | | |
| 8 | 5VK–E3327–00 | COVER, PUMP GEAR | 1 | 1 | 1 | | | |
| 9 | 91317–05008 | BOLT | 2 | 2 | 2 | | | |
| 10 | 5VK–WE343–00 | STRAINER COMP. | 1 | 1 | 1 | | | |
| 11 | 5VK–E3415–10 | SEAL, OIL STRAINER | 1 | 1 | 1 | | | |
| 12 | 91317–06020 | BOLT | 3 | 3 | 3 | | | |
| 13 | 90340–14132 | PLUG, STRAIGHT SCREW | 1 | 1 | 1 | | | |
| 14 | 214–11198–01 | GASKET | 1 | 1 | 1 | | | |
| 15 | 5VK–E3181–00 | PIPE, DELIVERY 3 | 1 | 1 | 1 | | | |
| 16 | 93210–11X00 | O-RING | 2 | 2 | 2 | | | |
| 17 | 4X7–13440–01 | ELEMENT ASSY, OIL CLEANER | 1 | 1 | 1 | | | |
| 18 | 2WK–13447–00 | COVER, OIL ELEMENT | 1 | 1 | 1 | | | |
| 19 | 93210–64X01 | O-RING | 1 | 1 | 1 | | | |
| 20 | 93210–07X01 | O-RING | 1 | 1 | 1 | | | |
| 21 | 90109–06419 | BOLT | 1 | 1 | 1 | | | |
| 22 | 91317–06095 | BOLT | 2 | 2 | 2 | | | |
| 23 | 90149–05110 | SCREW | 1 | 1 | 1 | | | |
| 24 | 90430–05X00 | GASKET | 1 | 1 | 1 | | | |
| 25 | 5VK–13161–00 | PIPE, DELIVERY 1 | 1 | 1 | 1 | | | |
| 26 | 90401–08133 | BOLT, UNION | 2 | 2 | 2 | | | |
| 27 | 90430–08X01 | GASKET | 4 | 4 | 4 | | | |

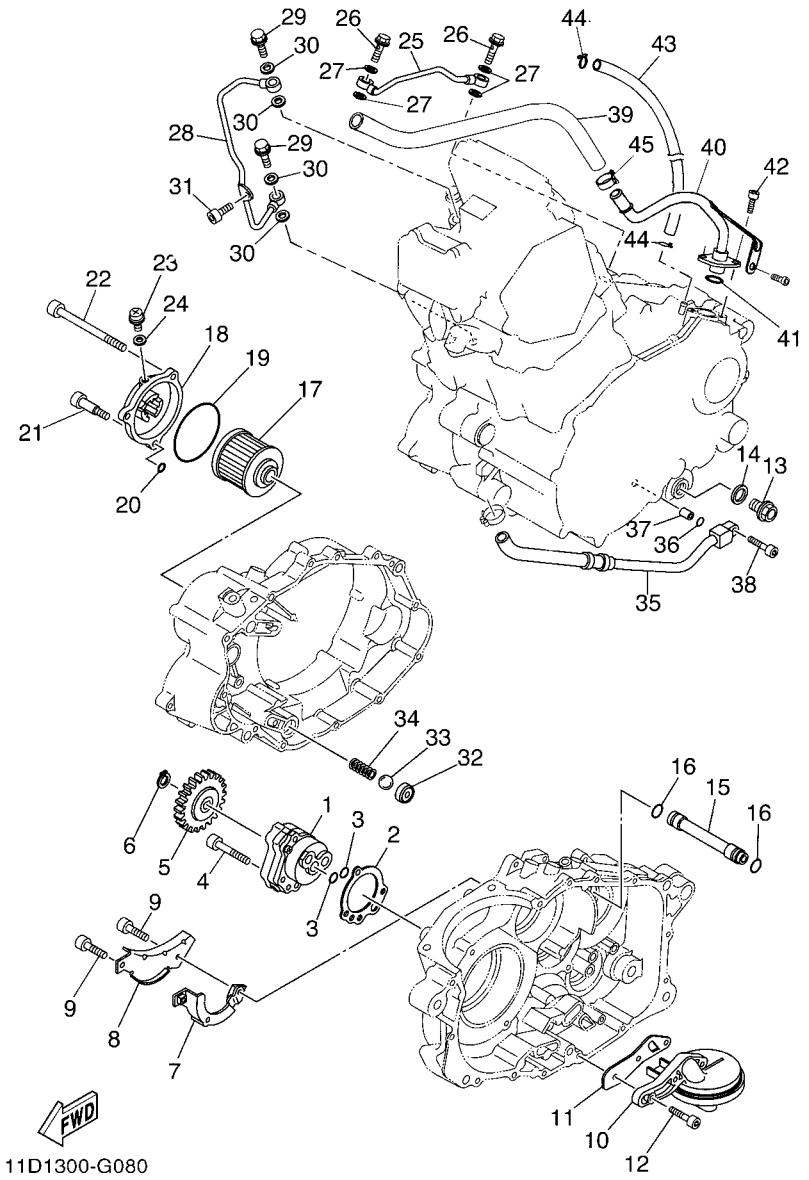


11D1300-G080


**FIG. 8 OIL PUMP**

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VK–13171–00 | PIPE, DELIVERY 2 | 1 | 1 | 1 | | | |
| 29 | 90401–10096 | BOLT, UNION | 2 | 2 | 2 | | | |
| 30 | 90430–10X00 | GASKET | 4 | 4 | 4 | | | |
| 31 | 91317–06012 | BOLT | 1 | 1 | 1 | | | |
| 32 | 583–13113–00 | SEAT, CHECK BALL | 1 | 1 | 1 | | | |
| 33 | 93503–08007 | BALL | 1 | 1 | 1 | | | |
| 34 | 90501–04X01 | SPRING, COMPRESSION | 1 | 1 | 1 | | | |
| 35 | 5VK–13464–00 | HOSE, OIL 1 | 1 | 1 | 1 | | | |
| 36 | 93210–10X00 | O-RING | 1 | 1 | 1 | | | |
| 37 | 91810–14X00 | PIN, DOWEL | 1 | 1 | 1 | | | |
| 38 | 91317–06025 | BOLT | 1 | 1 | 1 | | | |
| 39 | 11D–13467–00 | HOSE | 1 | 1 | 1 | | | |
| 40 | 11D–13405–00 | OIL PIPE COMP. 1 | 1 | 1 | 1 | | | |
| 41 | 93210–15X00 | O-RING | 1 | 1 | 1 | | | |
| 42 | 91317–06016 | BOLT | 2 | 2 | 2 | | | |
| 43 | 90445–11X01 | HOSE | 1 | 1 | 1 | | | |
| 44 | 90467–10008 | CLIP | 2 | 2 | 2 | | | |
| 45 | 90450–20X01 | HOSE CLAMP ASSY | 1 | 1 | 1 | | | |

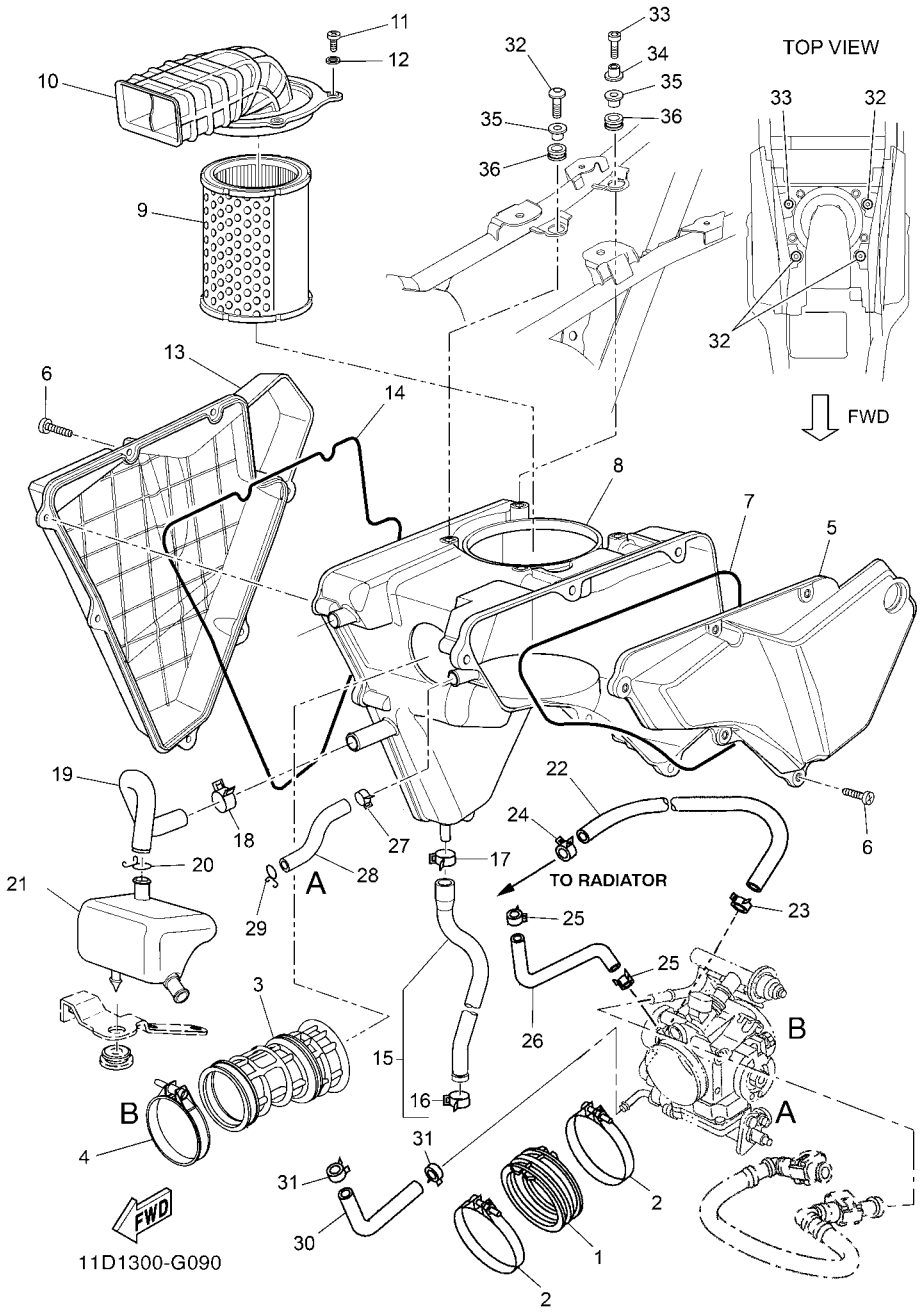



## FIG. 9 INTAKE

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E3586–10 | JOINT, CARBURETOR 1 | 1 | 1 | 1 | | | |
| 2 | 90450–72001 | HOSE CLAMP ASSY | 2 | 2 | 2 | | | |
| 3 | 11D–E4453–00 | JOINT, AIR CLEANER 1 | 1 | 1 | 1 | | | |
| 4 | 90450–59001 | HOSE CLAMP ASSY | 1 | 1 | 1 | | | |
| 5 | 11D–E441A–00 | COVER, CLEANER CASE 1 | 1 | 1 | 1 | | | |
| 6 | 9770M–50030 | SCREW, TAPPING | 13 | 13 | 13 | | | |
| 7 | 11D–E4452–00 | SEAL | 1 | 1 | 1 | | | |
| 8 | 11D–E4411–00 | CASE, AIR CLEANER 1 | 1 | 1 | 1 | | | |
| 9 | 11D–E4451–00 | ELEMENT, AIR CLEANER | 1 | 1 | 1 | | | |
| 10 | 11D–E4430–00 | DUCT ASSY | 1 | 1 | 1 | | | |
| 11 | 92507–06012 | SCREW, PAN HEAD | 4 | 4 | 4 | | | |
| 12 | 92907–06600 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 13 | 11D–E441E–00 | COVER, CLEANER CASE 2 | 1 | 1 | 1 | | | |
| 14 | 11D–E4457–00 | SEAL | 1 | 1 | 1 | | | |
| 15 | 11D–E443E–00 | PIPE, DRAIN | 1 | 1 | 1 | | | |
| 16 | 90467–11090 | .CLIP | 1 | 1 | 1 | | | |
| 17 | 90467–12085 | CLIP | 1 | 1 | 1 | | | |
| 18 | 90467–17801 | CLIP | 1 | 1 | 1 | | | |
| 19 | 11D–E1167–00 | PIPE, BREATHER 2 | 1 | 1 | 1 | | | |
| 20 | 90467–14800 | CLIP | 1 | 1 | 1 | | | |
| 21 | 11D–E5371–10 | BREATHER | 1 | 1 | 1 | | | |
| 22 | 5YK–E244G–00 | HOSE, 4 | 1 | 1 | 1 | | | |
| 23 | 90467–11108 | CLIP | 1 | 1 | 1 | | | |
| 24 | 90467–11090 | CLIP | 1 | 1 | 1 | | | |
| 25 | 90467–07138 | CLIP | 2 | 2 | 2 | | | |
| 26 | 11D–E3542–00 | HOSE, VACUUM SENSING 1 | 1 | 1 | 1 | | | |
| 27 | 90467–17128 | CLIP | 1 | 1 | 1 | | | |

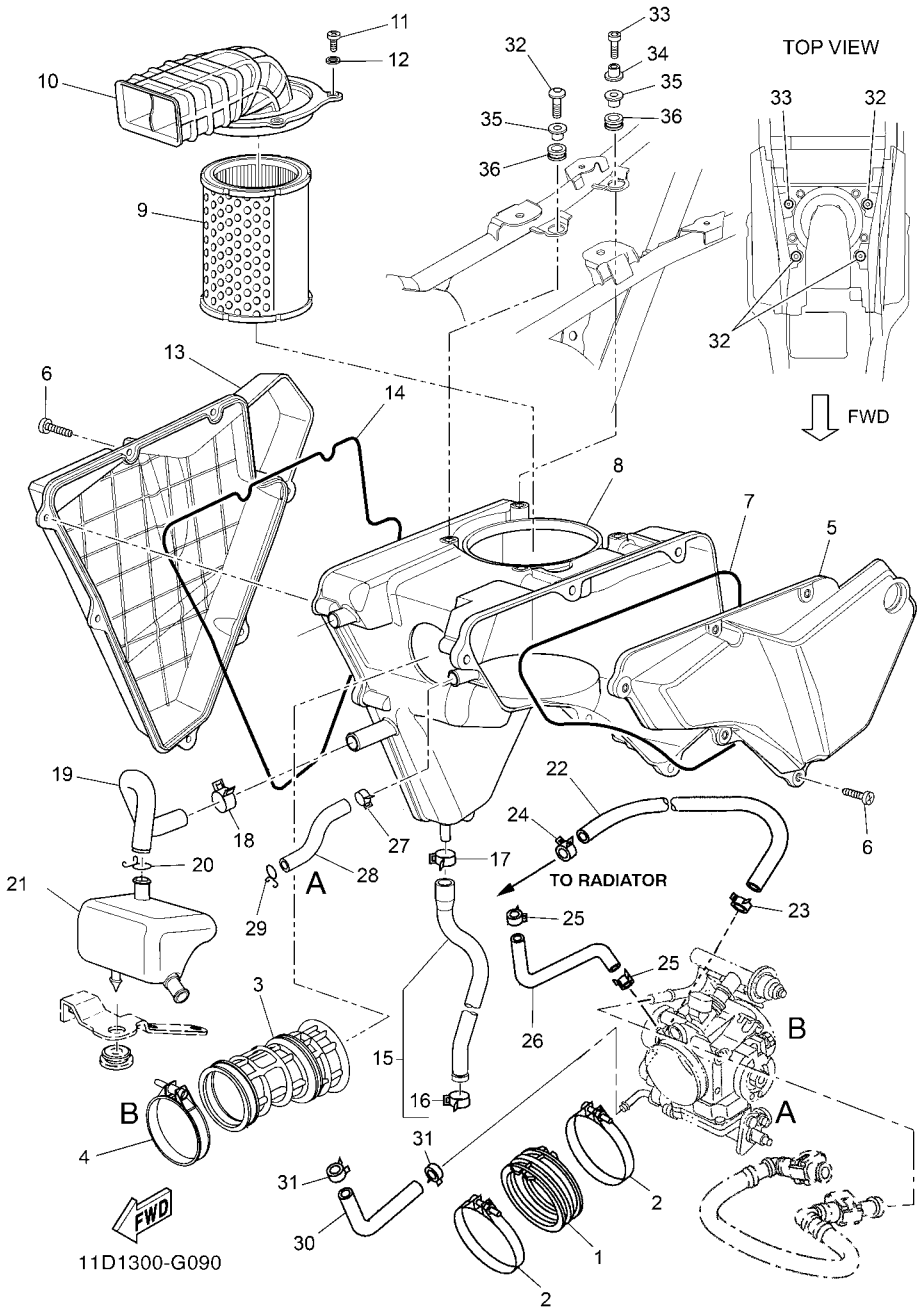


## FIG. 9 INTAKE


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 11D–E3545–00 | HOSE 1 | 1 | 1 | 1 | | | |
| 29 | 90467–170A2 | CLIP | 1 | 1 | 1 | | | |
| 30 | 5YK–E243A–00 | HOSE 1 | 1 | 1 | 1 | | | |
| 31 | 90467–11108 | CLIP | 2 | 2 | 2 | | | |
| 32 | 90111–06051 | BOLT,HEX. SOCKET BUTTON | 3 | 3 | 3 | | | |
| 33 | 9131L–06035 | BOLT | 1 | 1 | 1 | | | |
| 34 | 90387–068P7 | COLLAR | 1 | 1 | 1 | | | |
| 35 | 90387–07037 | COLLAR | 4 | 4 | 4 | | | |
| 36 | 90480–18276 | GROMMET | 4 | 4 | 4 | | | |

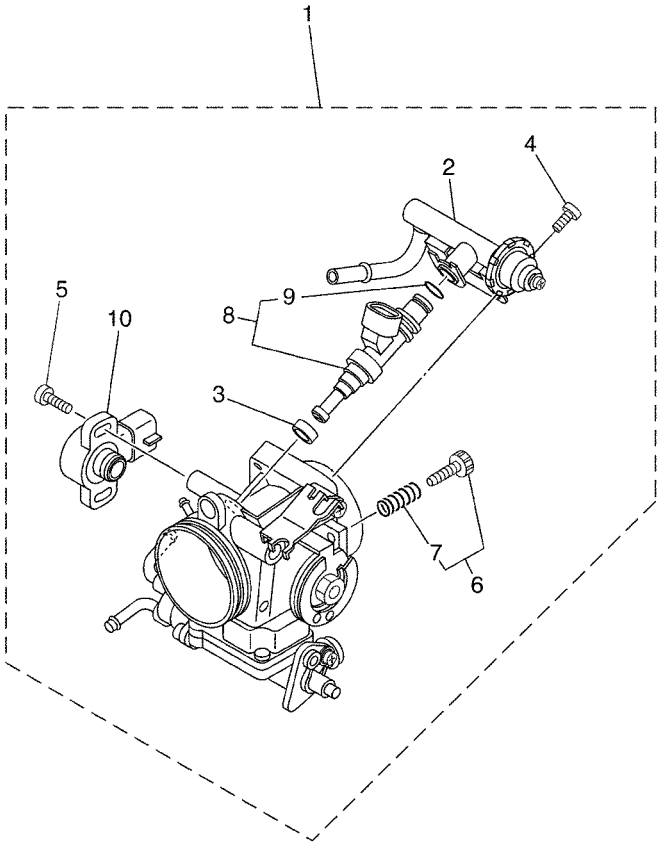


5VK1300-C100

**FIG. 10 INTAKE 2**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5YK–13750–11 | THROTTLE BODY ASSY | 1 | 1 | 1 | | | |
| 2 | 5VK–13160–00 | .DELIVERY PIPE ASSY 1 | 1 | 1 | 1 | | | |
| 3 | 90430–09002 | .GASKET | 1 | 1 | 1 | | | |
| 4 | 98507–06012 | .SCREW, PAN HEAD | 2 | 2 | 2 | | | |
| 5 | 8CC–14216–10 | .SCREW | 2 | 2 | 2 | | | |
| 6 | 5VK–14503–00 | .ADJUST SCREW SET | 1 | 1 | 1 | | | |
| 7 | 5VK–14531–00 | ..SPRING, ADJUST SCREW | 1 | 1 | 1 | | | |
| 8 | 5VK–13761–00 | .INJECTOR | 1 | 1 | 1 | | | |
| 9 | 5PS–14147–00 | ..O-RING | 1 | 1 | 1 | | | |
| 10 | 3P6–85885–00 | .THROTTLE SENSOR ASSY | 1 | 1 | 1 | | | |

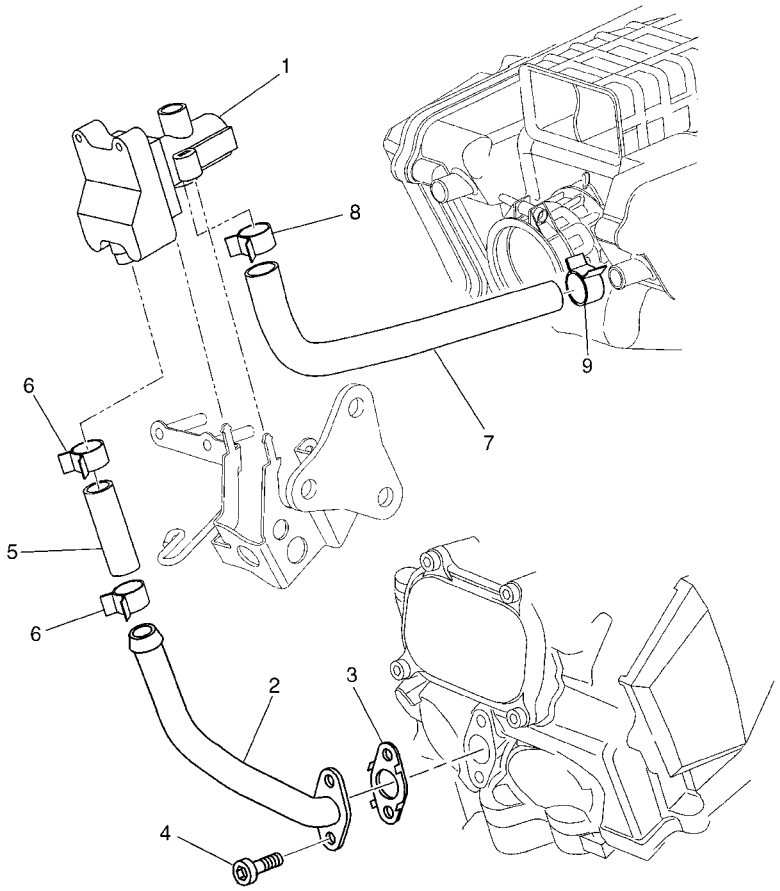


11D1300-G110


## FIG. 11 AIR INDUCTION SYSTEM

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–14803–00 | AIR INDUCTION SYSTEM ASSY | 1 | 1 | 1 | | | |
| 2 | 5VK–14871–02 | PIPE 1 | 1 | 1 | 1 | | | |
| 3 | 5VK–14815–00 | GASKET | 1 | 1 | 1 | | | |
| 4 | 91380–06016 | BOLT | 2 | 2 | 2 | | | |
| 5 | 11D–E4881–00 | HOSE, BEND 1 | 1 | 1 | 1 | | | |
| 6 | 90467–17089 | CLIP | 2 | 2 | 2 | | | |
| 7 | 11D–E4882–00 | HOSE, BEND 2 | 1 | 1 | 1 | | | |
| 8 | 90467–17089 | CLIP | 1 | 1 | 1 | | | |
| 9 | 90467–170A0 | CLIP | 1 | 1 | 1 | | | |

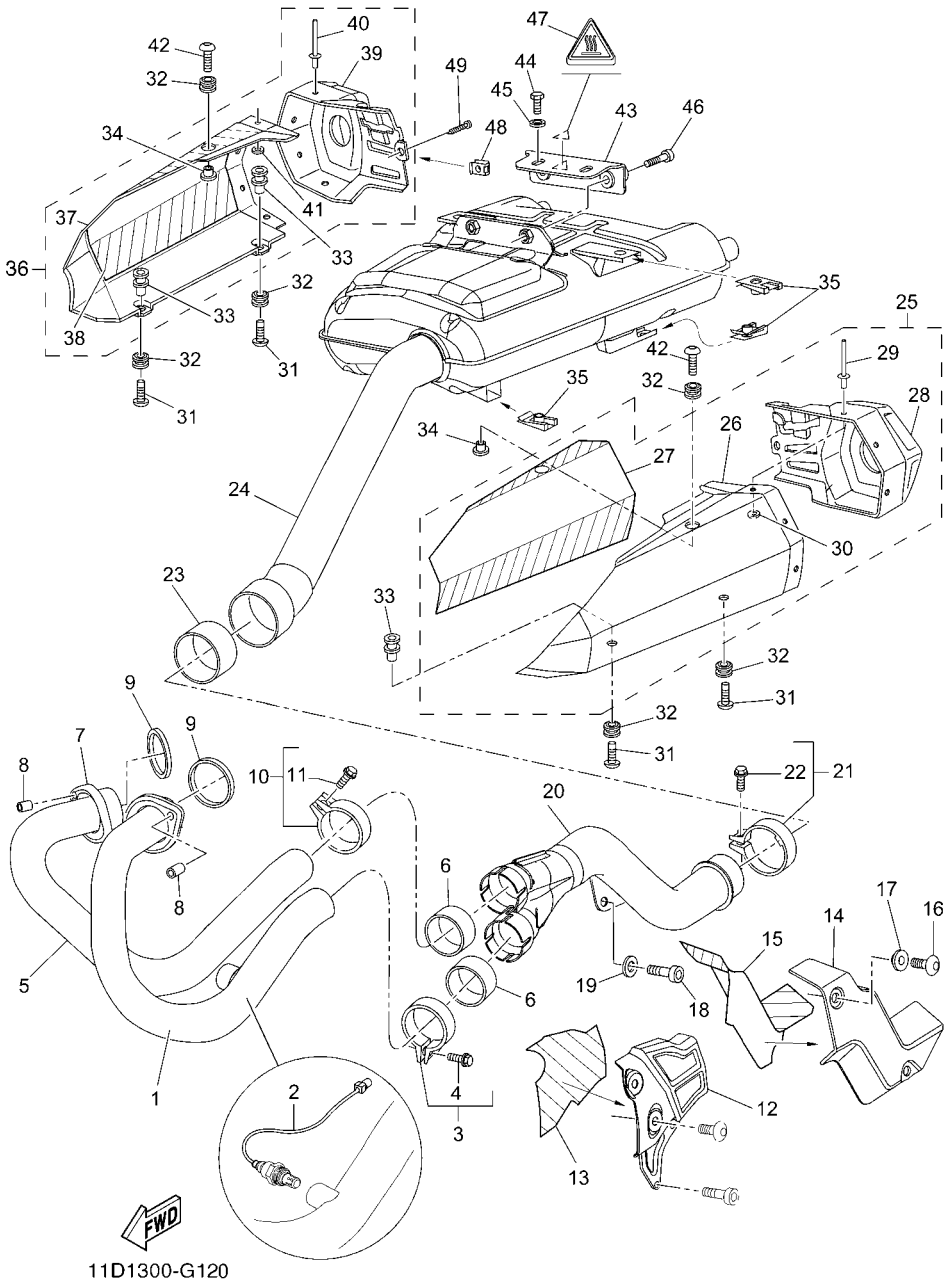



## FIG. 12 EXHAUST

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5YK–E4611–10 | PIPE, EXHAUST 1 | 1 | 1 | 1 | | | |
| 2 | 1B9–8592A–00 | SENSOR, OXYGEN | 1 | 1 | 1 | | | |
| 3 | 5YK–E477R–00 | BAND 1 | 1 | 1 | 1 | | | |
| 4 | 90105–08X20 | .BOLT, FLANGE | 1 | 1 | 1 | | | |
| 5 | 5YK–E4621–00 | PIPE, EXHAUST 2 | 1 | 1 | 1 | | | |
| 6 | 4EL–14714–00 | GASKET, MUFFLER | 2 | 2 | 2 | | | |
| 7 | 5YK–E4612–00 | NUT, RING | 1 | 1 | 1 | | | |
| 8 | 90179–08442 | NUT | 4 | 4 | 4 | | | |
| 9 | 3YF–14613–01 | GASKET, EXHAUST PIPE | 2 | 2 | 2 | | | |
| 10 | 5YK–E477T–00 | BAND 2 | 1 | 1 | 1 | | | |
| 11 | 90105–08X20 | .BOLT, FLANGE | 1 | 1 | 1 | | | |
| 12 | 11D–E4628–00 | PROTECTOR, EXHAUST PIPE | 1 | 1 | 1 | | | |
| 13 | 11D–E113B–00 | INSULATOR 3 | 1 | 1 | 1 | | | |
| 14 | 11D–E4624–00 | COVER, EXHAUST | 1 | 1 | 1 | | | |
| 15 | 11D–E113B–10 | INSULATOR 3 | 1 | 1 | 1 | | | |
| 16 | 90111–06X17 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 17 | 90387–06X02 | COLLAR | 2 | 2 | 2 | | | |
| 18 | 91380–08020 | BOLT | 1 | 1 | 1 | | | |
| 19 | 5CH–E4766–00 | WASHER, PROTECTOR | 1 | 1 | 1 | | | |
| 20 | 11D–E4631–00 | PIPE, EXHAUST 3 | 1 | 1 | 1 | | | |
| 21 | 11D–E4715–00 | BAND, MUFFLER | 1 | 1 | 1 | | | |
| 22 | 90105–08X20 | .BOLT, FLANGE | 1 | 1 | 1 | | | |
| 23 | 5YK–E4714–00 | GASKET, MUFFLER | 1 | 1 | 1 | | | |
| 24 | 11D–E4710–00 | MUFFLER ASSY 1 | 1 | 1 | 1 | | | |
| 25 | 11D–E4708–00 | PROTECTOR ASSY | 1 | 1 | 1 | | | |
| 26 | 11D–E4718–00 | .PROTECTOR, MUFFLER 1 | 1 | 1 | 1 | | | |
| 27 | 11D–E111B–00 | .INSULATOR 1 | 1 | 1 | 1 | | | |

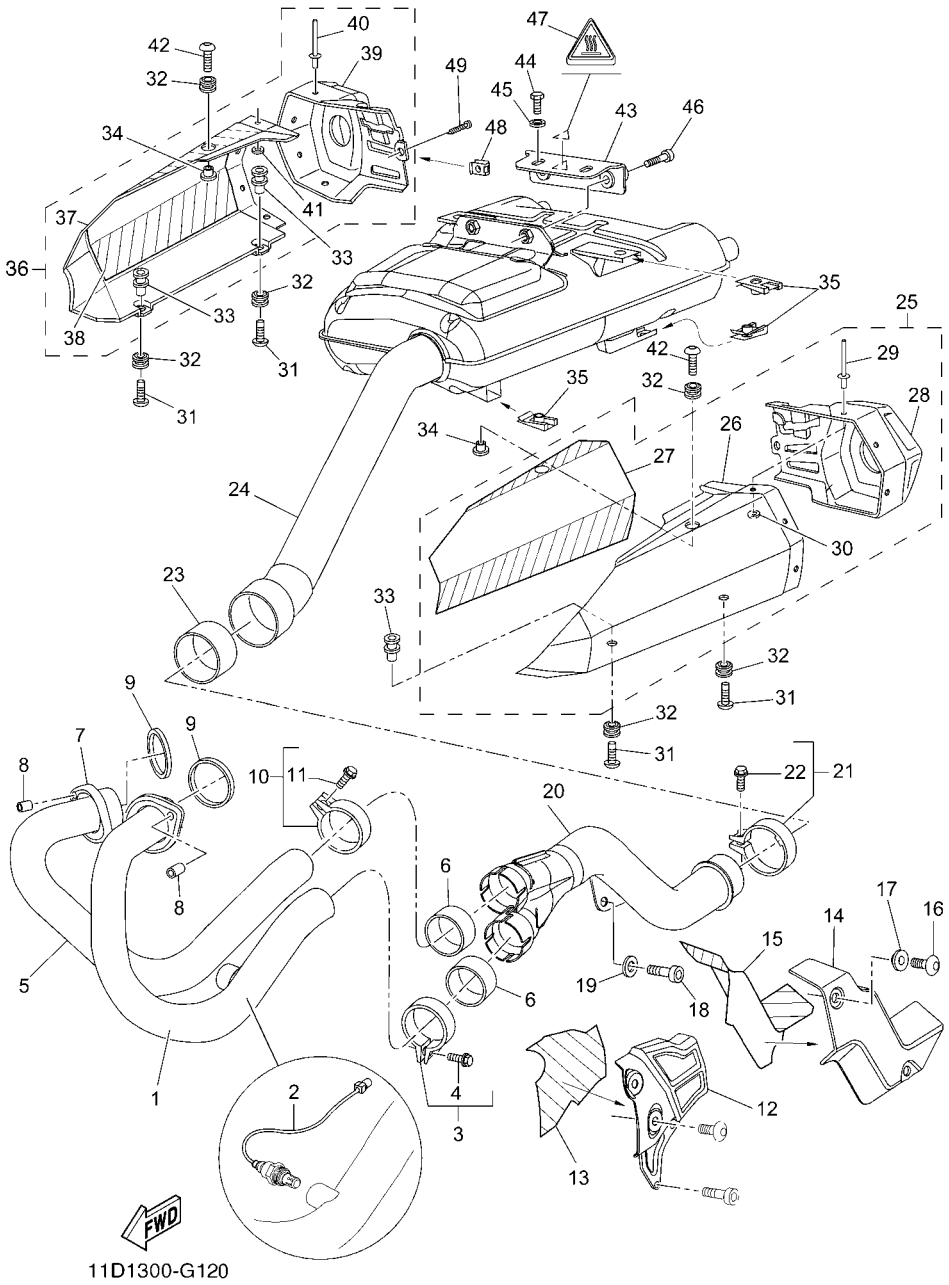


## FIG. 12 EXHAUST


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 11D–E4787–00 | .CAP, SILENCER | 1 | 1 | 1 | | | |
| 29 | 90267–40X01 | .RIVET, BLIND | 4 | 4 | 4 | | | |
| 30 | 9290L–04600 | .WASHER | 4 | 4 | 4 | | | |
| 31 | 90111–06068 | BOLT,HEX. SOCKET BUTTON | 4 | 4 | 4 | | | |
| 32 | 90480–12581 | GROMMET | 6 | 6 | 6 | | | |
| 33 | 11D–E4648–00 | COLLAR 2 | 4 | 4 | 4 | | | |
| 34 | 90387–06X36 | COLLAR | 2 | 2 | 2 | | | |
| 35 | 2VW–F1736–00 | NUT,PLATE | 6 | 6 | 6 | | | |
| 36 | 11D–E4708–10 | PROTECTOR ASSY | 1 | 1 | 1 | | | |
| 37 | 11D–E4728–00 | .PROTECTOR, MUFFLER 2 | 1 | 1 | 1 | | | |
| 38 | 11D–E112B–00 | .INSULATOR 2 | 1 | 1 | 1 | | | |
| 39 | 11D–E4798–00 | .CAP, SILENCER 2 | 1 | 1 | 1 | | | |
| 40 | 90267–40X01 | .RIVET, BLIND | 4 | 4 | 4 | | | |
| 41 | 9290L–04600 | .WASHER | 4 | 4 | 4 | | | |
| 42 | 90111–06023 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 43 | 11D–E4770–00 | STAY, MUFFLER 1 | 1 | 1 | 1 | | | |
| 44 | 95817–08014 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 45 | 90201–086A3 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 46 | 91380–08030 | BOLT | 2 | 2 | 2 | | | |
| 47 | 5YK–F117B–A0 | LABEL, WARNING | 1 | 1 | 1 | | | |
| 48 | 5DS–F8317–00 | NUT, EMBLEM | 1 | 1 | 1 | | | |
| 49 | 90167–04X00 | SCREW, TAPPING | 1 | 1 | 1 | | | |

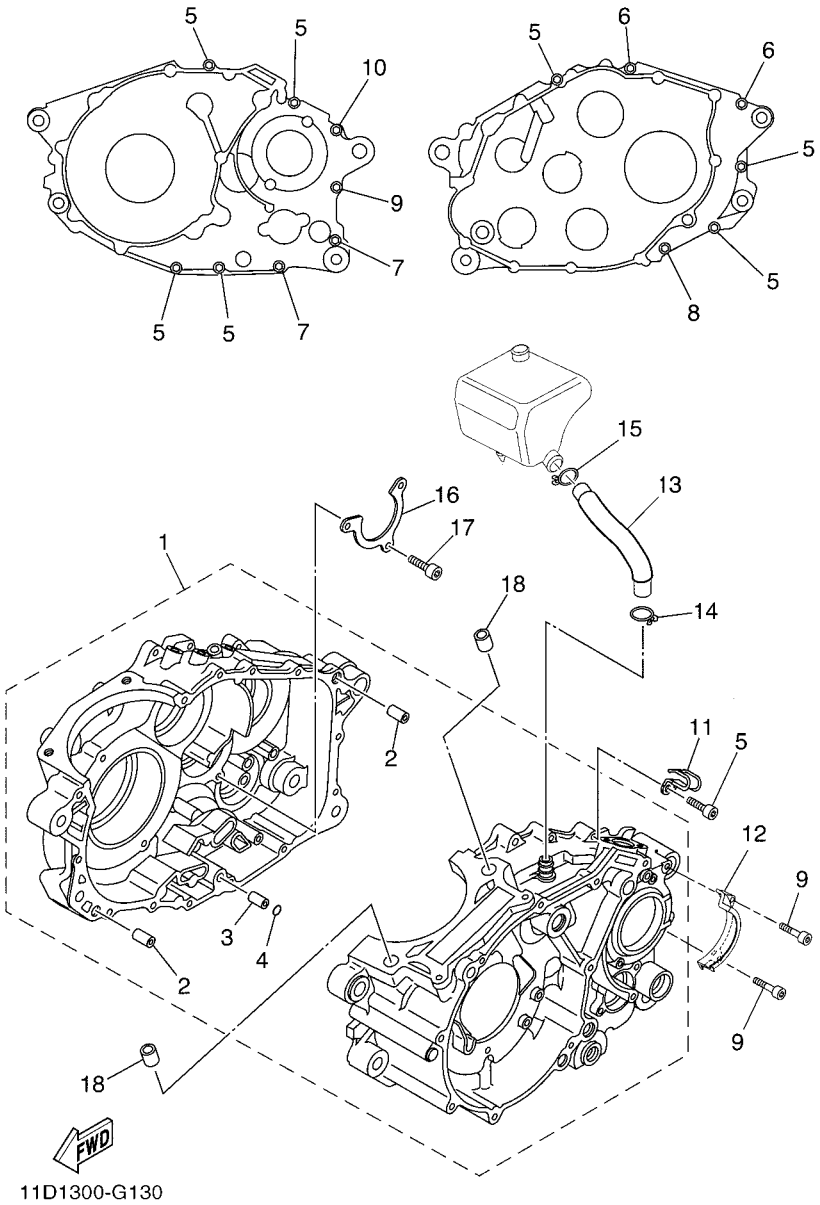

11D1300-G130

**FIG. 13 CRANKCASE**

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E5100–00 | CRANKCASE ASSY | 1 | 1 | 1 | | | |
| 2 | 99530–12016 | .PIN, DOWEL | 2 | 2 | 2 | | | |
| 3 | 91808–16X00 | .PIN, DOWEL | 1 | 1 | 1 | | | |
| 4 | 93210–07X01 | .O-RING | 1 | 1 | 1 | | | |
| 5 | 91317–06030 | BOLT | 7 | 7 | 7 | | | |
| 6 | 91317–06045 | BOLT | 2 | 2 | 2 | | | |
| 7 | 91317–06055 | BOLT | 2 | 2 | 2 | | | |
| 8 | 91317–06060 | BOLT | 1 | 1 | 1 | | | |
| 9 | 91317–06080 | BOLT | 1 | 1 | 1 | | | |
| 10 | 91317–06090 | BOLT | 1 | 1 | 1 | | | |
| 11 | 90462–07X00 | CLAMP | 1 | 1 | 1 | | | |
| 12 | 11D–E5492–01 | COVER | 1 | 1 | 1 | | | |
| 13 | 5YK–E1166–00 | PIPE, BREATHER 1 | 1 | 1 | 1 | | | |
| 14 | 90467–14015 | CLIP | 1 | 1 | 1 | | | |
| 15 | 90467–14015 | CLIP | 1 | 1 | 1 | | | |
| 16 | 5VK–E5383–00 | PLATE, BEARING COVER | 1 | 1 | 1 | | | |
| 17 | 91317–06016 | BOLT | 3 | 3 | 3 | | | |
| 18 | 99530–14016 | PIN, DOWEL | 2 | 2 | 2 | | | |

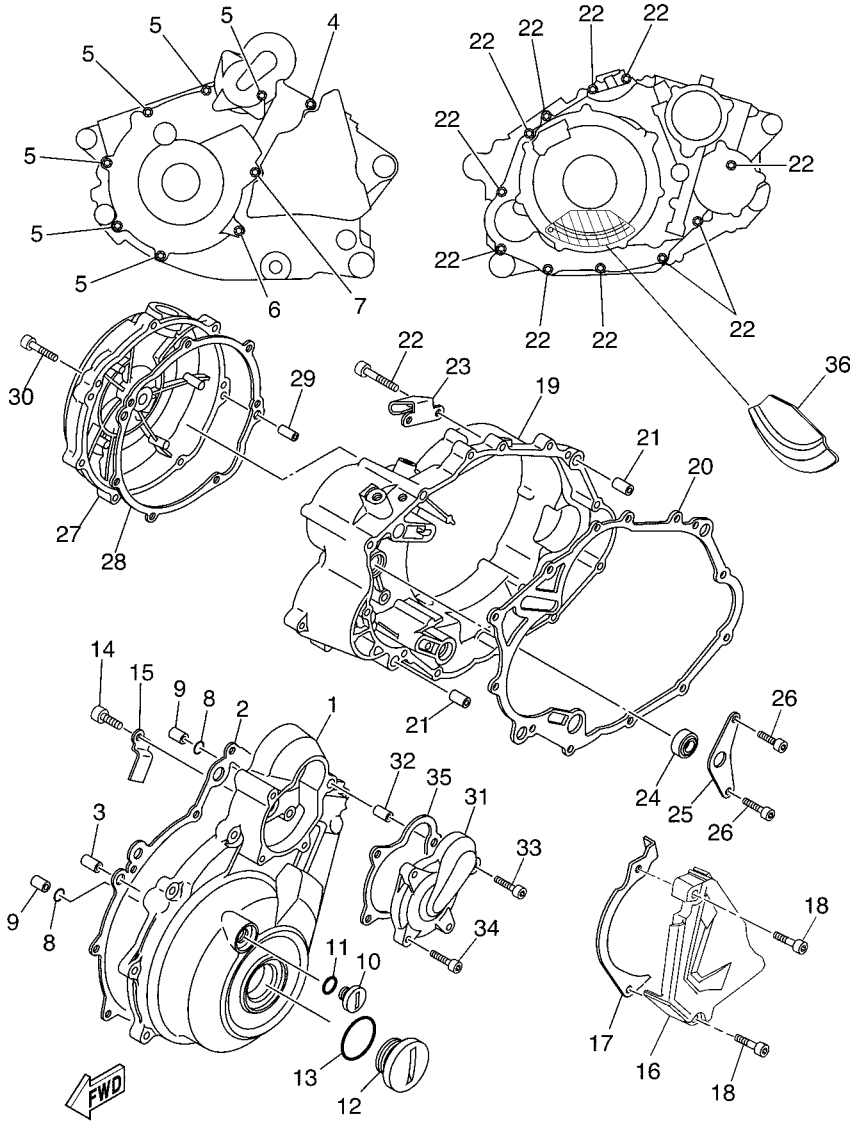


## FIG. 14 CRANKCASE COVER 1

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–WE541–00 | CRANKCASE COVER ASSY 1 | 1 | 1 | 1 | | | |
| 2 | 5VK–E5451–10 | GASKET, CRANKCASE COVER 1 | 1 | 1 | 1 | | | |
| 3 | 99530–12016 | PIN, DOWEL | 2 | 2 | 2 | | | |
| 4 | 91317–06035 | BOLT | 1 | 1 | 1 | | | |
| 5 | 91317–06025 | BOLT | 6 | 6 | 6 | | | |
| 6 | 91317–06050 | BOLT | 1 | 1 | 1 | | | |
| 7 | 91317–06050 | BOLT | 1 | 1 | 1 | | | |
| 8 | 93210–13X00 | O-RING | 2 | 2 | 2 | | | |
| 9 | 99530–12016 | PIN, DOWEL | 2 | 2 | 2 | | | |
| 10 | 90340–14X00 | PLUG, STRAIGHT SCREW | 1 | 1 | 1 | | | |
| 11 | 93210–14X00 | O-RING | 1 | 1 | 1 | | | |
| 12 | 90340–36X00 | PLUG, STRAIGHT SCREW | 1 | 1 | 1 | | | |
| 13 | 93210–35X00 | O-RING | 1 | 1 | 1 | | | |
| 14 | 91317–06012 | BOLT | 1 | 1 | 1 | | | |
| 15 | 90462–16X00 | CLAMP | 1 | 1 | 1 | | | |
| 16 | 11D–E5421–00 | COVER, CRANKCASE 2 | 1 | 1 | 1 | | | |
| 17 | 5VK–E7466–00 | GUIDE, CHAIN | 1 | 1 | 1 | | | |
| 18 | 91317–06045 | BOLT | 2 | 2 | 2 | | | |
| 19 | 5VK–E5431–00 | COVER, CRANKCASE 3 | 1 | 1 | 1 | | | |
| 20 | 5VK–E5462–10 | GASKET, CRANKCASE COVER 3 | 1 | 1 | 1 | | | |
| 21 | 99530–12016 | PIN, DOWEL | 2 | 2 | 2 | | | |
| 22 | 91317–06030 | BOLT | 11 | 11 | 11 | | | |
| 23 | 5VK–E5441–01 | HOLDER, CLUTCH CABLE | 1 | 1 | 1 | | | |
| 24 | 93101–14164 | OIL SEAL | 1 | 1 | 1 | | | |
| 25 | 5VK–E5118–00 | HOLDER | 1 | 1 | 1 | | | |
| 26 | 91317–06012 | BOLT | 2 | 2 | 2 | | | |
| 27 | 5VK–E5416–00 | COVER, OIL PUMP | 1 | 1 | 1 | | | |


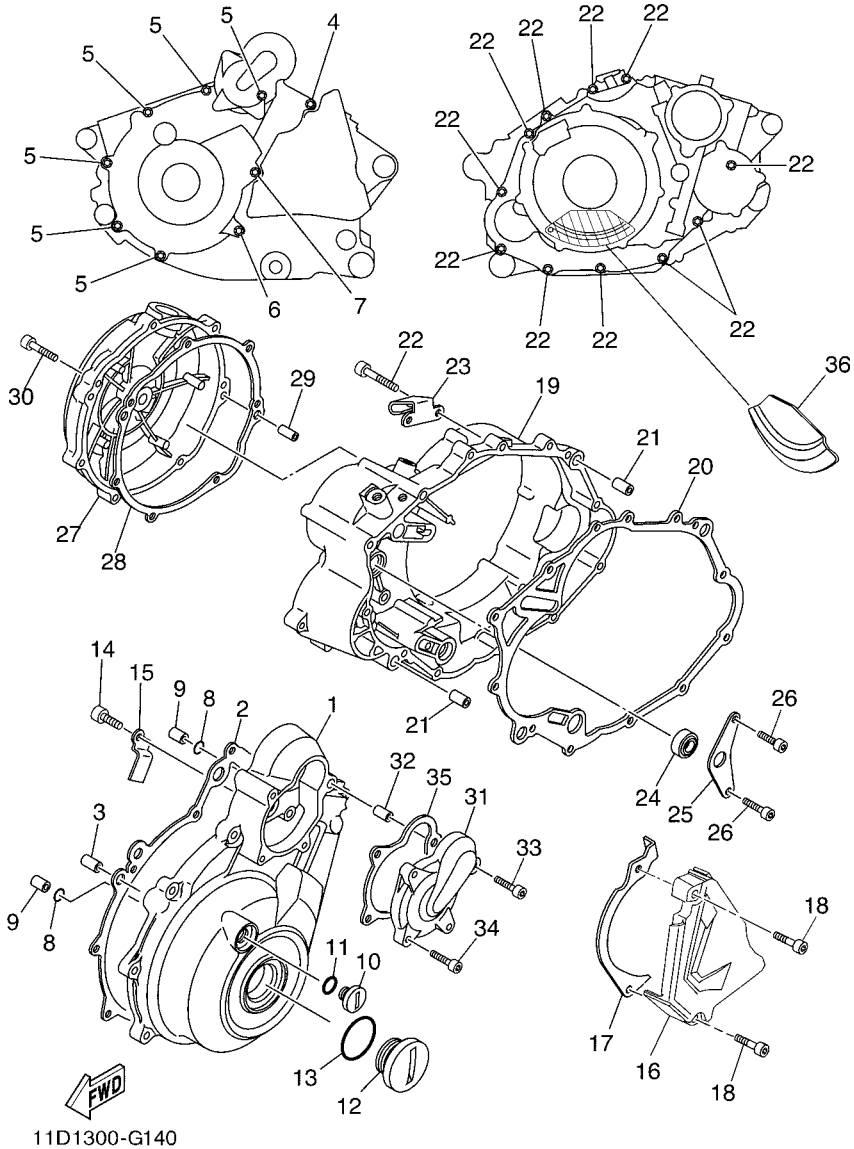



**FIG. 14 CRANKCASE COVER 1**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VK–E5453–10 | GASKET | 1 | 1 | 1 | | | |
| 29 | 91808–16X00 | PIN, DOWEL | 2 | 2 | 2 | | | |
| 30 | 90105–06X20 | BOLT, FLANGE | 7 | 7 | 7 | | | |
| 31 | 5VK–WE544–00 | GENERATOR COVER ASSY | 1 | 1 | 1 | | | |
| 32 | 91808–16X00 | PIN, DOWEL | 1 | 1 | 1 | | | |
| 33 | 91317–06035 | BOLT | 1 | 1 | 1 | | | |
| 34 | 91317–06025 | BOLT | 3 | 3 | 3 | | | |
| 35 | 5VK–15455–00 | GASKET 1 | 1 | 1 | 1 | | | |
| 36 | 11D–E5491–00 | PROTECTOR | 1 | 1 | 1 | | | |

## FIG. 15 STARTER

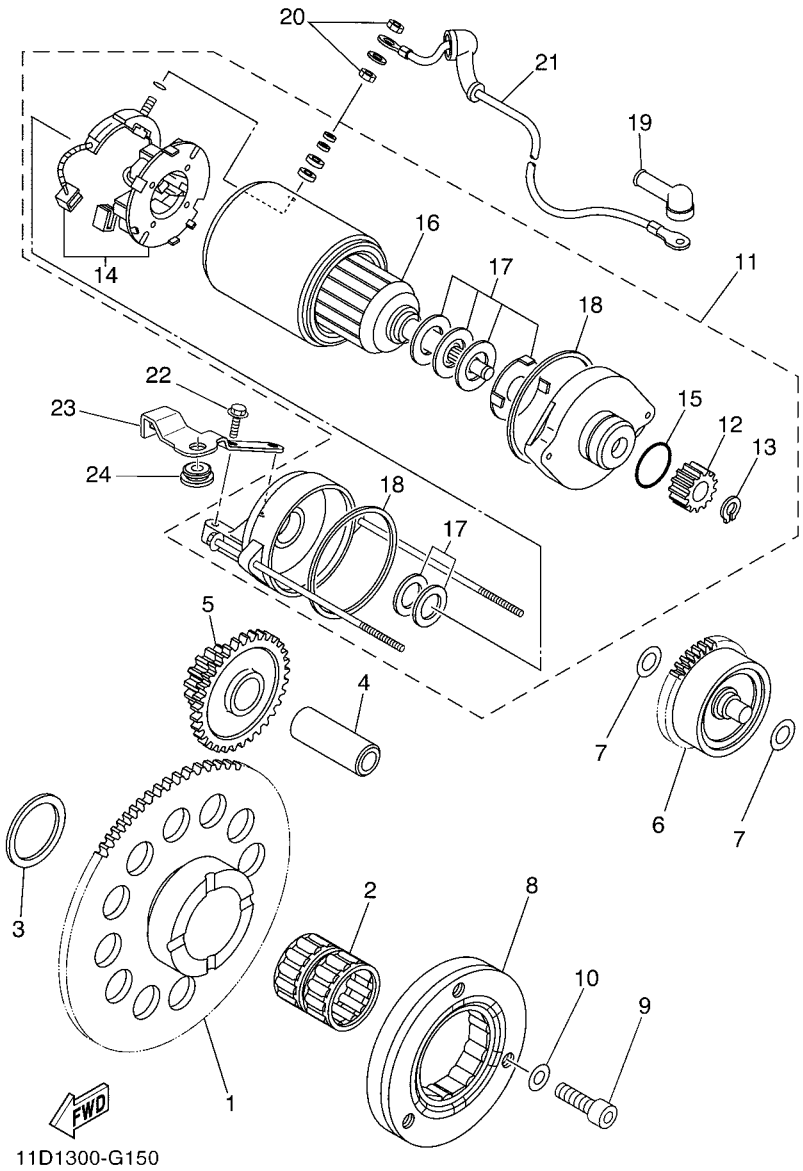

11D1300-G150


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 3YF–15515–00 | GEAR 3 | 1 | 1 | 1 | | | |
| 2 | 93310–530C7 | BEARING | 1 | 1 | 1 | | | |
| 3 | 90201–30X01 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 4 | 5VK–E5522–00 | SHAFT 2 | 1 | 1 | 1 | | | |
| 5 | 5VK–E5517–00 | GEAR, IDLER 2 | 1 | 1 | 1 | | | |
| 6 | 5VK–E5560–00 | DAMPER ASSY | 1 | 1 | 1 | | | |
| 7 | 90201–10X18 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 8 | 5VK–15590–00 | STARTER ONE-WAY ASSY | 1 | 1 | 1 | | | |
| 9 | 91317–08025 | BOLT | 3 | 3 | 3 | | | |
| 10 | 90201–08X18 | WASHER, PLATE | 3 | 3 | 3 | | | |
| 11 | 3SX–H1890–00 | MOTOR ASSY | 1 | 1 | 1 | | | |
| 12 | 5VK–E5511–00 | .GEAR, STARTING MOTOR | 1 | 1 | 1 | | | |
| 13 | 93440–11024 | .CIRCLIP | 1 | 1 | 1 | | | |
| 14 | 5VK–H1801–00 | .BRUSH SET | 1 | 1 | 1 | | | |
| 15 | 5VK–H1847–00 | .O-RING | 1 | 1 | 1 | | | |
| 16 | 5VK–H1850–00 | .ARMATURE ASSY | 1 | 1 | 1 | | | |
| 17 | 5VK–H1809–00 | .WASHER KIT | 1 | 1 | 1 | | | |
| 18 | 5VK–H1844–00 | .GASKET | 2 | 2 | 2 | | | |
| 19 | 5VK–H1871–00 | CAP | 1 | 1 | 1 | | | |
| 20 | 5VK–H182A–00 | NUT | 2 | 2 | 2 | | | |
| 21 | 5VK–H1815–00 | CORD, STARTER MOTOR | 1 | 1 | 1 | | | |
| 22 | 95817–06035 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 23 | 11D–E5199–00 | BRACKET | 1 | 1 | 1 | | | |
| 24 | 90480–13398 | GROMMET | 1 | 1 | 1 | | | |

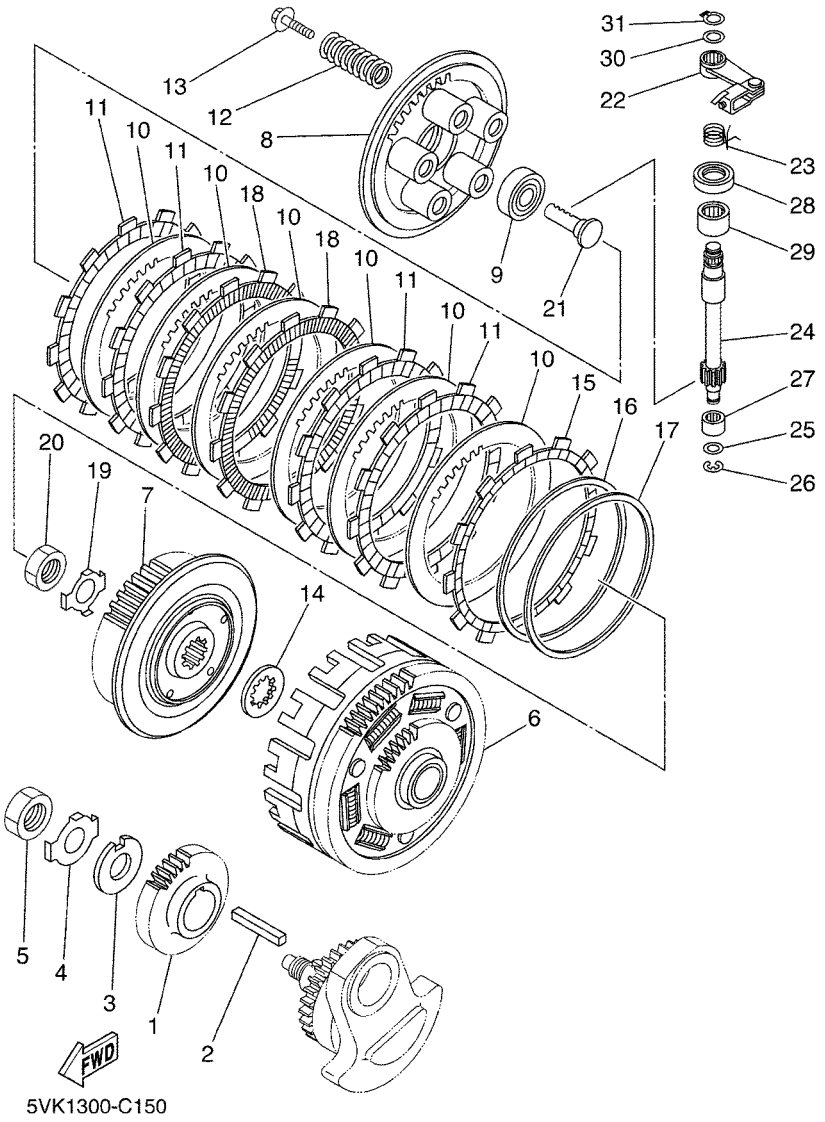

5VK1300-C150

## FIG. 16 CLUTCH


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E6111–00 | GEAR, PRIMARY DRIVE | 1 | 1 | 1 | | | |
| 2 | 90282–07001 | KEY, STRAIGHT | 1 | 1 | 1 | | | |
| 3 | 90209–20012 | WASHER | 1 | 1 | 1 | | | |
| 4 | 90215–20X00 | WASHER, LOCK | 1 | 1 | 1 | | | |
| 5 | 90170–20274 | NUT | 1 | 1 | 1 | | | |
| 6 | 5VK–E6150–00 | PRIMARY DRIVEN GEAR COMP. | 1 | 1 | 1 | | | |
| 7 | 5VK–16371–00 | BOSS, CLUTCH | 1 | 1 | 1 | | | |
| 8 | 5VK–16351–00 | PLATE, PRESSURE 1 | 1 | 1 | 1 | | | |
| 9 | 93306–00304 | BEARING | 1 | 1 | 1 | | | |
| 10 | 4X7–16325–00 | PLATE, CLUTCH 2 | 6 | 6 | 6 | | | |
| 11 | 22U–16321–00 | PLATE, FRICTION | 4 | 4 | 4 | | | |
| 12 | 90501–260A1 | SPRING, COMPRESSION | 5 | 5 | 5 | | | |
| 13 | 90119–06105 | BOLT, WITH WASHER | 5 | 5 | 5 | | | |
| 14 | 2JN–16154–00 | PLATE, THRUST 1 | 1 | 1 | 1 | | | |
| 15 | 5VK–16331–00 | PLATE, FRICTION 2 | 1 | 1 | 1 | | | |
| 16 | 5JG–16383–00 | SPRING, CLUTCH BOSS | 1 | 1 | 1 | | | |
| 17 | 5JG–16384–00 | PLATE, SEAT | 1 | 1 | 1 | | | |
| 18 | 5TA–16321–00 | PLATE, FRICTION | 2 | 2 | 2 | | | |
| 19 | 90215–20X01 | WASHER, LOCK | 1 | 1 | 1 | | | |
| 20 | 90170–20327 | NUT | 1 | 1 | 1 | | | |
| 21 | 4XV–16356–01 | ROD, PUSH 1 | 1 | 1 | 1 | | | |
| 22 | 5VK–16340–00 | PUSH LEVER ASSY | 1 | 1 | 1 | | | |
| 23 | 90508–16X00 | SPRING, TORSION | 1 | 1 | 1 | | | |
| 24 | 5VK–E6382–00 | AXLE, PUSH LEVER | 1 | 1 | 1 | | | |
| 25 | 90201–08X19 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 26 | 99001–07600 | CIRCLIP | 1 | 1 | 1 | | | |
| 27 | 93317–11020 | BEARING | 1 | 1 | 1 | | | |

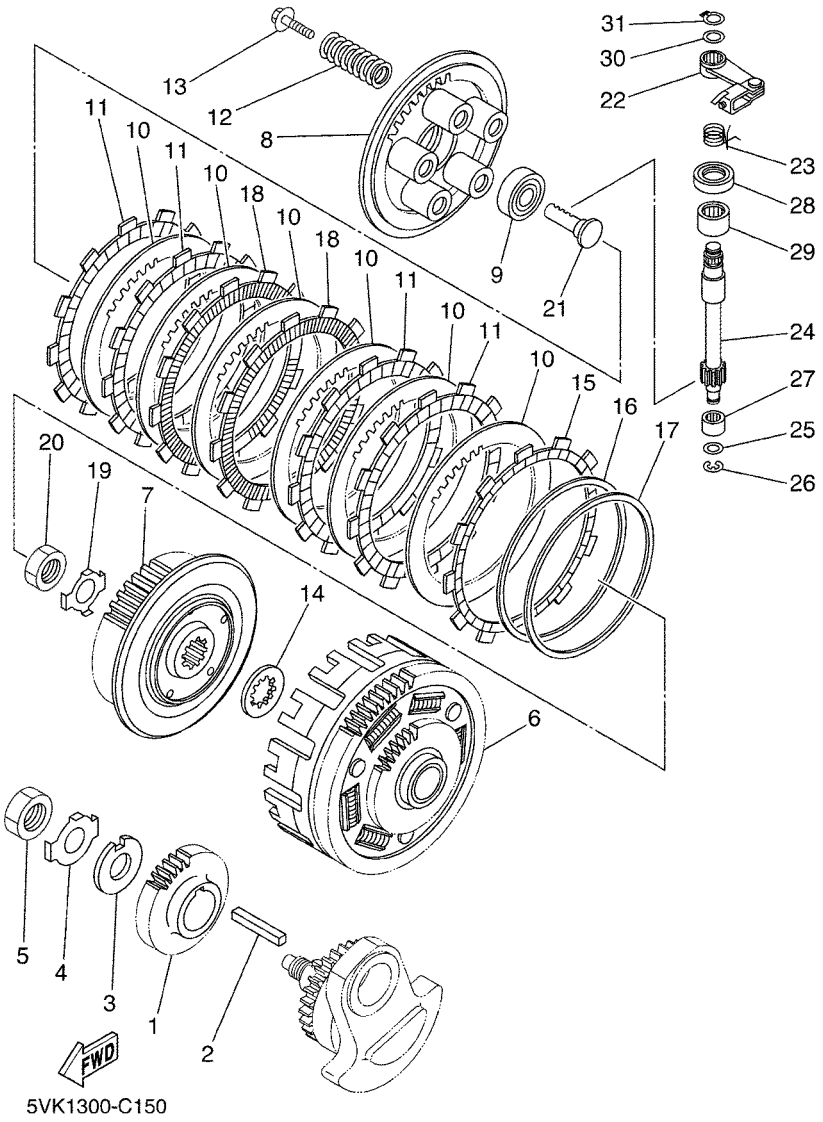

5VK1300-C150

## FIG. 16 CLUTCH


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 93102–15212 | OIL SEAL | 1 | 1 | 1 | | | |
| 29 | 93315–31502 | BEARING | 1 | 1 | 1 | | | |
| 30 | 90201–10X17 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 31 | 99009–10400 | CIRCLIP | 1 | 1 | 1 | | | |

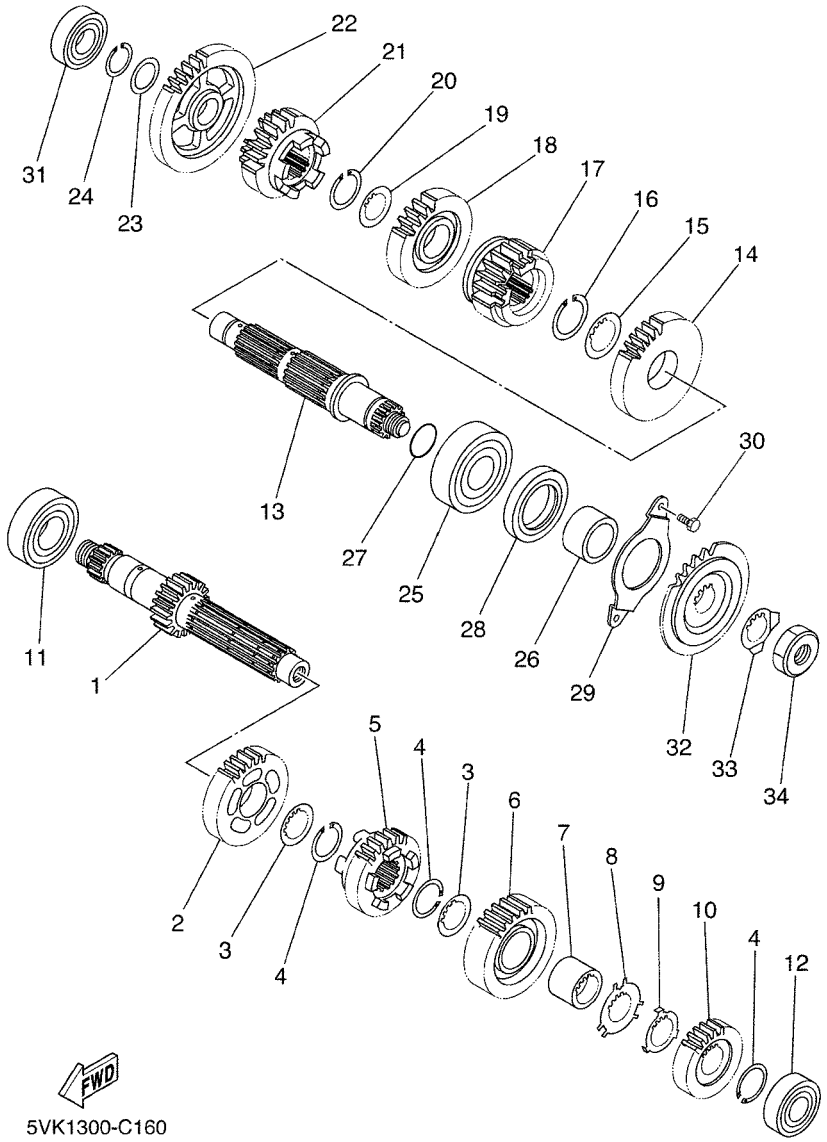

5VK1300-C160

## FIG. 17 TRANSMISSION


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–E7401–00 | MAIN AXLE ASSY(12T) | 1 | 1 | 1 | | | |
| 2 | 5VK–E7141–00 | GEAR, 4TH PINION (22T) | 1 | 1 | 1 | | | |
| | 5VK–E7141–10 | GEAR, 4TH PINION (22T) | 1 | 1 | 1 | | | AP |
| 3 | 90209–21X00 | WASHER | 2 | 2 | 2 | | | |
| 4 | 93440–25084 | CIRCLIP | 3 | 3 | 3 | | | |
| 5 | 5VK–E7131–00 | GEAR, 3RD PINION (20T) | 1 | 1 | 1 | | | |
| 6 | 5VK–E7151–00 | GEAR, 5TH PINION (26T) | 1 | 1 | 1 | | | |
| | 5VK–E7151–10 | GEAR, 5TH PINION (26T) | 1 | 1 | 1 | | | AP |
| 7 | 90387–21002 | COLLAR | 1 | 1 | 1 | | | |
| 8 | 90209–22X00 | WASHER | 1 | 1 | 1 | | | |
| 9 | 90209–21351 | WASHER | 1 | 1 | 1 | | | |
| 10 | 5VK–E7121–00 | GEAR, 2ND PINION (16T) | 1 | 1 | 1 | | | |
| 11 | 93306–205XA | BEARING | 1 | 1 | 1 | | | |
| 12 | 93306–004XL | BEARING | 1 | 1 | 1 | | | |
| 13 | 5VK–E7402–00 | DRIVE AXLE ASSY | 1 | 1 | 1 | | | |
| 14 | 5VK–E7221–00 | GEAR, 2ND WHEEL (26T) | 1 | 1 | 1 | | | |
| 15 | 90209–26348 | WASHER | 1 | 1 | 1 | | | |
| 16 | 93440–28062 | CIRCLIP | 1 | 1 | 1 | | | |
| 17 | 5VK–E7251–00 | GEAR, 5TH WHEEL (20T) | 1 | 1 | 1 | | | |
| 18 | 5VK–E7231–00 | GEAR, 3RD WHEEL (23T) | 1 | 1 | 1 | | | |
| 19 | 90209–21X00 | WASHER | 1 | 1 | 1 | | | |
| 20 | 93440–25084 | CIRCLIP | 1 | 1 | 1 | | | |
| 21 | 5VK–E7241–00 | GEAR, 4TH WHEEL (20T) | 1 | 1 | 1 | | | |
| 22 | 5VK–E7211–00 | GEAR, 1ST WHEEL (30T) | 1 | 1 | 1 | | | |
| 23 | 90201–208G4 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 24 | 93410–20825 | CIRCLIP | 1 | 1 | 1 | | | |
| 25 | 93306–305X4 | BEARING | 1 | 1 | 1 | | | |

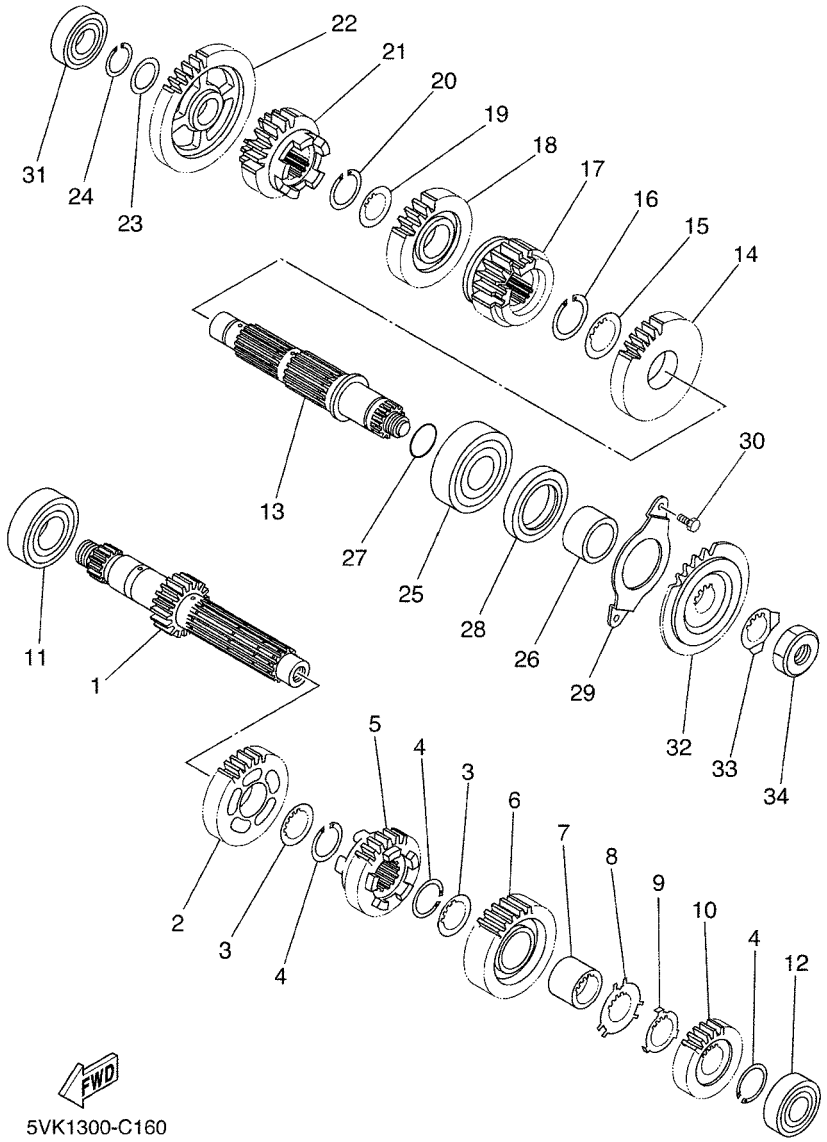


## FIG. 17 TRANSMISSION

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 26 | 90387–25802 | COLLAR | 1 | 1 | 1 | | | |
| 27 | 93210–22X00 | O-RING | 1 | 1 | 1 | | | |
| 28 | 93102–35368 | OIL SEAL | 1 | 1 | 1 | | | |
| 29 | 5VK–E7471–00 | PLATE, COVER | 1 | 1 | 1 | | | |
| 30 | 90101–06X26 | BOLT | 2 | 2 | 2 | | | |
| 31 | 93306–004XM | BEARING | 1 | 1 | 1 | | | |
| 32 | 5VK–E7460–10 | SPROCKET, DRIVE | 1 | 1 | 1 | | | |
| 33 | 90215–21X00 | WASHER, LOCK | 1 | 1 | 1 | | | |
| 34 | 90179–18003 | NUT | 1 | 1 | 1 | | | |


## FIG. 18 SHIFT CAM & FORK

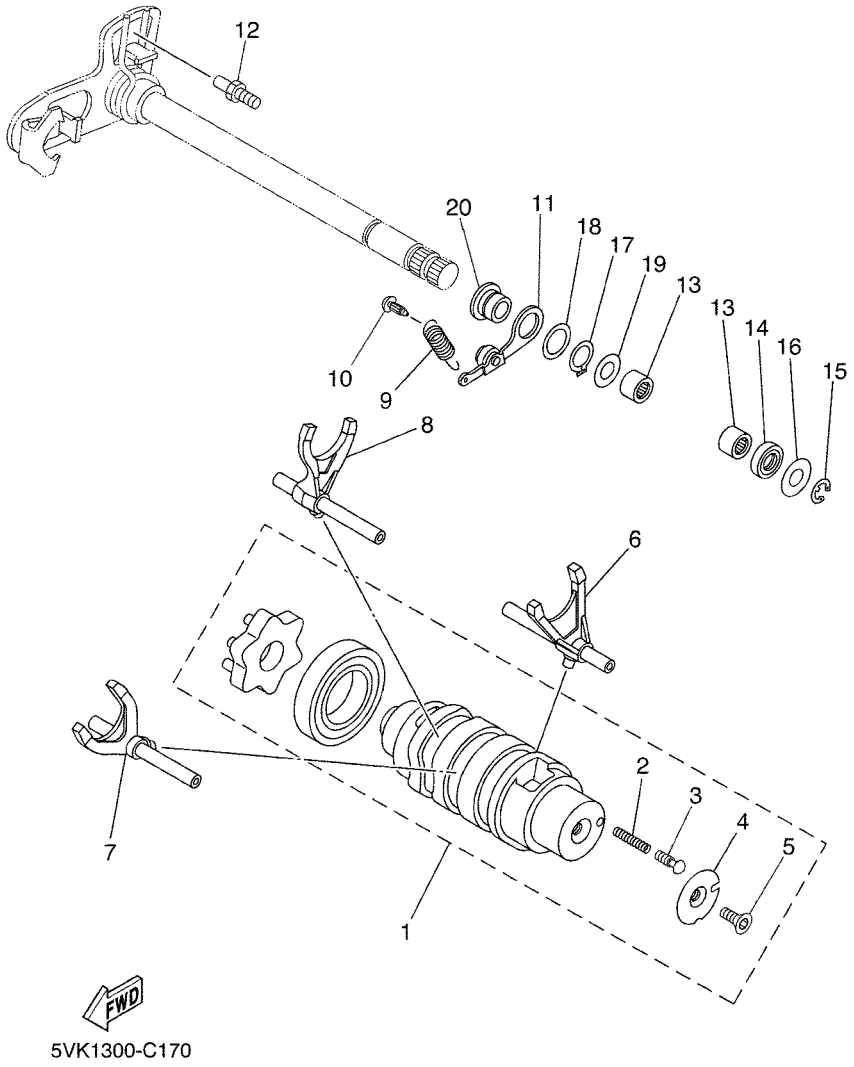

5VK1300-C170

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–18540–00 | SHIFT CAM ASSY | 1 | 1 | 1 | | | |
| 2 | 90501–06022 | .SPRING, COMPRESSION | 1 | 1 | 1 | | | |
| 3 | 4UN–18542–00 | .POINT, NEUTRAL | 1 | 1 | 1 | | | |
| 4 | 4UN–18566–00 | .PLATE, SIDE 2 | 1 | 1 | 1 | | | |
| 5 | 90149–05321 | .SCREW | 1 | 1 | 1 | | | |
| 6 | 5VK–E8501–00 | FORK, SHIFT 1 | 1 | 1 | 1 | | | |
| 7 | 5VK–E8502–00 | FORK, SHIFT 2 | 1 | 1 | 1 | | | |
| 8 | 5VK–E8503–00 | FORK, SHIFT 3 | 1 | 1 | 1 | | | |
| 9 | 5VK–E8144–00 | HANGER, SPRING | 1 | 1 | 1 | | | |
| 10 | 132–16346–00 | HOOK, SPRING | 1 | 1 | 1 | | | |
| 11 | 5JW–18140–00 | STOPPER LEVER ASSY | 1 | 1 | 1 | | | |
| 12 | 5VK–18127–00 | STOPPER, SCREW | 1 | 1 | 1 | | | |
| 13 | 93315–11206 | BEARING | 2 | 2 | 2 | | | |
| 14 | 93102–12106 | OIL SEAL (SD 12-22-5 HS) | 1 | 1 | 1 | | | |
| 15 | 99001–10600 | CIRCLIP | 1 | 1 | 1 | | | |
| 16 | 90201–12X06 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 17 | 93410–17X00 | CIRCLIP | 1 | 1 | 1 | | | |
| 18 | 90201–17X01 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 19 | 90201–12X05 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 20 | 5VK–E8699–00 | BOSS 1 | 1 | 1 | 1 | | | |


## FIG. 19 SHIFT SHAFT

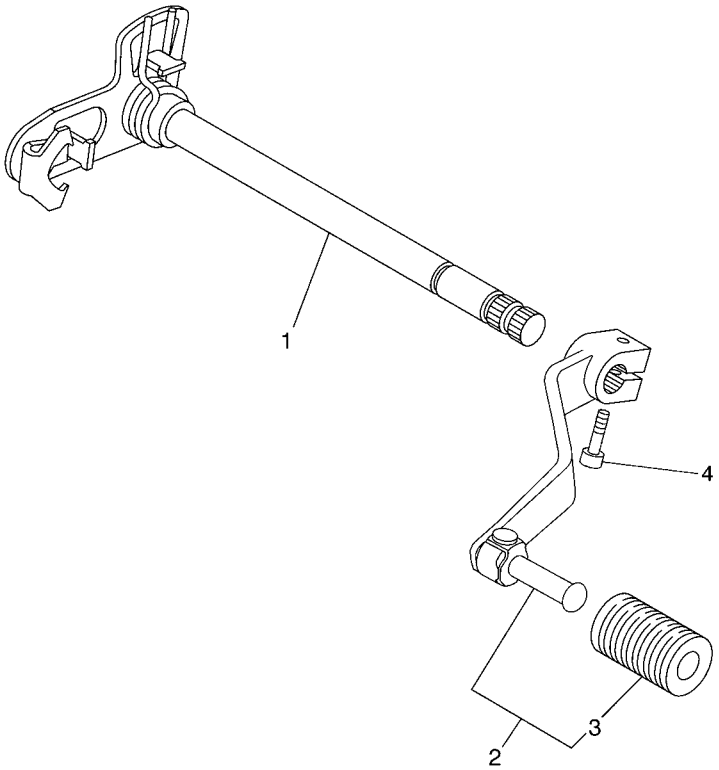


11D1300-G190

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–18101–00 | SHIFT SHAFT ASSY | 1 | 1 | 1 | | | |
| 2 | 11D–E8110–00 | SHIFT PEDAL ASSY | 1 | 1 | 1 | | | |
| 3 | 5VK–E8113–00 | .COVER, SHIFT PEDAL | 1 | 1 | 1 | | | |
| 4 | 91317–06020 | BOLT | 1 | 1 | 1 | | | |

## FIG. 20 FRAME

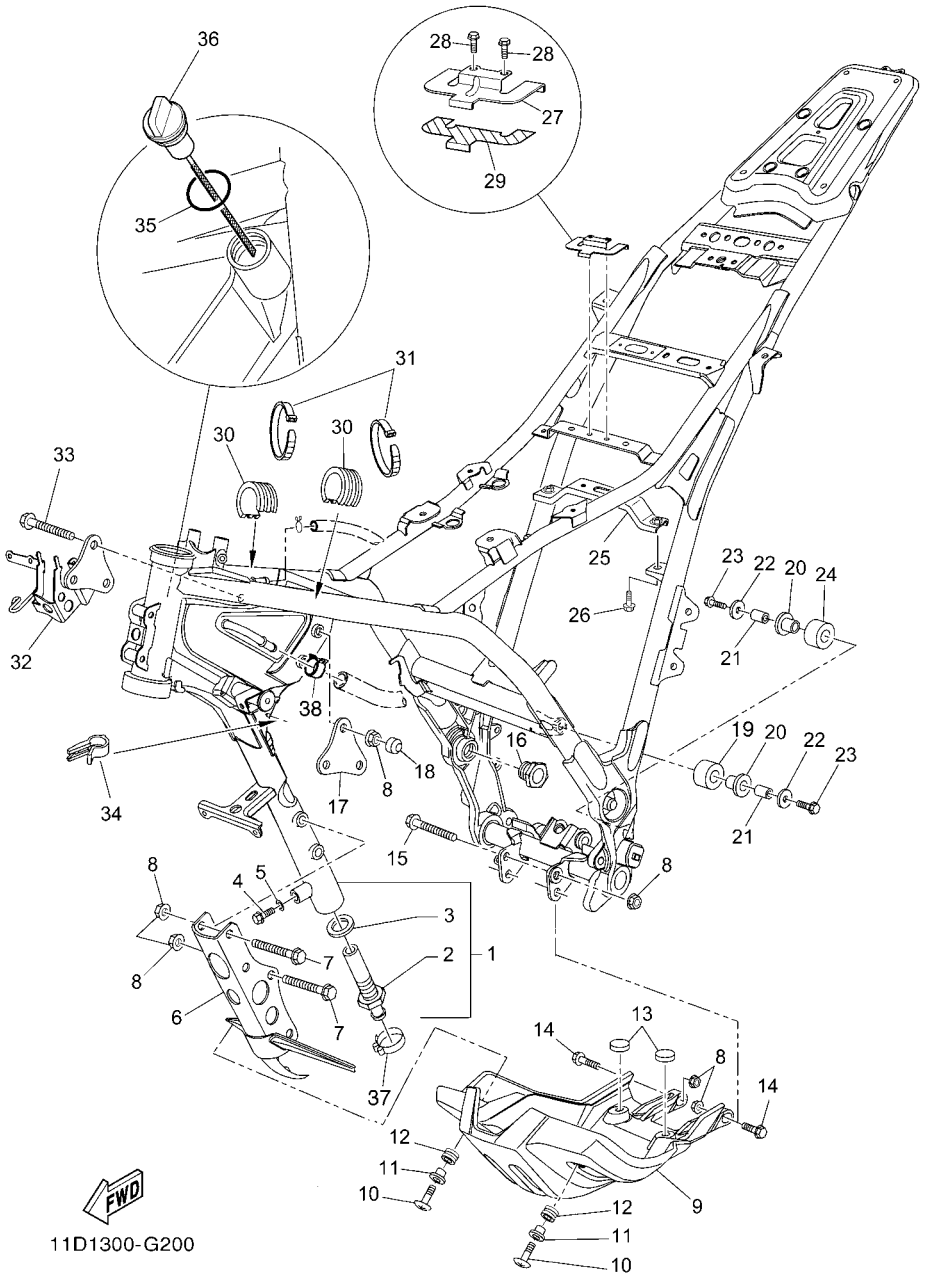


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F1110–00–98 | FRAME COMP. | 1 | 1 | 1 | | | LGB FOR SMX,BW... |
| 2 | 5VK–F1756–00 | .NET, FILTER | 1 | 1 | 1 | | | |
| 3 | 90430–22123 | .GASKET | 1 | 1 | 1 | | | |
| 4 | 95807–08012 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 5 | 90430–08119 | GASKET | 1 | 1 | 1 | | | |
| 6 | 11D–F1400–00 | ENGINE BRACKET COMP. | 1 | 1 | 1 | | | |
| 7 | 95817–10070 | BOLT, FLANGE | 4 | 4 | 4 | | | |
| 8 | 95607–10200 | NUT, U FLANGE | 10 | 10 | 10 | | | |
| 9 | 11D–F1471–00 | PROTECTOR, ENGINE | 1 | 1 | 1 | | | |
| 10 | 90154–06061 | SCREW, BINDING | 2 | 2 | 2 | | | |
| 11 | 90387–065J6 | COLLAR | 2 | 2 | 2 | | | |
| 12 | 90480–12072 | GROMMET | 2 | 2 | 2 | | | |
| 13 | 2J5–21732–00 | SEAL 1 | 2 | 2 | 2 | | | |
| 14 | 95817–10035 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 15 | 90105–10733 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 16 | 11D–F1494–00 | NUT | 1 | 1 | 1 | | | |
| 17 | 11D–F1315–00 | STAY, ENGINE 2 | 1 | 1 | 1 | | | |
| 18 | 5YK–F1399–00 | CAP | 3 | 3 | 3 | | | |
| 19 | 10V–22178–00 | TENSIONER | 1 | 1 | 1 | | | |
| 20 | 10V–22184–00 | BUSH | 2 | 2 | 2 | | | |
| 21 | 90387–08024 | COLLAR | 2 | 2 | 2 | | | |
| 22 | 90201–082H0 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 23 | 95827–08040 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 24 | 30X–22178–00 | TENSIONER | 1 | 1 | 1 | | | |
| 25 | 11D–F1344–00 | BRACKET, BATTERY BOX | 1 | 1 | 1 | | | |
| 26 | 9581M–06012 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 27 | 11D–F118W–10 | STOPPER | 1 | 1 | 1 | | | |


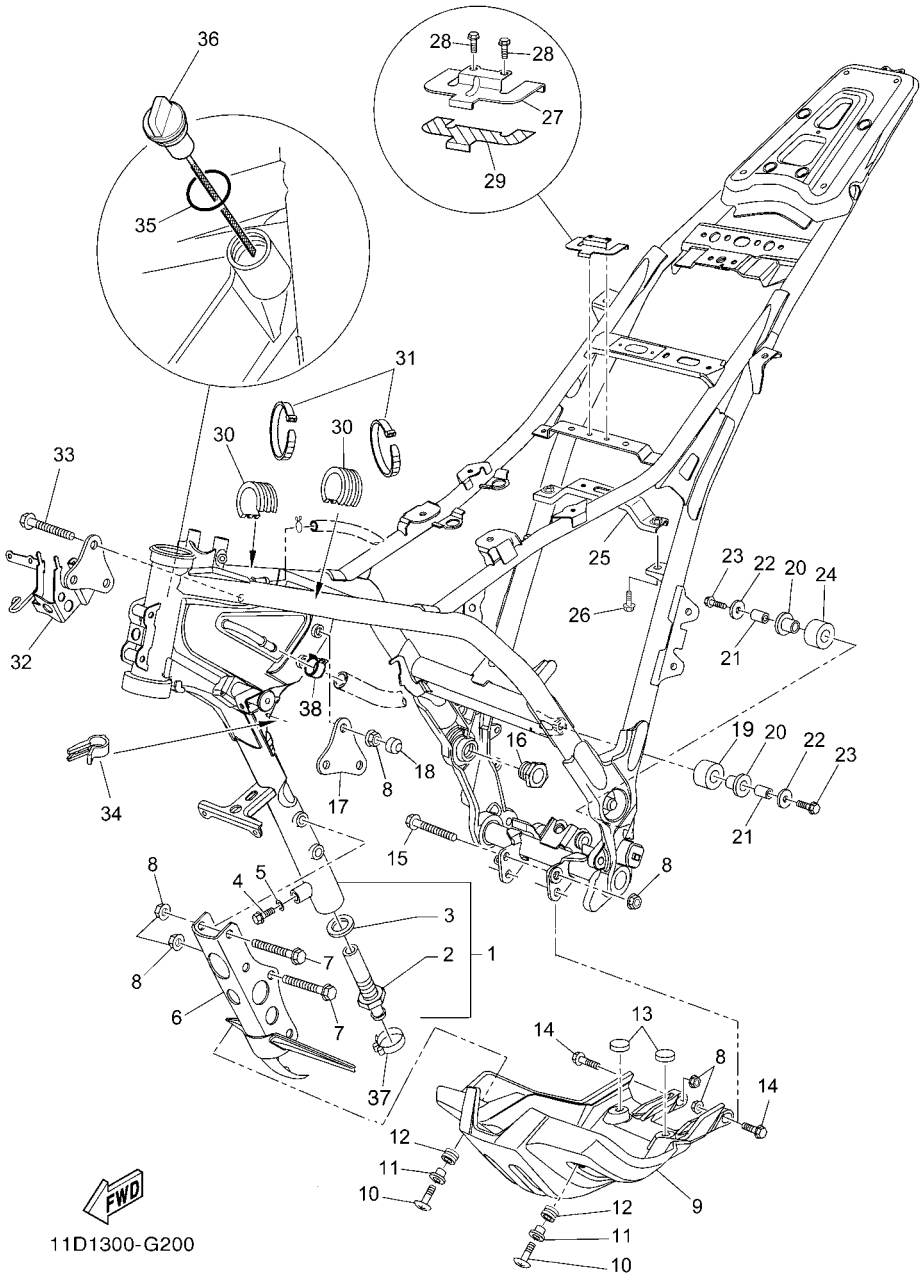




**FIG. 20 FRAME**

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 95807–06010 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 29 | 11D–F177M–00 | DAMPER, LOCATING 3 | 1 | 1 | 1 | | | |
| 30 | 11D–F4183–00 | DAMPER, LOCATING 3 | 2 | 2 | 2 | | | |
| 31 | 2AJ–F3192–50 | BAND | 4 | 4 | 4 | | | |
| 32 | 11D–F1410–00 | ENGINE BRACKET COMP. | 1 | 1 | 1 | | | |
| 33 | 90105–10212 | BOLT, FLANGE | 3 | 3 | 3 | | | |
| 34 | 90464–10X03 | CLAMP | 1 | 1 | 1 | | | |
| 35 | 93210–19123 | O-RING | 1 | 1 | 1 | | | |
| 36 | 11D–F1761–00 | GAUGE, LEVEL | 1 | 1 | 1 | | | |
| 37 | 90450–20X01 | HOSE CLAMP ASSY | 1 | 1 | 1 | | | |
| 38 | 90467–17800 | CLIP | 1 | 1 | 1 | | | |

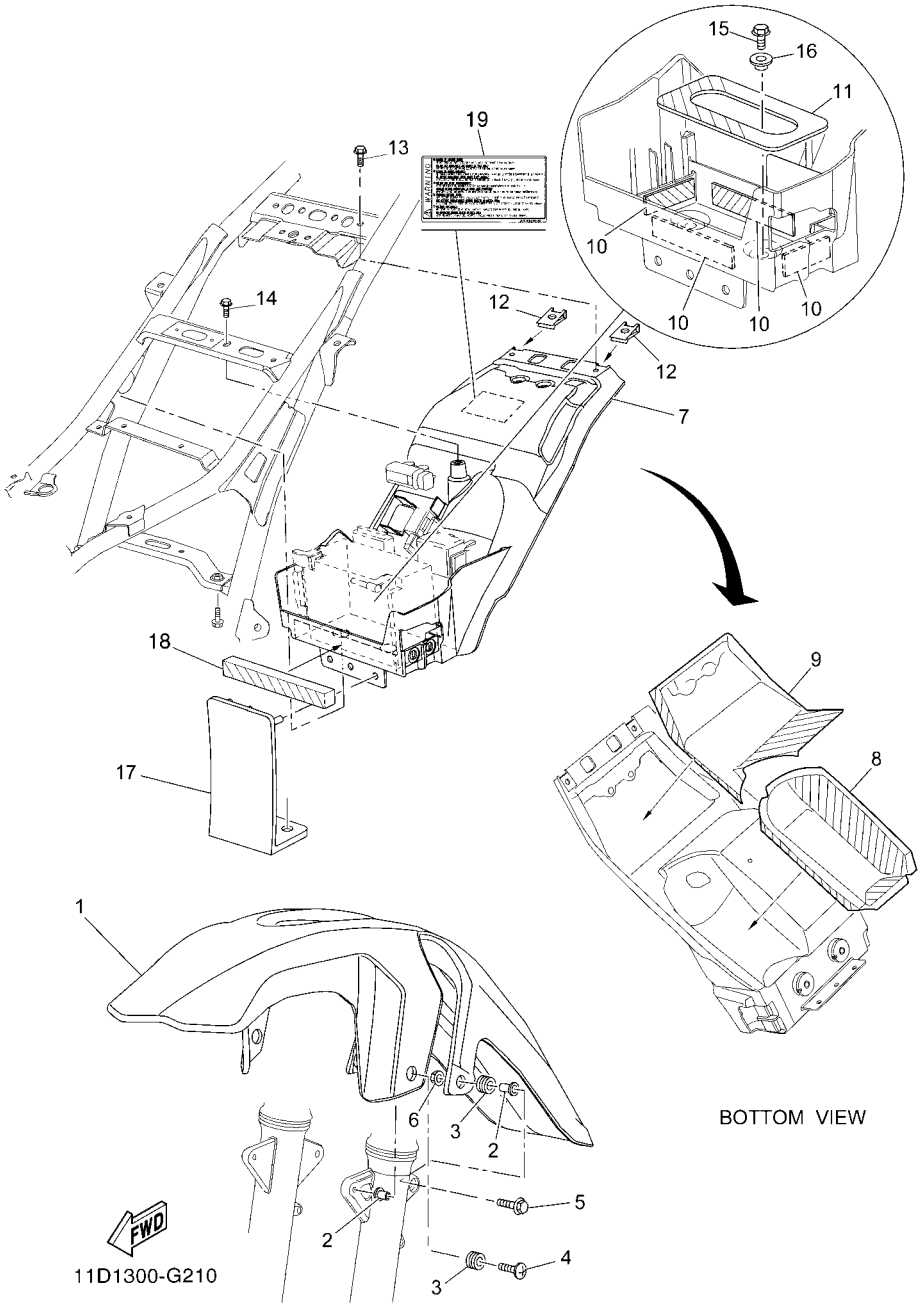


## FIG. 21 FENDER

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F1511–00–P0 | FENDER, FRONT | 1 | 1 | 1 | | | FOR SMX |
| | 11D–F1511–00–P1 | FENDER, FRONT | 1 | 1 | 1 | | | FOR BWC1 |
| | 11D–F1511–00–P2 | FENDER, FRONT | 1 | 1 | 1 | | | FOR YNS5 |
| 2 | 90387–065J6 | COLLAR | 4 | 4 | 4 | | | |
| 3 | 90480–12497 | GROMMET | 4 | 4 | 4 | | | |
| 4 | 90154–06061 | SCREW, BINDING | 2 | 2 | 2 | | | |
| 5 | 95024–06025 | BOLT, FLG.(SMALL HEAD) | 2 | 2 | 2 | | | |
| 6 | 90179–06403 | NUT | 2 | 2 | 2 | | | |
| 7 | 11D–F177G–00 | BOX, BATTERY | 1 | 1 | 1 | | | |
| 8 | 11D–F174A–01 | INSULATOR, SIDE COVER | 1 | 1 | 1 | | | |
| 9 | 11D–F174T–00 | INSULATOR, SIDE COVER 2 | 1 | 1 | 1 | | | |
| 10 | 11D–F1779–00 | DAMPER, LOCATING 2 | 4 | 4 | 4 | | | |
| 11 | 11D–F1778–00 | DAMPER, LOCATING 1 | 1 | 1 | 1 | | | |
| 12 | 2VW–F1736–00 | NUT,PLATE | 2 | 2 | 2 | | | |
| 13 | 95807–06016 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 14 | 95807–06008 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 15 | 95807–06016 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 16 | 90387–06202 | COLLAR | 2 | 2 | 2 | | | |
| 17 | 11D–F1629–00 | GUARD, MUD | 1 | 1 | 1 | | | |
| 18 | 11D–F177N–00 | DAMPER, LOCATING 4 | 1 | 1 | 1 | | | |
| 19 | 11D–F819R–10 | TAG, WARNING | 1 | 1 | 1 | | | |

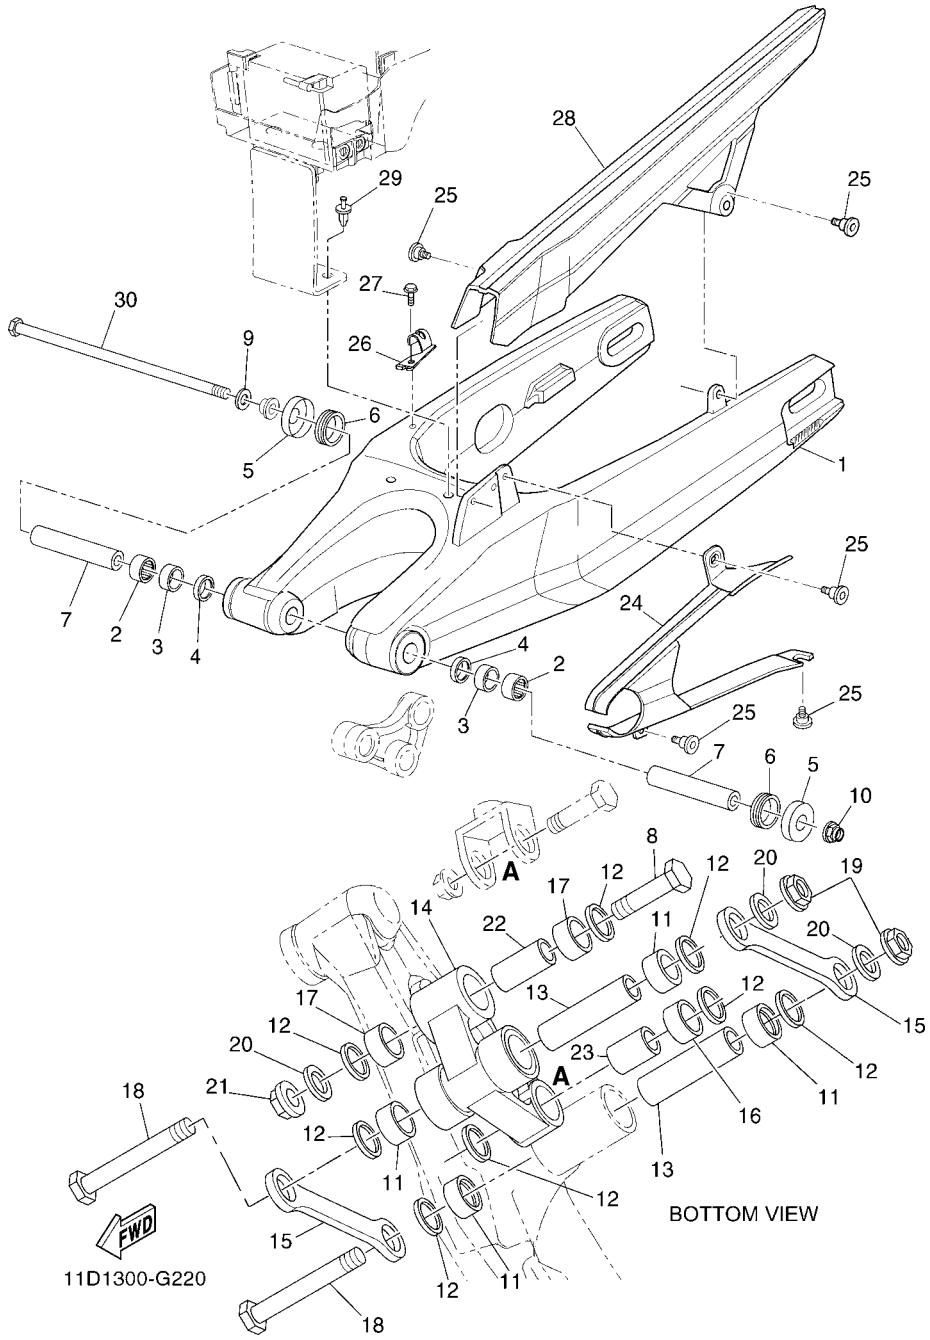


## FIG. 22 REAR ARM

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F2110–00 | REAR ARM COMP. | 1 | 1 | 1 | | | |
| 2 | 93315–22251 | BEARING | 2 | 2 | 2 | | | |
| 3 | 90380–22111 | BUSH, SOLID | 2 | 2 | 2 | | | |
| 4 | 93106–22019 | OIL SEAL (DC 22-28-8) | 2 | 2 | 2 | | | |
| 5 | 30X–2219X–00 | COVER | 2 | 2 | 2 | | | |
| 6 | 93108–35004 | OIL SEAL (35-41-8) | 2 | 2 | 2 | | | |
| 7 | 11D–F2123–00 | BUSH 1 | 2 | 2 | 2 | | | |
| 8 | 90101–12002 | BOLT | 1 | 1 | 1 | | | |
| 9 | 90201–16021 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 10 | 95604–16200 | NUT, U FLANGE | 1 | 1 | 1 | | | |
| 11 | 93317–21746 | BEARING | 4 | 4 | 4 | | | |
| 12 | 93109–17071 | OIL SEAL | 8 | 8 | 8 | | | |
| 13 | 90387–126Y1 | COLLAR | 2 | 2 | 2 | | | |
| 14 | 11D–F217A–00 | ARM, RELAY | 1 | 1 | 1 | | | |
| 15 | 5JN–F217M–00 | ARM 1 | 2 | 2 | 2 | | | |
| 16 | 93317–31771 | BEARING | 1 | 1 | 1 | | | |
| 17 | 93315–31758 | BEARING | 2 | 2 | 2 | | | |
| 18 | 90109–12X00 | BOLT | 2 | 2 | 2 | | | |
| 19 | 90185–12119 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |
| 20 | 90201–124G9 | WASHER, PLATE | 3 | 3 | 3 | | | |
| 21 | 95617–12100 | NUT, U | 1 | 1 | 1 | | | |
| 22 | 90387–124V0 | COLLAR | 1 | 1 | 1 | | | |
| 23 | 90387–127W0 | COLLAR | 1 | 1 | 1 | | | |
| 24 | 11D–F2151–00 | SEAL, GUARD | 1 | 1 | 1 | | | |
| 25 | 1C3–22969–10 | SCREW, 1 | 7 | 7 | 7 | | | |
| 26 | 11D–F1823–00 | CLAMP, HOSE | 1 | 1 | 1 | | | |
| 27 | 95027–06012 | BOLT, FLANGE | 1 | 1 | 1 | | | |


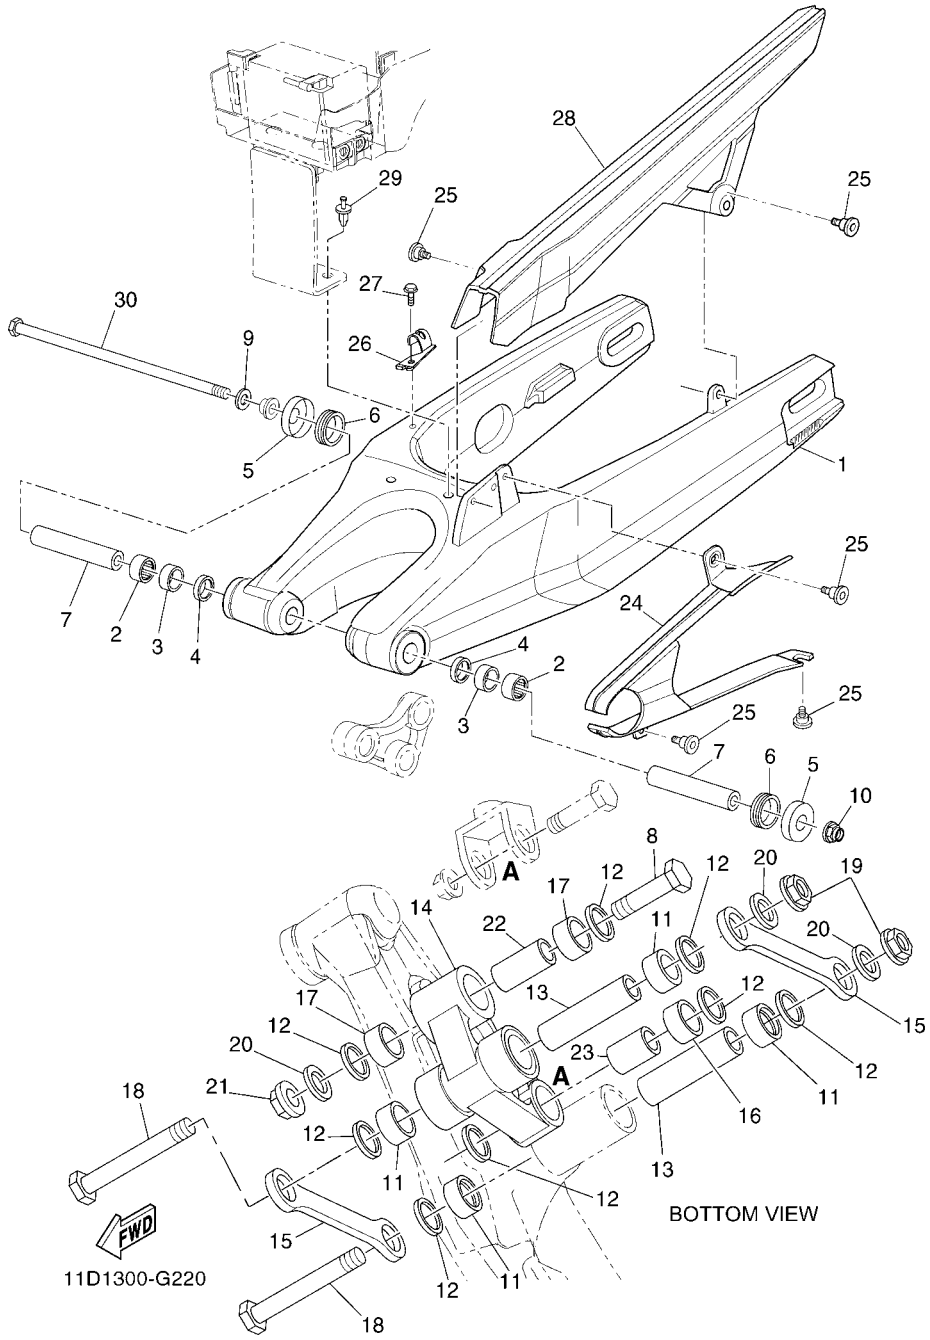



**FIG. 22 REAR ARM**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 11D–F2311–00 | CASE, CHAIN | 1 | 1 | 1 | | | |
| 29 | 90269–08066 | RIVET | 2 | 2 | 2 | | | |
| 30 | 4YR–22141–10 | SHAFT, PIVOT | 1 | 1 | 1 | | | |

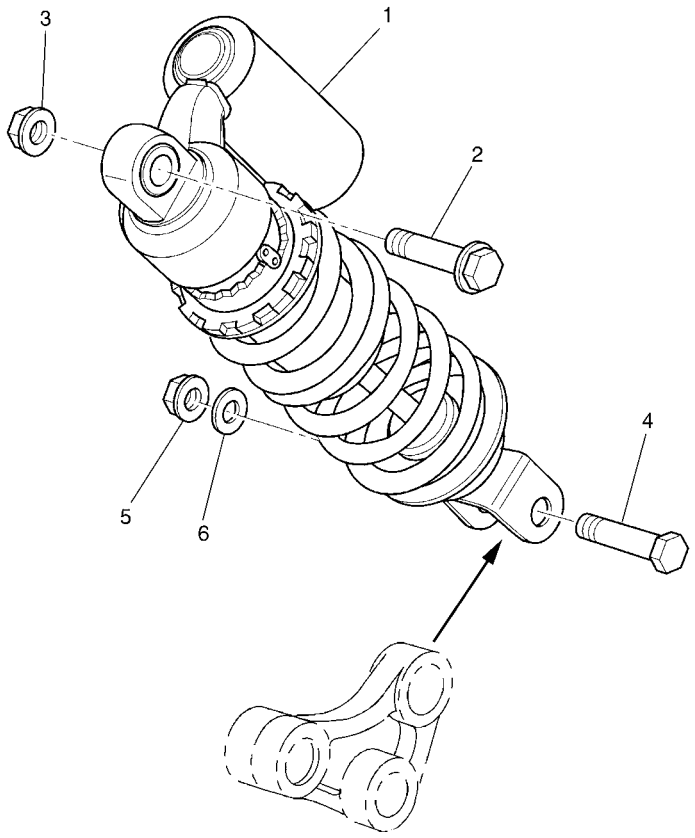


11D1300-G230

## FIG. 23 REAR SUSPENSION


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F2210–00 | SHOCK ABSORBER ASSY, REAR | 1 | 1 | 1 | | | |
| 2 | 90105–12028 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 3 | 95607–12200 | NUT, SELF-LOCKING | 1 | 1 | 1 | | | |
| 4 | 90101–10659 | BOLT | 1 | 1 | 1 | | | |
| 5 | 95607–10200 | NUT, U FLANGE | 1 | 1 | 1 | | | |
| 6 | 90201–101J1 | WASHER, PLATE | 1 | 1 | 1 | | | |

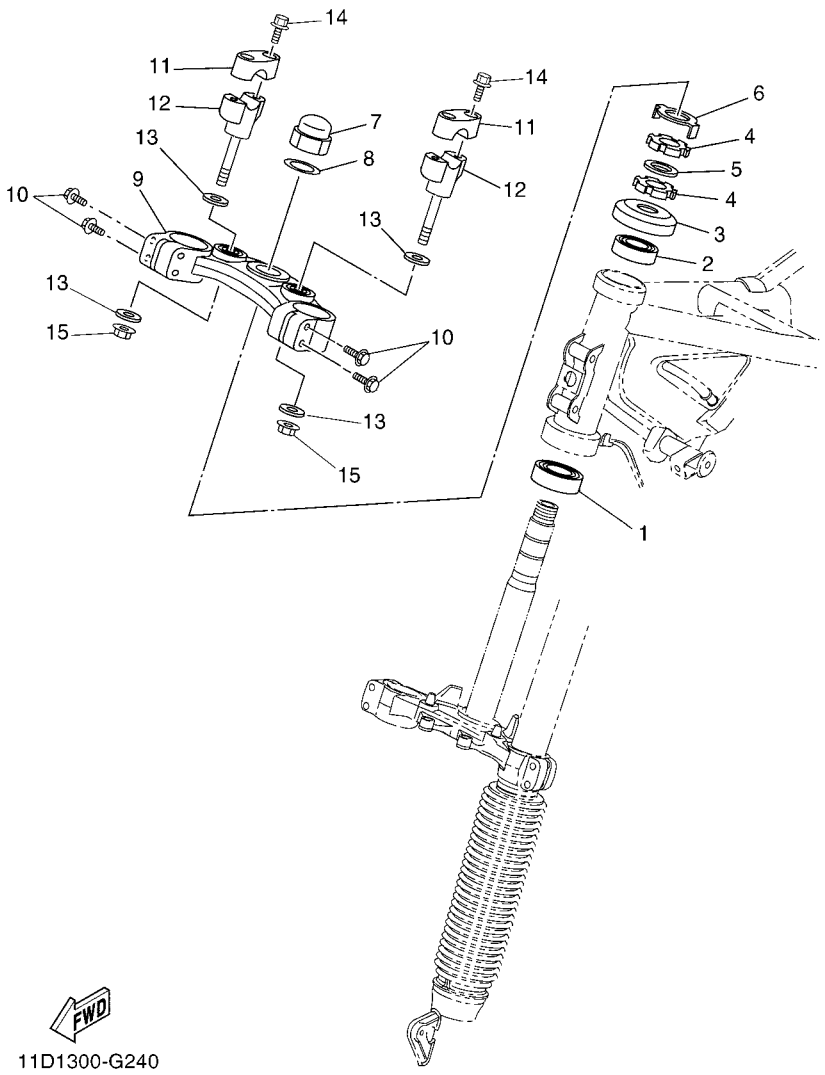

11D1300-G240


## FIG. 24 STEERING

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 93332–00008 | BEARING | 1 | 1 | 1 | | | |
| 2 | 93332–00001 | BEARING | 1 | 1 | 1 | | | |
| 3 | 1W1–23416–00 | COVER, BALL RACE 2 | 1 | 1 | 1 | | | |
| 4 | 90179–25615 | NUT | 2 | 2 | 2 | | | |
| 5 | 90202–26142 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 6 | 3YF–23418–00 | WASHER, SPECIAL | 1 | 1 | 1 | | | |
| 7 | 90176–22081 | NUT, CROWN | 1 | 1 | 1 | | | |
| 8 | 90201–220T0 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 9 | 11D–F3430–00 | HANDLE CROWN COMP. | 1 | 1 | 1 | | | |
| 10 | 90105–08154 | BOLT, FLANGE | 4 | 4 | 4 | | | |
| 11 | 1E6–23441–10–35 | HOLDER, HANDLE UPPER | 2 | 2 | 2 | | | SL FOR SMX,BWC... |
| 12 | 3AJ–23442–00–35 | HOLDER, HANDLE LOWER | 2 | 2 | 2 | | | SL FOR SMX,BWC... |
| 13 | 90201–10141 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 14 | 90105–08154 | BOLT, FLANGE | 4 | 4 | 4 | | | |
| 15 | 95607–10200 | NUT, U FLANGE | 2 | 2 | 2 | | | |

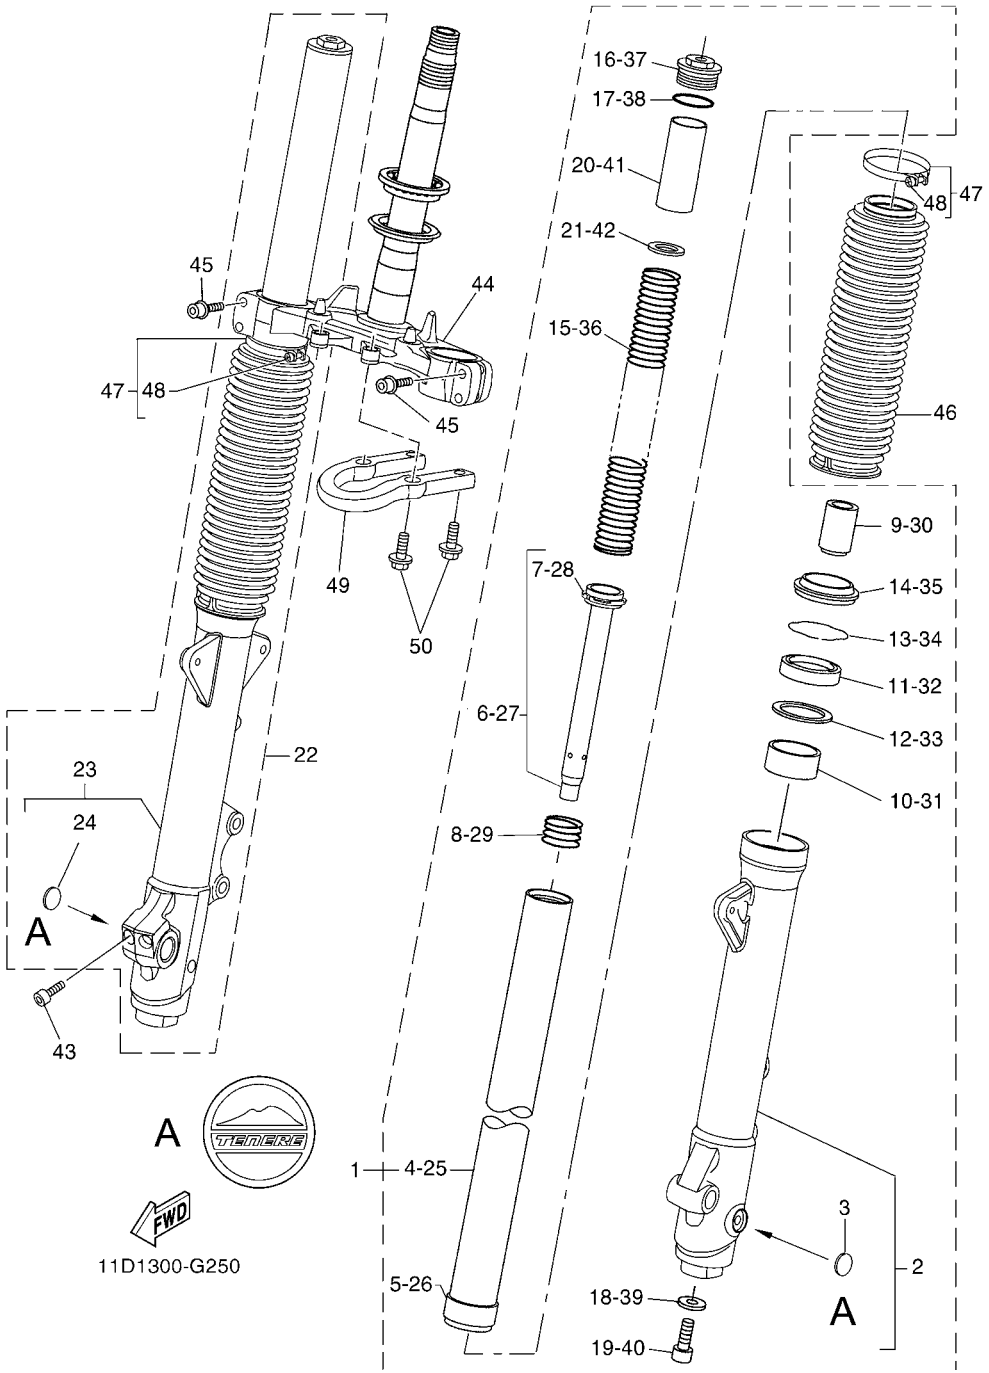



## FIG. 25 FRONT FORK

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F3102–00 | FRONT FORK ASSY (L.H) | 1 | 1 | 1 | | | |
| 2 | 11D–F3126–00 | .TUBE, OUTER (LEFT) | 1 | 1 | 1 | | | |
| 3 | 11D–F3108–00 | ..EMBLEM | 1 | 1 | 1 | | | |
| 4 | 11D–F3110–00 | .INNER TUBE COMP.1 | 1 | 1 | 1 | | | |
| 5 | 3XJ–23171–L0 | .PISTON, FRONT FORK | 1 | 1 | 1 | | | |
| 6 | 11D–F3170–00 | .CYLINDER COMP., FRONT FORK | 1 | 1 | 1 | | | |
| 7 | 5VK–F3157–00 | ..RING, PISTON | 1 | 1 | 1 | | | |
| 8 | 5VK–F3151–00 | .SPRING, REBOUND | 1 | 1 | 1 | | | |
| 9 | 5VK–F3173–00 | .SPINDLE, TAPER | 1 | 1 | 1 | | | (PAIOLI) |
| 10 | 3XJ–23125–L0 | .METAL, SLIDE 1 | 1 | 1 | 1 | | | |
| 11 | 4DA–23145–L0 | .OIL SEAL | 1 | 1 | 1 | | | |
| 12 | 11D–F3146–00 | .WASHER, OIL SEAL | 1 | 1 | 1 | | | |
| 13 | 5VK–F3153–00 | .RING, SNAP | 1 | 1 | 1 | | | (PAIOLI) |
| 14 | 4DA–23144–L0 | .SEAL, DUST | 1 | 1 | 1 | | | |
| 15 | 11D–F3141–00 | .SPRING, FRONT FORK | 1 | 1 | 1 | | | |
| 16 | 11D–F3111–00 | .BOLT, CAP | 1 | 1 | 1 | | | |
| 17 | 4V4–23188–L0 | .O-RING | 1 | 1 | 1 | | | |
| 18 | 5JH–F3158–00 | .GASKET | 1 | 1 | 1 | | | (PAIOLI) |
| 19 | 5VK–F3181–00 | .BOLT, HEXAGON SOCKET HEAD | 1 | 1 | 1 | | | (PAIOLI) |
| 20 | 11D–F3118–00 | .SPACER | 1 | 1 | 1 | | | |
| 21 | 5VK–F3149–00 | .WASHER, SPRING UPPER | 1 | 1 | 1 | | | (PAIOLI) |
| 22 | 11D–F3103–00 | FRONT FORK ASSY (R.H) | 1 | 1 | 1 | | | |
| 23 | 11D–F3136–00 | .TUBE, OUTER (RIGHT) | 1 | 1 | 1 | | | |
| 24 | 11D–F3108–00 | ..EMBLEM | 1 | 1 | 1 | | | |
| 25 | 11D–F3110–00 | .INNER TUBE COMP.1 | 1 | 1 | 1 | | | |
| 26 | 3XJ–23171–L0 | .PISTON, FRONT FORK | 1 | 1 | 1 | | | |
| 27 | 11D–F3170–00 | .CYLINDER COMP., FRONT FORK | 1 | 1 | 1 | | | |

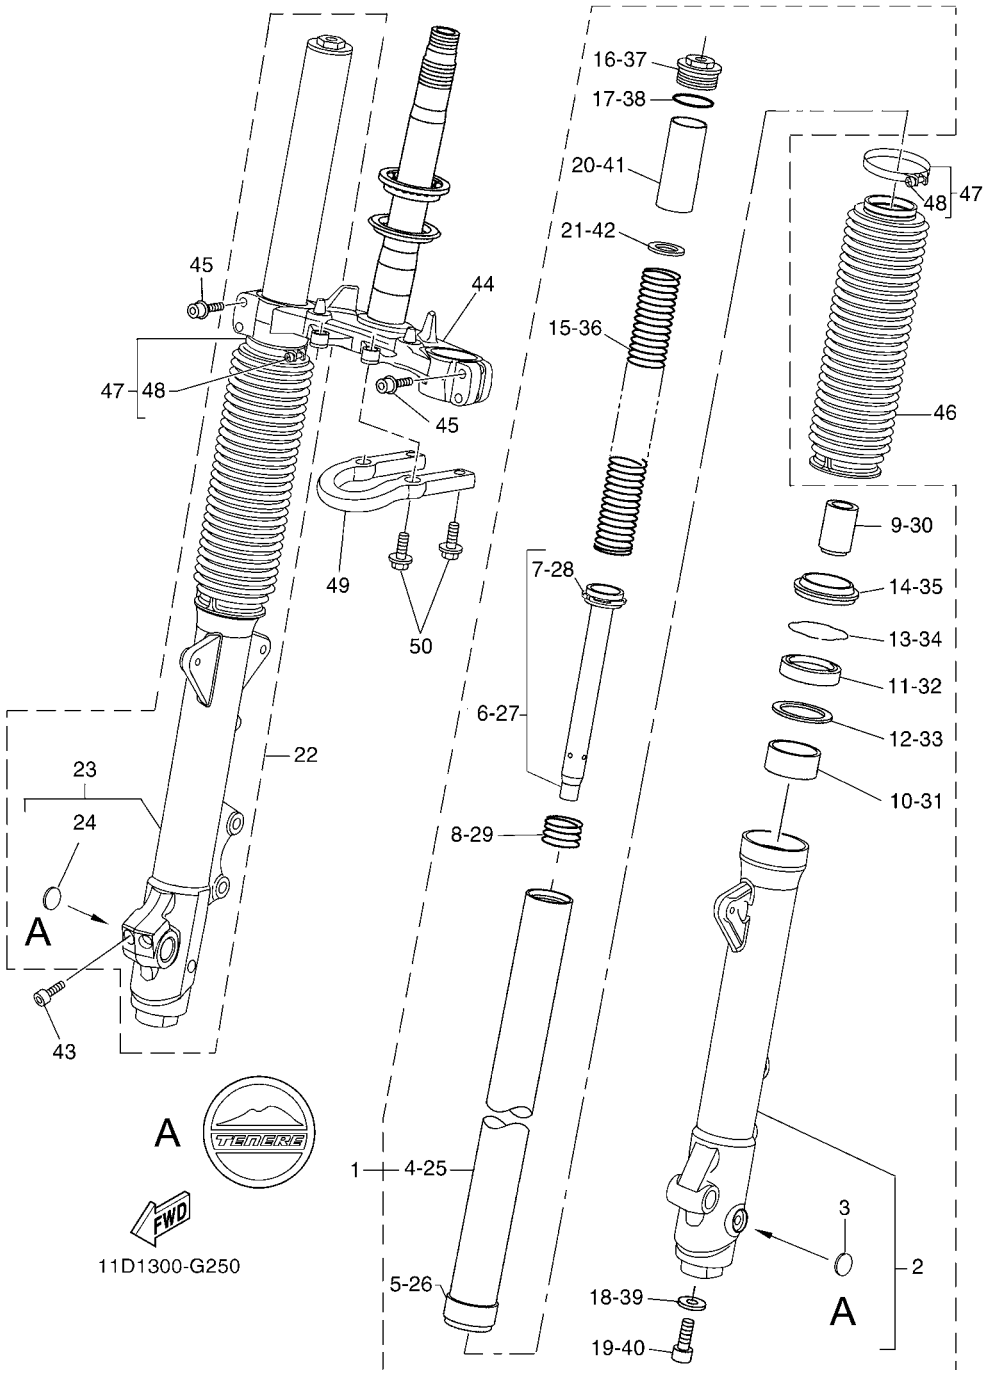



## FIG. 25 FRONT FORK

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VK–F3157–00 | ..RING, PISTON | 1 | 1 | 1 | | | |
| 29 | 5VK–F3151–00 | .SPRING, REBOUND | 1 | 1 | 1 | | | |
| 30 | 5VK–F3173–00 | .SPINDLE, TAPER | 1 | 1 | 1 | | | (PAIOLI) |
| 31 | 3XJ–23125–L0 | .METAL, SLIDE 1 | 1 | 1 | 1 | | | |
| 32 | 4DA–23145–L0 | .OIL SEAL | 1 | 1 | 1 | | | |
| 33 | 11D–F3146–00 | .WASHER, OIL SEAL | 1 | 1 | 1 | | | |
| 34 | 5VK–F3153–00 | .RING, SNAP | 1 | 1 | 1 | | | (PAIOLI) |
| 35 | 4DA–23144–L0 | .SEAL, DUST | 1 | 1 | 1 | | | |
| 36 | 11D–F3141–00 | .SPRING, FRONT FORK | 1 | 1 | 1 | | | |
| 37 | 11D–F3111–00 | .BOLT, CAP | 1 | 1 | 1 | | | |
| 38 | 4V4–23188–L0 | .O-RING | 1 | 1 | 1 | | | |
| 39 | 5JH–F3158–00 | .GASKET | 1 | 1 | 1 | | | (PAIOLI) |
| 40 | 5VK–F3181–00 | .BOLT, HEXAGON SOCKET HEAD | 1 | 1 | 1 | | | (PAIOLI) |
| 41 | 11D–F3118–00 | .SPACER | 1 | 1 | 1 | | | |
| 42 | 5VK–F3149–00 | .WASHER, SPRING UPPER | 1 | 1 | 1 | | | (PAIOLI) |
| 43 | 5VK–F3128–00 | .BOLT, AXLE HOLDER | 2 | 2 | 2 | | | |
| 44 | 5VK–F3340–00 | UNDER BRACKET COMP. | 1 | 1 | 1 | | | |
| 45 | 5SE–F3394–00 | BOLT, SPECIAL | 4 | 4 | 4 | | | (PAIOLI) |
| 46 | 11D–F3191–00 | BOOT | 2 | 2 | 2 | | | |
| 47 | 11D–F3192–00 | BAND | 2 | 2 | 2 | | | |
| 48 | 98580–04016 | .SCREW, PANHEAD (+) | 1 | 1 | 1 | | | |
| 49 | 11D–F1165–00 | HANDLE, STANDING | 1 | 1 | 1 | | | |
| 50 | 95812–06030 | BOLT, FLANGE | 4 | 4 | 4 | | | |

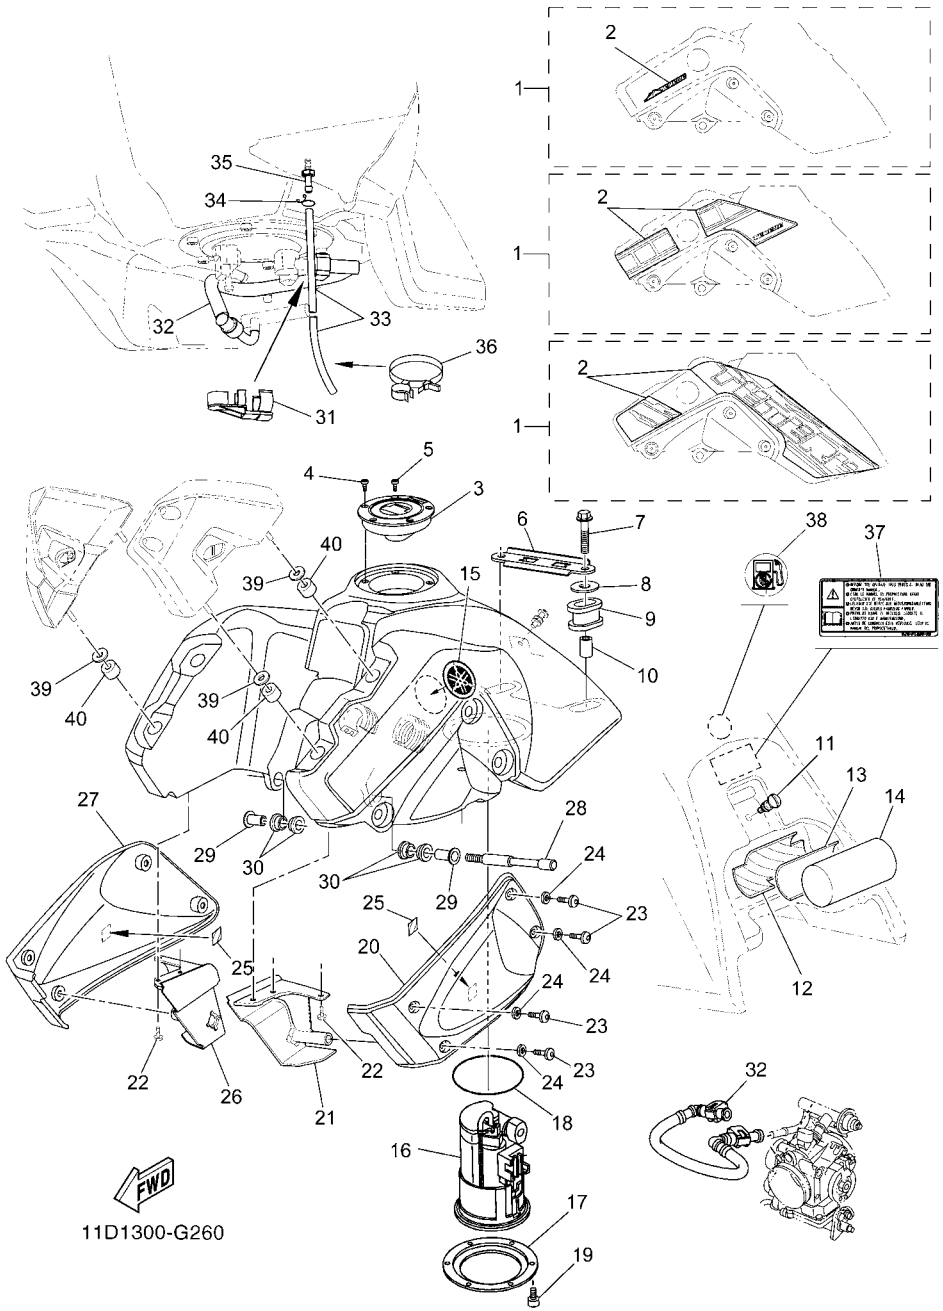


## FIG. 26 FUEL TANK


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–XF411–00–P0 | FUEL TANK COMP. | 1 | 1 | 1 | | | FOR SMX |
| | 11D–XF411–00–P1 | FUEL TANK COMP. | 1 | 1 | 1 | | | FOR BWC1 |
| | 11D–XF411–00–P2 | FUEL TANK COMP. | 1 | 1 | 1 | | | FOR YNS5 |
| 2 | 11D–F4230–00 | .GRAPHIC SET 1 | 1 | 1 | 1 | | | FOR SMX |
| | 11D–F4240–00 | .GRAPHIC SET | 1 | 1 | 1 | | | FOR BWC1 |
| | 11D–F4250–00 | .GRAPHIC SET 2 | 1 | 1 | 1 | | | FOR YNS5 |
| 3 | 11D–24602–00 | CAP ASSY | 1 | 1 | 1 | | | |
| 4 | 90110–05112 | BOLT, HEXAGON SOCKET HEAD | 3 | 3 | 3 | | | |
| 5 | 91317–05010 | BOLT | 1 | 1 | 1 | | | |
| 6 | 11D–F4192–00 | BRACKET, FUEL TANK 2 | 1 | 1 | 1 | | | |
| 7 | 95817–08040 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 8 | 90201–08M03 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 9 | 11D–F4182–00 | DAMPER, LOCATING 2 | 2 | 2 | 2 | | | |
| 10 | 90387–087L3 | COLLAR | 2 | 2 | 2 | | | |
| 11 | 11D–F4717–00 | BOLT, SEAT FITTING | 1 | 1 | 1 | | | |
| 12 | 11D–F4141–00 | PROTECTOR, FUEL TANK | 1 | 1 | 1 | | | |
| 13 | 11D–F8170–00 | HOLDER, TOOL | 1 | 1 | 1 | | | |
| 14 | 11D–F8100–00 | TOOL KIT | 1 | 1 | 1 | | | |
| 15 | 11D–F413B–00 | EMBLEM | 2 | 2 | 2 | | | |
| 16 | 11D–13907–01 | FUEL PUMP COMP. | 1 | 1 | 1 | | | |
| 17 | 5YK–F4491–00 | BRACKET, FUEL PUMP | 1 | 1 | 1 | | | |
| 18 | 5JW–24486–00 | O-RING | 1 | 1 | 1 | | | |
| 19 | 91317–06012 | BOLT | 6 | 6 | 6 | | | |
| 20 | 11D–F137W–00 | SCOOP, AIR 1 | 1 | 1 | 1 | | | |
| 21 | 11D–F4115–00 | STAY, FUEL TANK 1 | 1 | 1 | 1 | | | |
| 22 | 95027–06014 | BOLT, FLANGE | 6 | 6 | 6 | | | |
| 23 | 90111–06X19 | BOLT,HEX. SOCKET BUTTON | 8 | 8 | 8 | | | |

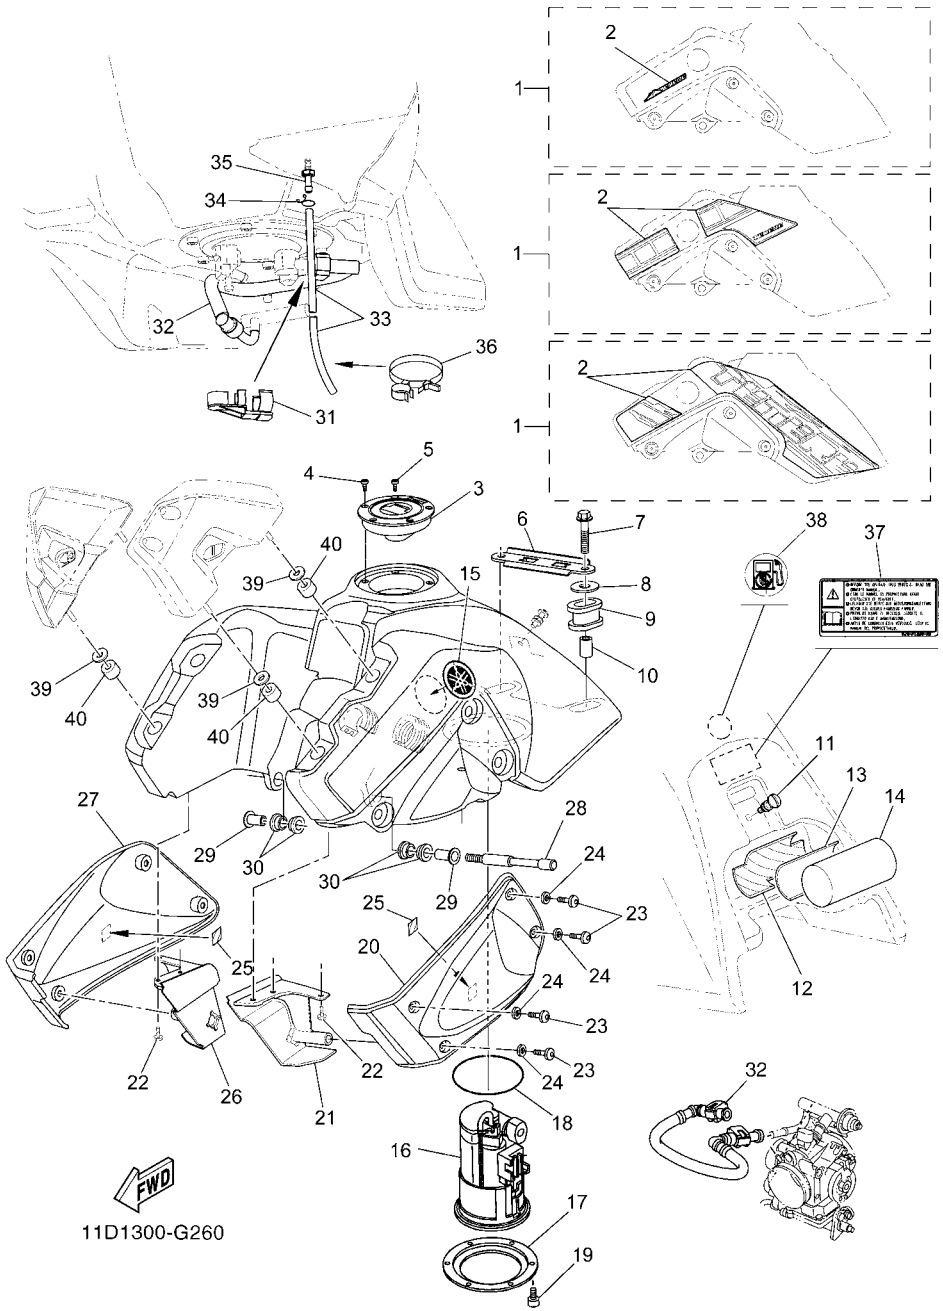



## FIG. 26 FUEL TANK

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 24 | 90201–06X28 | WASHER, PLATE | 8 | 8 | 8 | | | |
| 25 | 11D–F836U–00 | DAMPER, LOCATING 2 | 2 | 2 | 2 | | | |
| 26 | 11D–F4116–00 | STAY, FUEL TANK 2 | 1 | 1 | 1 | | | |
| 27 | 11D–F137X–00 | SCOOP, AIR 2 | 1 | 1 | 1 | | | |
| 28 | 11D–F4243–00 | ROD 1 | 2 | 2 | 2 | | | |
| 29 | 11D–F412G–00 | COLLAR | 2 | 2 | 2 | | | |
| 30 | 11D–F4181–00 | DAMPER, LOCATING 1 | 4 | 4 | 4 | | | |
| 31 | 90464–16005 | CLAMP | 1 | 1 | 1 | | | |
| 32 | 5YK–13971–00 | PIPE, FUEL 1 | 1 | 1 | 1 | | | |
| 33 | 11D–F4318–00 | PIPE, OVERFLOW | 1 | 1 | 1 | | | |
| 34 | 90467–09006 | CLIP | 1 | 1 | 1 | | | |
| 35 | 5YK–F4478–00 | JOINT | 1 | 1 | 1 | | | |
| 36 | 90464–09X00 | CLAMP | 2 | 2 | 2 | | | |
| 37 | 11D–F1568–00 | LABEL, WARNING | 1 | 1 | 1 | | | |
| 38 | 4SU–F415E–00 | LABEL, CAUTION | 1 | 1 | 1 | | | |
| 39 | 90202–08X01 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 40 | 11D–F8187–00 | GROMMET | 4 | 4 | 4 | | | |

## FIG. 27 SEAT

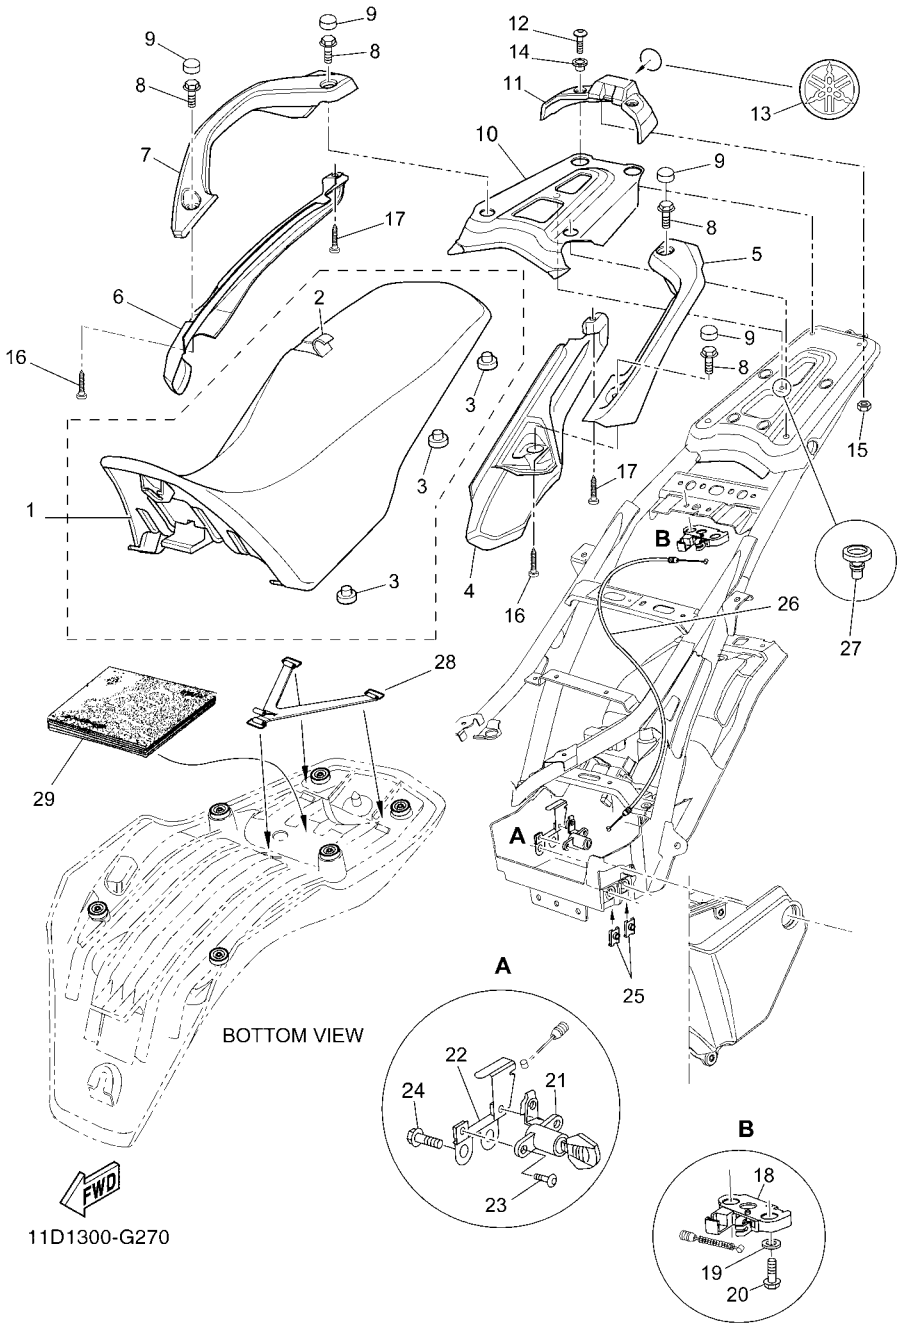



| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F4770–00 | SEMI-DOUBLE SEAT ASSY | 1 | 1 | 1 | | | |
| 2 | 11D–F4731–00 | .COVER, SEAT | 1 | 1 | 1 | | | |
| 3 | 5YK–F4741–00 | .PAD, SEAT | 6 | 6 | 6 | | | |
| 4 | 11D–F4845–00 | COVER 1 | 1 | 1 | 1 | | | |
| 5 | 11D–F474A–00 | ASSIST, GRIP | 1 | 1 | 1 | | | |
| 6 | 11D–F4846–00 | COVER 2 | 1 | 1 | 1 | | | |
| 7 | 11D–F474W–00 | ASSIST,GRIP 2 | 1 | 1 | 1 | | | |
| 8 | 95817–08030 | BOLT, FLANGE | 4 | 4 | 4 | | | |
| 9 | 11D–F4481–00 | PLUG | 4 | 4 | 4 | | | |
| 10 | 11D–F4844–00 | COVER 3 | 1 | 1 | 1 | | | |
| 11 | 11D–F471K–00 | COVER, TAIL 1 | 1 | 1 | 1 | | | |
| 12 | 90111–06X19 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 13 | 11D–F176B–00 | TUNING FORK MARK | 1 | 1 | 1 | | | |
| 14 | 90387–06X01 | COLLAR | 2 | 2 | 2 | | | |
| 15 | 95602–06200 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |
| 16 | 97707–40010 | SCREW, TAPPING | 2 | 2 | 2 | | | |
| 17 | 97707–40014 | SCREW, TAPPING | 2 | 2 | 2 | | | |
| 18 | 5AD–F4780–00 | SEAT LOCK ASSY | 1 | 1 | 1 | | | |
| 19 | 90201–06X04 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 20 | 92017–06020 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |
| 21 | 2TV–W2470–00 | ROTOR SET | 1 | 1 | 1 | | | |
| 22 | 11D–F175H–00 | STAY, LOCK | 1 | 1 | 1 | | | |
| 23 | 92017–06014 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |
| 24 | 90105–05016 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 25 | 90183–05812 | NUT, SPRING | 2 | 2 | 2 | | | |
| 26 | 11D–F478E–00 | CABLE, SEAT LOCK | 1 | 1 | 1 | | | |
| 27 | 11D–F483H–00 | BAND | 1 | 1 | 1 | | | |

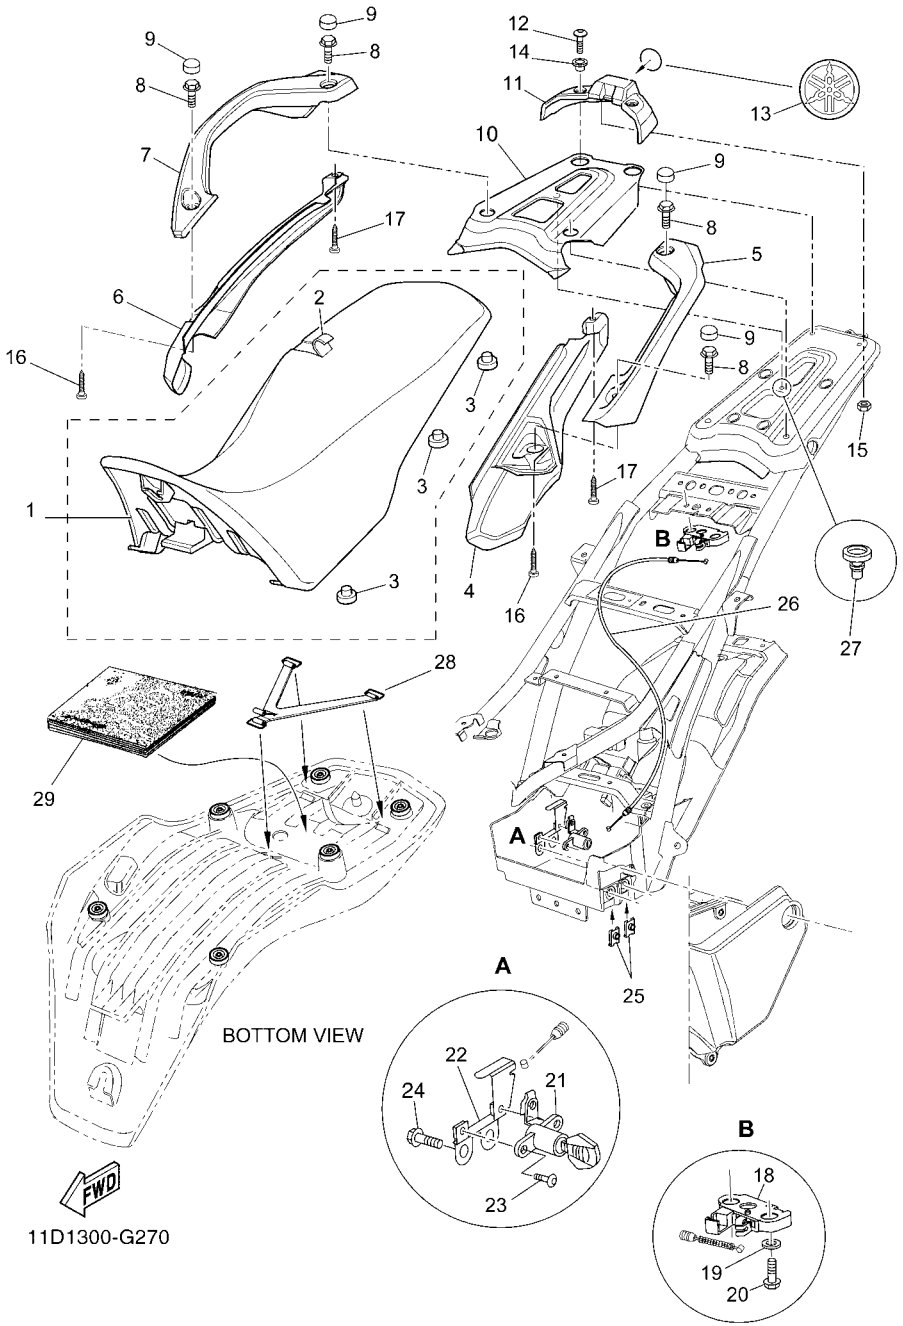



## FIG. 27 SEAT

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90338–05008 | PLUG | 1 | 1 | 1 | | | |
| 29 | 11D–F8199–E0 | MANUAL,OWNER'S | 1 | 1 | 1 | | | UR ENGLISH |
| | 11D–F8199–F0 | MANUAL,OWNER'S | 1 | 1 | 1 | | | UR FRENCH |
| | 11D–F8199–G0 | MANUAL,OWNER'S | 1 | 1 | 1 | | | UR GERMAN |
| | 11D–F8199–H0 | MANUAL,OWNER'S | 1 | 1 | 1 | | | UR ITALIAN |
| | 11D–F8199–S0 | MANUAL,OWNER'S | 1 | 1 | 1 | | | UR SPANISH |
| | 11D–F8199–D0 | MANUAL,OWNER'S | | 1 | | | | UR DUTCH |
| | 11D–F8199–P0 | MANUAL,OWNER'S | | | 1 | | | UR PORTUGUESE |

## FIG. 28 FRONT WHEEL

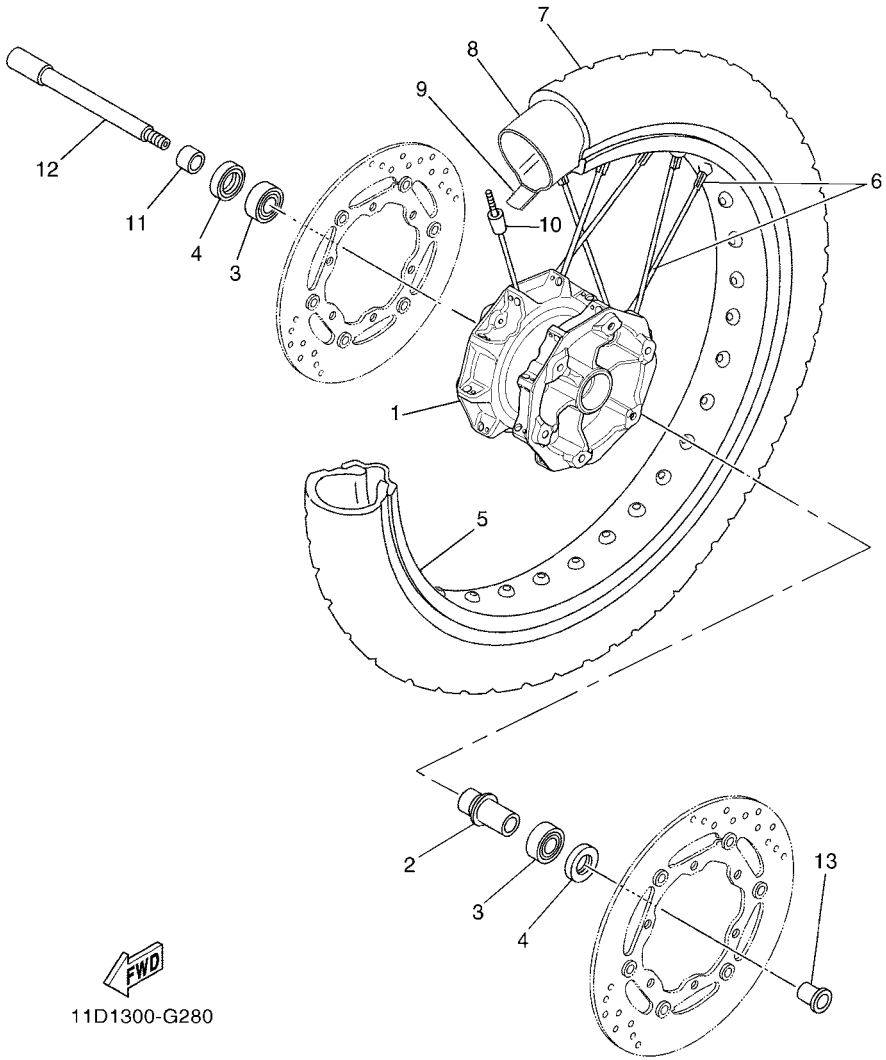



| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F5111–00 | HUB, FRONT | 1 | 1 | 1 | | | |
| 2 | 11D–F5117–00 | SPACER, BEARING | 1 | 1 | 1 | | | |
| 3 | 93306–203XN | BEARING | 2 | 2 | 2 | | | |
| 4 | 93106–23002 | OIL SEAL | 2 | 2 | 2 | | | |
| 5 | 94418–21X00 | RIM (1.85-21) | 1 | 1 | 1 | | | |
| 6 | 11D–F5104–00 | SPOKE SET, FRONT | 1 | 1 | 1 | | | |
| 7 | 94109–21800 | TIRE (90/90-21M/C 54S) | 1 | 1 | 1 | | | UR METZELER TOURANCE |
| | 94109–21801 | TIRE (90/90-21M/C 54T) | 1 | 1 | 1 | | | UR MICHELIN SIRAC |
| 8 | * | TUBE ( 21 ) | 1 | 1 | 1 | | | LM UR |
| | * | TUBE | 1 | 1 | 1 | | | LM UR |
| 9 | * | BAND, RIM (1.60-21) | 1 | 1 | 1 | | | LM UR. MICHELIN |
| | * | BAND, RIM | 1 | 1 | 1 | | | LM UR |
| 10 | 3HT–25398–00 | BALANCER, WHEEL (15G) | 1 | 1 | 1 | | | |
| 11 | 5VK–F5183–00 | COLLAR, WHEEL | 1 | 1 | 1 | | | |
| 12 | 5VK–25181–00 | AXLE, WHEEL | 1 | 1 | 1 | | | |
| 13 | 5VK–F5186–00 | COLLAR, WHEEL | 1 | 1 | 1 | | | |

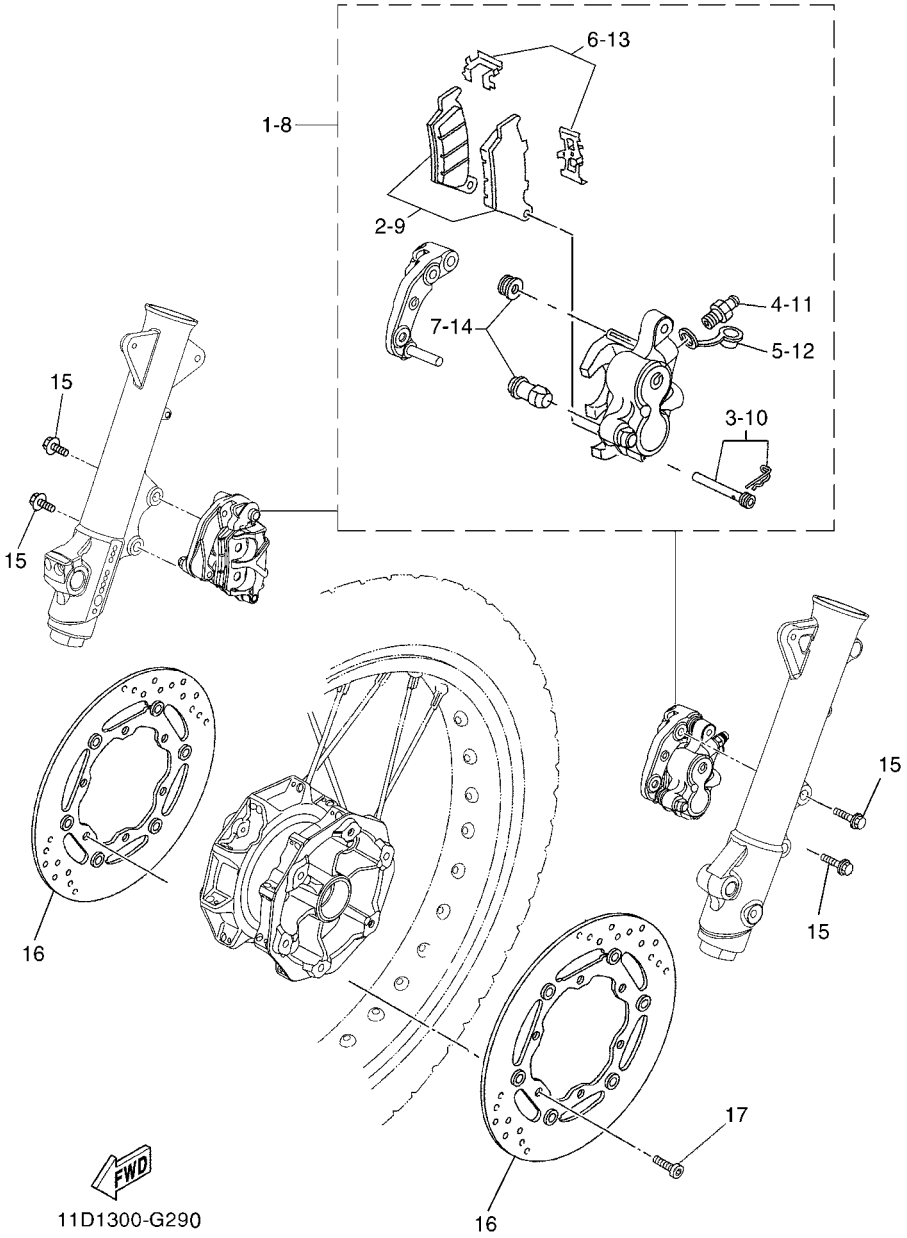


## FIG. 29 FRONT BRAKE


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F580T–00 | CALIPER ASSY (LEFT) | 1 | 1 | 1 | | | |
| 2 | 11D–F5811–00 | .PAD, CALIPER 2 | 1 | 1 | 1 | | | |
| 3 | 5D7–F5924–00 | .PIN, PAD | 1 | 1 | 1 | | | |
| 4 | 5D7–F5824–10 | .SCREW, BLEED | 1 | 1 | 1 | | | (BREMBO) |
| 5 | 5DS–F5825–00 | .CAP | 1 | 1 | 1 | | | (BREMBO) |
| 6 | 5DS–F5919–00 | .SUPPORT, PAD | 1 | 1 | 1 | | | (BREMBO) |
| 7 | 5DS–F5917–00 | .BOOT, CALIPER | 1 | 1 | 1 | | | (BREMBO) |
| 8 | 11D–F580U–00 | CALIPER ASSY (RIGHT) | 1 | 1 | 1 | | | |
| 9 | 11D–F5811–00 | .PAD, CALIPER 2 | 1 | 1 | 1 | | | |
| 10 | 5D7–F5924–00 | .PIN, PAD | 1 | 1 | 1 | | | |
| 11 | 5D7–F5824–10 | .SCREW, BLEED | 1 | 1 | 1 | | | (BREMBO) |
| 12 | 5DS–F5825–00 | .CAP | 1 | 1 | 1 | | | (BREMBO) |
| 13 | 5DS–F5919–00 | .SUPPORT, PAD | 1 | 1 | 1 | | | (BREMBO) |
| 14 | 5DS–F5917–00 | .BOOT, CALIPER | 1 | 1 | 1 | | | (BREMBO) |
| 15 | 90105–10638 | BOLT, FLANGE | 4 | 4 | 4 | | | |
| 16 | 5VK–F581T–00 | DISK BRAKE ASSY | 2 | 2 | 2 | | | |
| 17 | 90109–064G6 | BOLT | 12 | 12 | 12 | | | |

## FIG. 30 REAR WHEEL

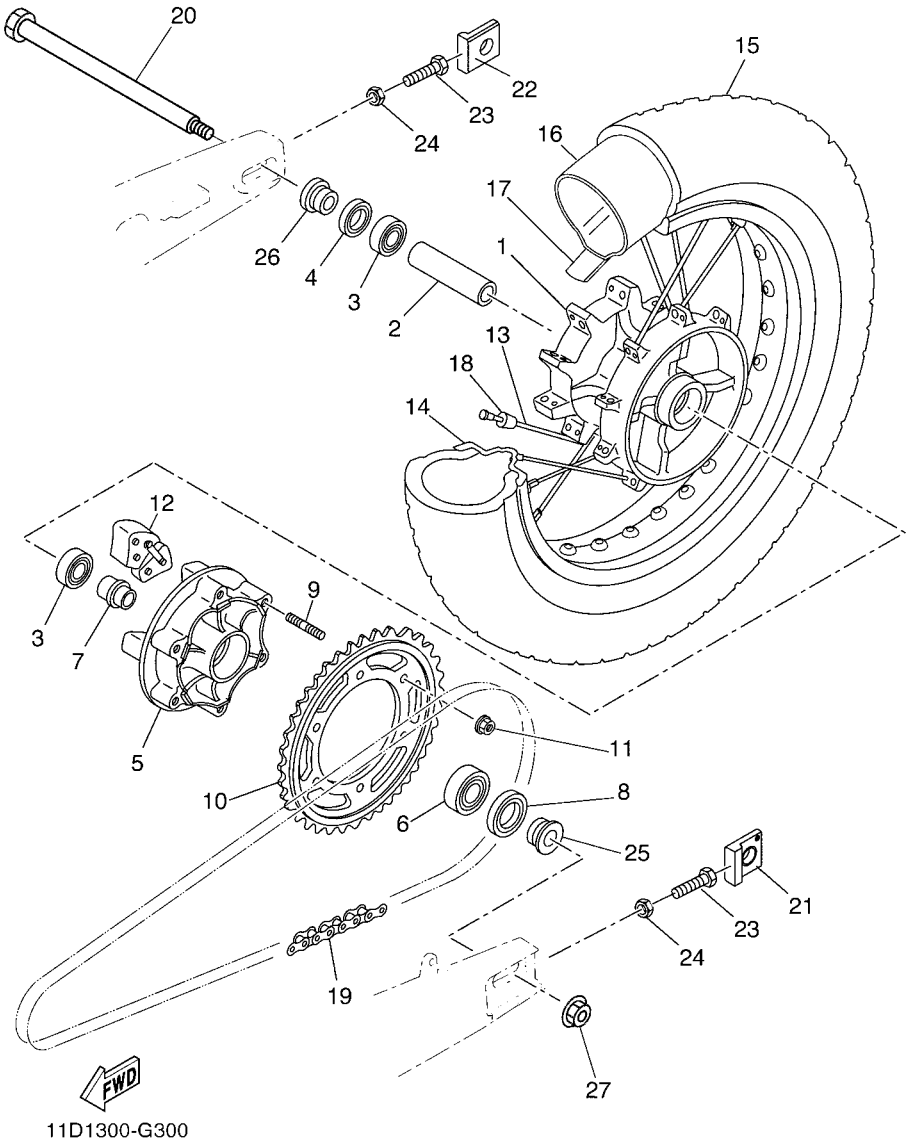

11D1300-G300


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–25311–00 | HUB, REAR | 1 | 1 | 1 | | | |
| 2 | 90560–17306 | SPACER | 1 | 1 | 1 | | | |
| 3 | 93306–20348 | BEARING | 2 | 2 | 2 | | | |
| 4 | 93106–23002 | OIL SEAL | 1 | 1 | 1 | | | |
| 5 | 5VK–25366–00 | CLUTCH, HUB | 1 | 1 | 1 | | | |
| 6 | 93306–30437 | BEARING | 1 | 1 | 1 | | | |
| 7 | 1VJ–25377–00 | COLLAR, WHEEL | 1 | 1 | 1 | | | |
| 8 | 93106–30029 | OIL SEAL | 1 | 1 | 1 | | | |
| 9 | 90116–10485 | BOLT, STUD | 6 | 6 | 6 | | | |
| 10 | 5VK–25445–01 | SPROCKET, DRIVEN (45T) | 1 | 1 | 1 | | | |
| 11 | 95607–10200 | NUT, U FLANGE | 6 | 6 | 6 | | | |
| 12 | 5Y1–25364–00 | DAMPER | 4 | 4 | 4 | | | |
| 13 | 5VK–F5304–00 | SPOKE SET, REAR | 1 | 1 | 1 | | | |
| 14 | 94427–17X00 | RIM | 1 | 1 | 1 | | | |
| 15 | 94113–17800 | TIRE (130/80-17 M/C 65S) | 1 | 1 | 1 | | | UR METZELER TOURANCE |
| | 94113–17801 | TIRE (130/80-17 M/C 65T) | 1 | 1 | 1 | | | UR MICHELIN SIRAC |
| 16 | * | TUBE ( 21 ) | 1 | 1 | 1 | | | LM UR |
| | * | TUBE | 1 | 1 | 1 | | | LM UR |
| 17 | * | BAND, RIM (21) | 1 | 1 | 1 | | | LM UR |
| | * | BAND, RIM (2.15-18) | 1 | 1 | 1 | | | LM UR MICHELIN |
| 18 | 3HT–25398–00 | BALANCER, WHEEL (15G) | 1 | 1 | 1 | | | |
| 19 | 9456X–08110 | CHAIN | 1 | 1 | 1 | | | |
| 20 | 10S–25381–00 | AXLE, WHEEL | 1 | 1 | 1 | | | |
| 21 | 10S–F5388–00 | PULLER, CHAIN 1 | 1 | 1 | 1 | | | |
| 22 | 10S–F5389–00 | PULLER, CHAIN 2 | 1 | 1 | 1 | | | |
| 23 | 90101–08777 | BOLT | 2 | 2 | 2 | | | |
| 24 | 95707–08500 | NUT, FLANGE | 2 | 2 | 2 | | | |

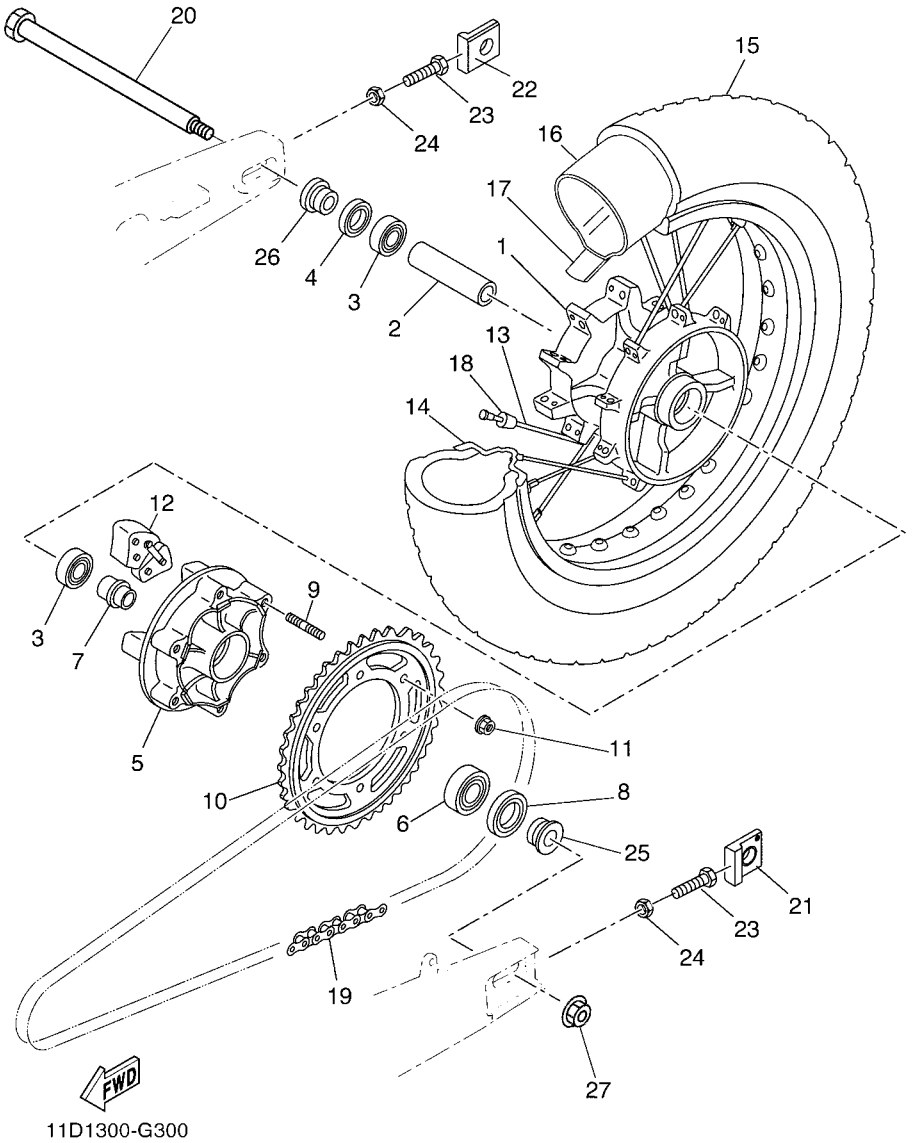

11D1300-G300

**FIG. 30 REAR WHEEL**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 25 | 90387–17801 | COLLAR | 1 | 1 | 1 | | | |
| 26 | 90387–17802 | COLLAR | 1 | 1 | 1 | | | |
| 27 | 95604–16200 | NUT, U FLANGE | 1 | 1 | 1 | | | |

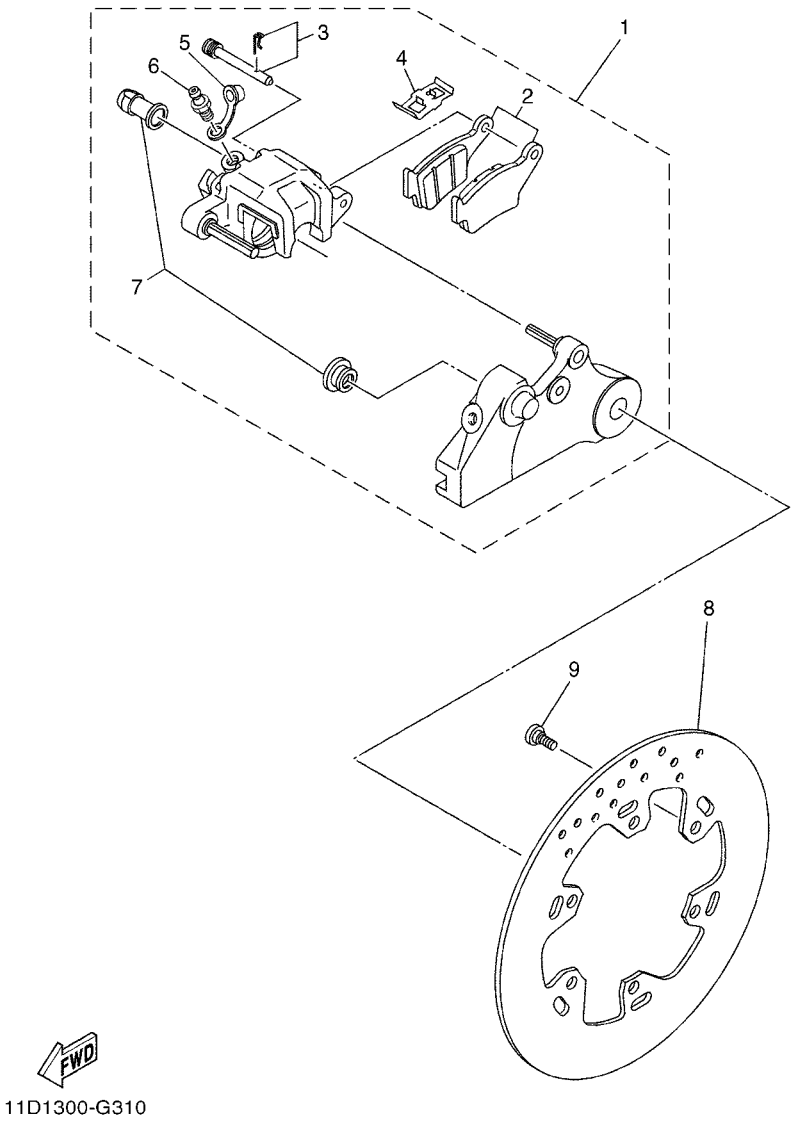


11D1300-G310

## FIG. 31 REAR BRAKE


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–F580W–00 | CALIPER ASSY, REAR 2 | 1 | 1 | 1 | | | (BREMBO) |
| 2 | 5VK–W0046–00 | .BRAKE PAD KIT 2 | 1 | 1 | 1 | | | (BREMBO) |
| 3 | 5VK–F5924–10 | .PIN, PAD | 1 | 1 | 1 | | | (BREMBO) |
| 4 | 5VK–F5919–10 | .SUPPORT, PAD | 1 | 1 | 1 | | | (BREMBO) |
| 5 | 5DS–F5825–00 | .CAP | 1 | 1 | 1 | | | (BREMBO) |
| 6 | 5SE–F5824–00 | .SCREW, BLEED | 1 | 1 | 1 | | | (BREMBO) |
| 7 | 5DS–F5917–00 | .BOOT, CALIPER | 1 | 1 | 1 | | | (BREMBO) |
| 8 | 5VK–F582W–00 | DISK, REAR BRAKE 2 | 1 | 1 | 1 | | | |
| 9 | 90109–065F3 | BOLT | 6 | 6 | 6 | | | |

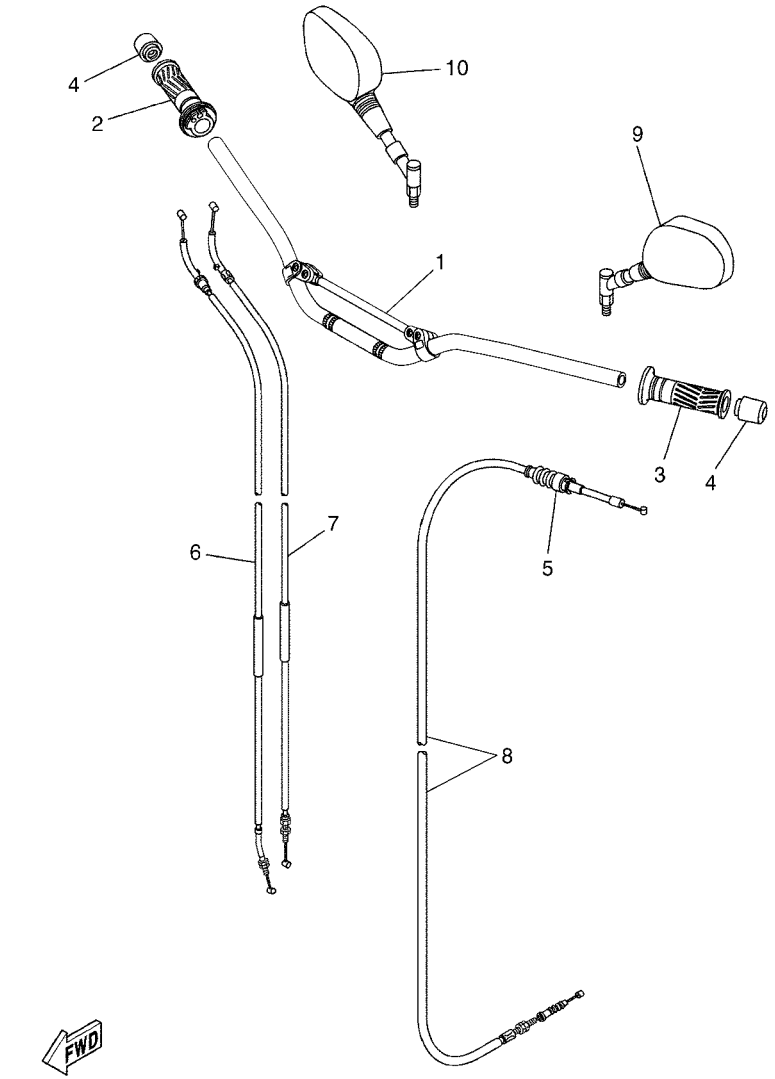

11D1300-G320

## FIG. 32 STEERING HANDLE & CABLE


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F6111–00 | HANDLEBAR | 1 | 1 | 1 | | | |
| 2 | 4YR–26240–02 | GRIP ASSY | 1 | 1 | 1 | | | |
| 3 | 4YR–26241–02 | GRIP (LEFT) | 1 | 1 | 1 | | | |
| 4 | 11D–F6246–00 | END, GRIP | 2 | 2 | 2 | | | |
| 5 | 1E6–26342–00 | BOOT, CABLE | 1 | 1 | 1 | | | |
| 6 | 5VK–F6311–00 | CABLE, THROTTLE 1 | 1 | 1 | 1 | | | |
| 7 | 5VK–F6312–00 | CABLE, THROTTLE 2 | 1 | 1 | 1 | | | |
| 8 | 5VK–F6335–00 | CABLE, CLUTCH | 1 | 1 | 1 | | | |
| 9 | 5VK–F6280–00 | REAR VIEW MIRROR ASSY (LEFT) | 1 | 1 | 1 | | | |
| 10 | 5VK–F6290–00 | REAR VIEW MIRROR ASSY (RIGHT) | 1 | 1 | 1 | | | |

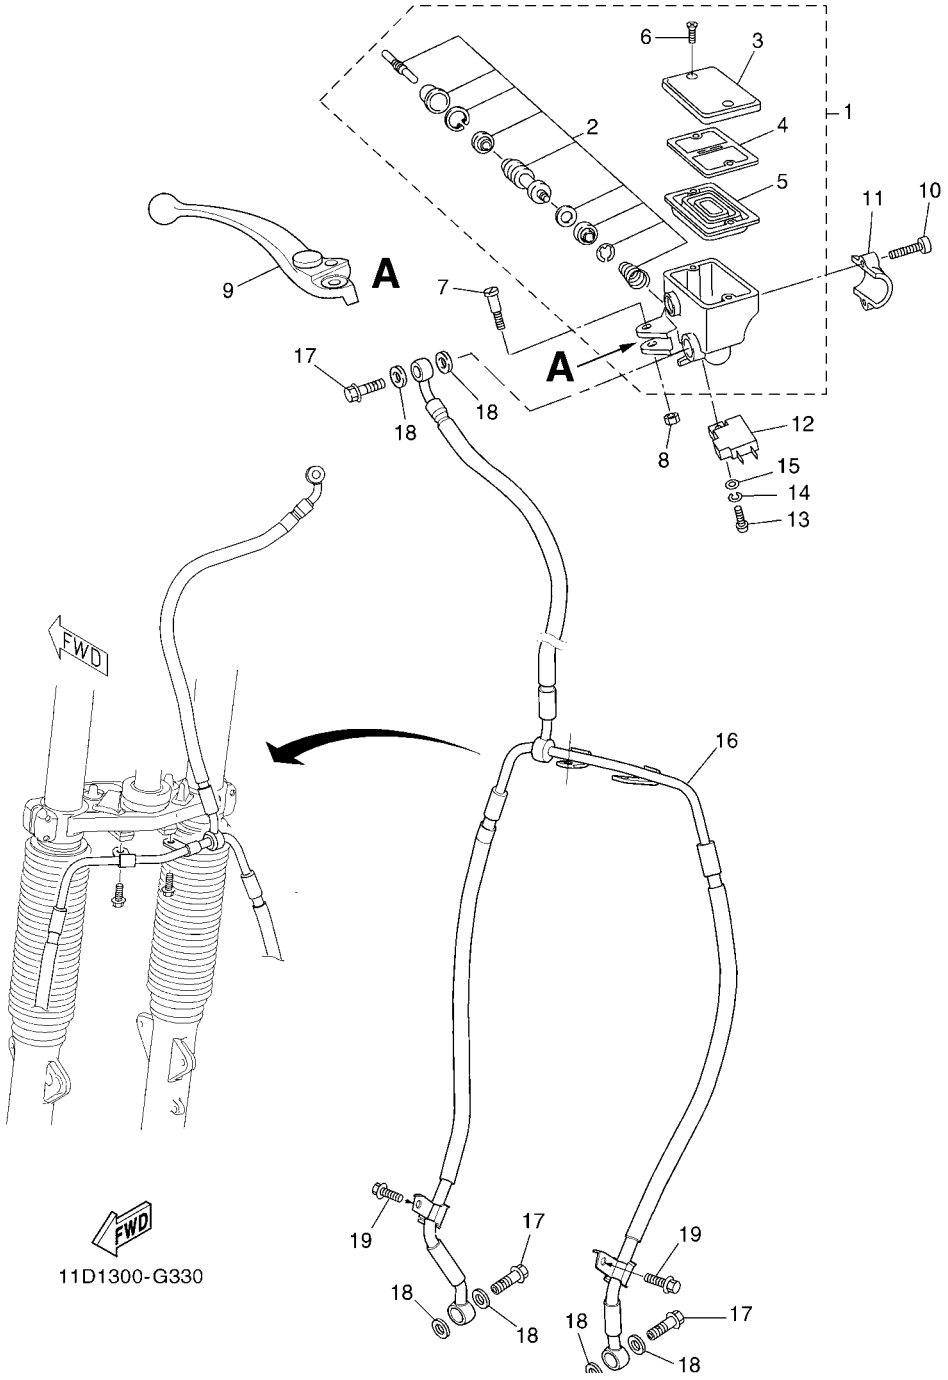



## FIG. 33 FRONT MASTER CYLINDER

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5PS–W2587–00 | MASTER CYLINDER SUB ASSY | 1 | 1 | 1 | | | |
| 2 | 5VS–W0041–00 | .CYLINDER KIT, MASTER | 1 | 1 | 1 | | | |
| 3 | 5VS–25852–00 | .CAP, RESERVOIR | 1 | 1 | 1 | | | |
| 4 | 5VS–25855–00 | .BUSH,DIAPHRAGM | 1 | 1 | 1 | | | |
| 5 | 20S–25854–00 | .GASKET, DIAPHRAGM | 1 | 1 | 1 | | | |
| 6 | 5VS–2589H–00 | .SCREW | 2 | 2 | 2 | | | |
| 7 | 5VS–2589F–00 | BOLT, LEVER | 1 | 1 | 1 | | | |
| 8 | 95617–06100 | NUT, U | 1 | 1 | 1 | | | |
| 9 | 5VS–83922–00 | LEVER 2 | 1 | 1 | 1 | | | |
| 10 | 5VS–26332–00 | BOLT | 2 | 2 | 2 | | | |
| 11 | 5VS–25867–00 | BRACKET, MASTER CYLINDER | 1 | 1 | 1 | | | |
| 12 | 4HM–83980–00 | FRONT STOP SWITCH ASSY | 1 | 1 | 1 | | | |
| 13 | 98502–04012 | SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 14 | 92902–04100 | WASHER, SPRING | 1 | 1 | 1 | | | |
| 15 | 92902–04600 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 16 | 11D–F5872–00 | HOSE, BRAKE 1 | 1 | 1 | 1 | | | |
| 17 | 90401–10X03 | BOLT, UNION | 3 | 3 | 3 | | | |
| 18 | 90201–10X07 | WASHER, PLATE | 6 | 6 | 6 | | | |
| 19 | 95024–06012 | BOLT, FLG.(SMALL HEAD) | 2 | 2 | 2 | | | |

## FIG. 34 STAND & FOOTREST

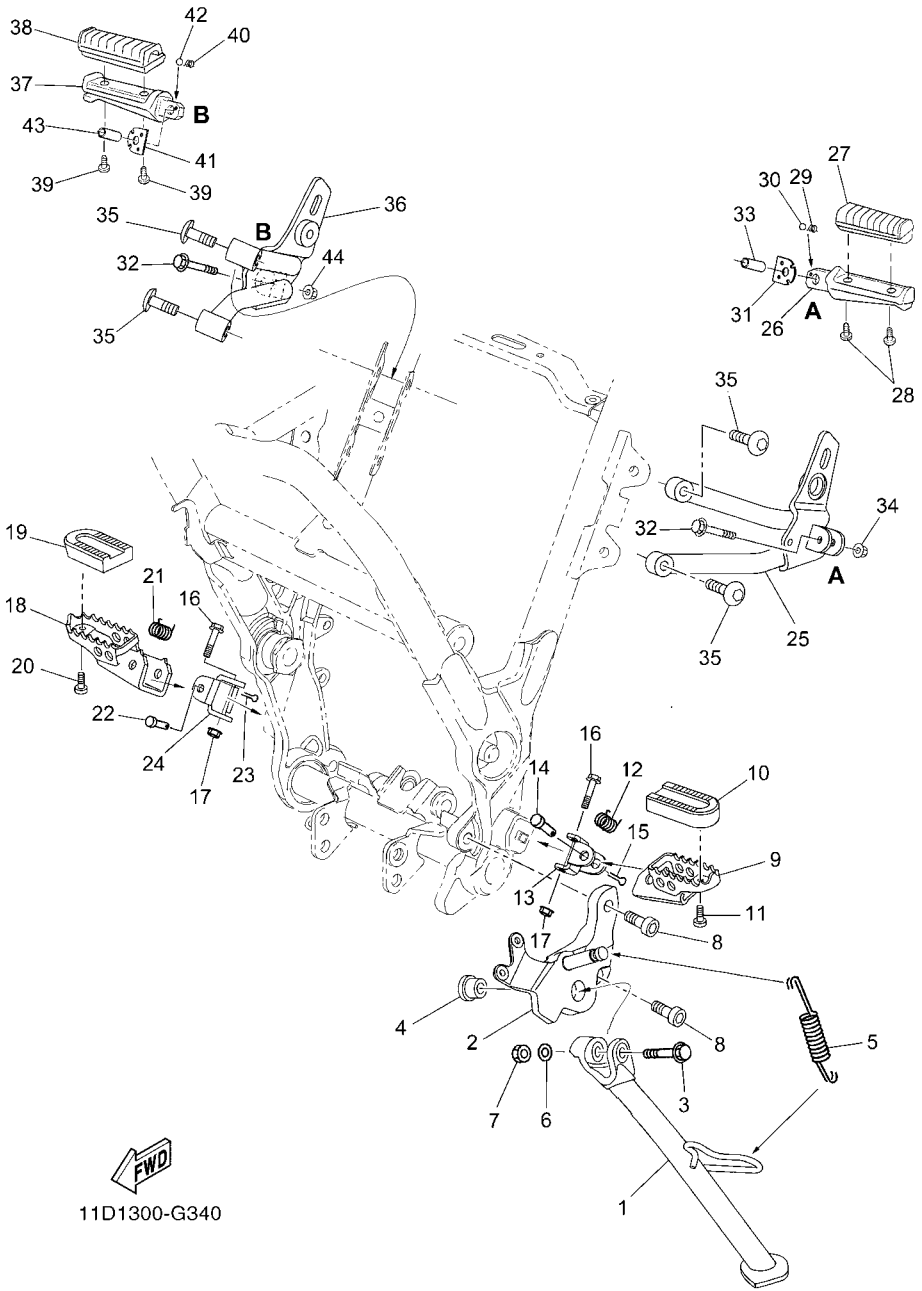



| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F7311–00 | STAND, SIDE | 1 | 1 | 1 | | | |
| 2 | 11D–F7321–00 | BRACKET, SIDE STAND | 1 | 1 | 1 | | | |
| 3 | 90105–10X16 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 4 | 11D–F7313–00 | COLLAR | 1 | 1 | 1 | | | |
| 5 | 90506–25X01 | SPRING, TENSION | 1 | 1 | 1 | | | |
| 6 | 90201–10X21 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 7 | 9561M–10100 | NUT, U | 1 | 1 | 1 | | | |
| 8 | 90110–10191 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | 2 | | | |
| 9 | 3LD–27411–01 | FOOTREST 1 | 1 | 1 | 1 | | | |
| 10 | 3LD–27413–00 | COVER, FOOTREST | 1 | 1 | 1 | | | |
| 11 | 91317–06010 | BOLT | 1 | 1 | 1 | | | |
| 12 | 90508–28777 | SPRING, TORSION | 1 | 1 | 1 | | | |
| 13 | 11D–F7452–00 | BRACKET, FOOTREST 1 | 1 | 1 | 1 | | | |
| 14 | 90240–10101 | PIN, CLEVIS | 1 | 1 | 1 | | | |
| 15 | 91401–25020 | PIN, COTTER | 1 | 1 | 1 | | | |
| 16 | 90105–08053 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 17 | 95607–08200 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |
| 18 | 3LD–27421–01 | FOOTREST 2 | 1 | 1 | 1 | | | |
| 19 | 3LD–27413–00 | COVER, FOOTREST | 1 | 1 | 1 | | | |
| 20 | 91317–06010 | BOLT | 1 | 1 | 1 | | | |
| 21 | 90508–28777 | SPRING, TORSION | 1 | 1 | 1 | | | |
| 22 | 90240–10101 | PIN, CLEVIS | 1 | 1 | 1 | | | |
| 23 | 91401–25020 | PIN, COTTER | 1 | 1 | 1 | | | |
| 24 | 11D–F7452–00 | BRACKET, FOOTREST 1 | 1 | 1 | 1 | | | |
| 25 | 11D–F741L–00 | BRACKET 4 | 1 | 1 | 1 | | | |
| 26 | 11D–F743A–00 | BAR, REAR FOOTREST | 1 | 1 | 1 | | | |
| 27 | 1B9–F7454–00 | COVER, FOOTREST | 1 | 1 | 1 | | | |

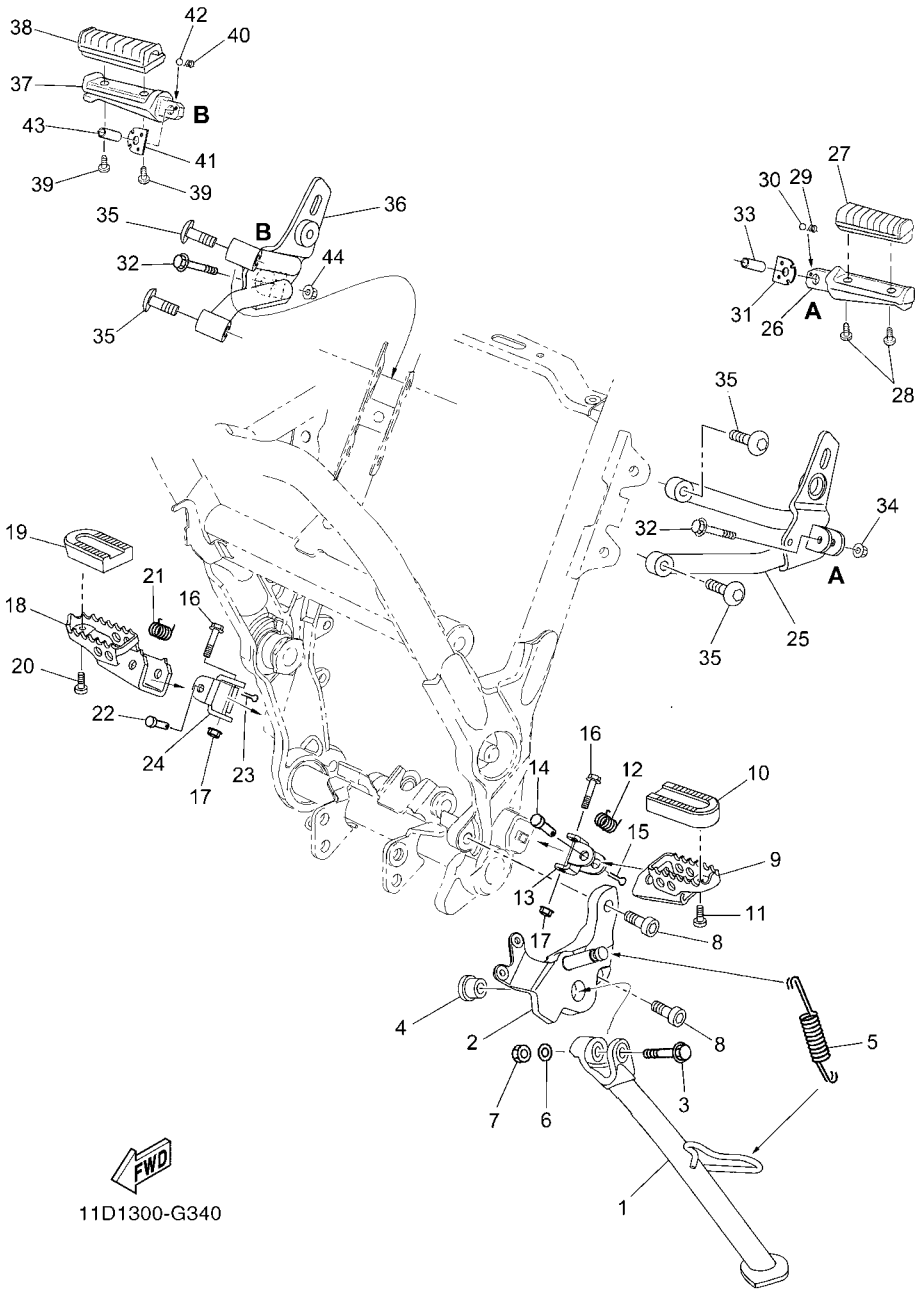


## FIG. 34 STAND & FOOTREST

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90157–05079 | SCREW, PAN HEAD | 2 | 2 | 2 | | | |
| 29 | 90501–15001 | SPRING, COMPRESSION | 1 | 1 | 1 | | | |
| 30 | 93501–04011 | BALL | 1 | 1 | 1 | | | |
| 31 | 5JJ–27437–01 | WASHER, SPECIAL | 1 | 1 | 1 | | | |
| 32 | 95817–06040 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 33 | 90387–06014 | COLLAR | 1 | 1 | 1 | | | |
| 34 | 95604–06200 | NUT, U FLANGE | 1 | 1 | 1 | | | |
| 35 | 90110–08221 | BOLT, HEXAGON SOCKET HEAD | 4 | 4 | 4 | | | |
| 36 | 11D–F742L–00 | BRACKET 5 | 1 | 1 | 1 | | | |
| 37 | 11D–F743G–00 | BAR, REAR FOOTREST 2 | 1 | 1 | 1 | | | |
| 38 | 1B9–F7454–00 | COVER, FOOTREST | 1 | 1 | 1 | | | |
| 39 | 90157–05079 | SCREW, PAN HEAD | 2 | 2 | 2 | | | |
| 40 | 90501–15001 | SPRING, COMPRESSION | 1 | 1 | 1 | | | |
| 41 | 5JJ–27437–01 | WASHER, SPECIAL | 1 | 1 | 1 | | | |
| 42 | 93501–04011 | BALL | 1 | 1 | 1 | | | |
| 43 | 90387–06014 | COLLAR | 1 | 1 | 1 | | | |
| 44 | 95604–06200 | NUT, U FLANGE | 1 | 1 | 1 | | | |

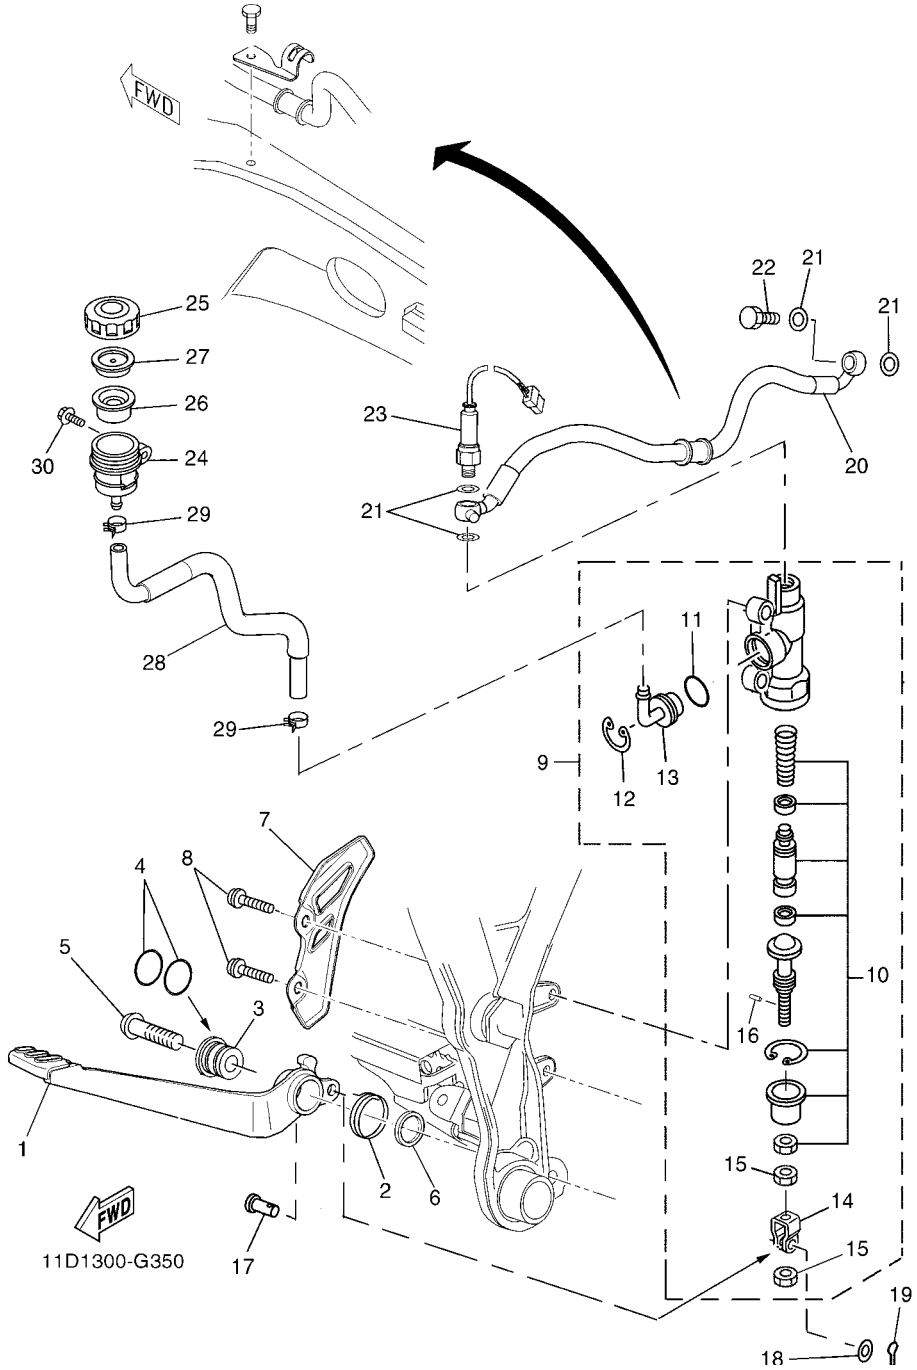


## FIG. 35 REAR MASTER CYLINDER

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F7211–00 | PEDAL, BRAKE | 1 | 1 | 1 | | | |
| 2 | 11D–F7216–00 | SPRING, RETURN | 1 | 1 | 1 | | | |
| 3 | 5YK–F7213–00 | COLLAR | 1 | 1 | 1 | | | |
| 4 | 93210–15414 | O-RING | 2 | 2 | 2 | | | |
| 5 | 92017–10045 | BOLT, BUTTON HEAD | 1 | 1 | 1 | | | |
| 6 | 90201–100L3 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 7 | 11D–F7446–00 | PLATE 2 | 1 | 1 | 1 | | | |
| 8 | 92014–08025 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |
| 9 | 5VK–2583V–00 | RR. MASTER CYLINDER ASSY. | 1 | 1 | 1 | | | |
| 10 | 3BN–W0042–50 | .CYLINDER KIT, MASTER | 1 | 1 | 1 | | | |
| 11 | 93210–15620 | .O-RING | 1 | 1 | 1 | | | |
| 12 | 2VN–25866–00 | .CIRCLIP | 1 | 1 | 1 | | | |
| 13 | 4ML–2582A–50 | .JOINT | 1 | 1 | 1 | | | |
| 14 | 2YK–27222–00 | .JOINT | 1 | 1 | 1 | | | |
| 15 | 4SS–27218–00 | .NUT | 2 | 2 | 2 | | | |
| 16 | 3KW–27234–00 | .PIN, BRAKE ROD | 1 | 1 | 1 | | | |
| 17 | 90240–08124 | PIN, CLEVIS | 1 | 1 | 1 | | | |
| 18 | 90201–08083 | WASHER, PLATE | 1 | 1 | 1 | | | |
| 19 | 91401–20012 | PIN, COTTER | 1 | 1 | 1 | | | |
| 20 | 11D–F5873–00 | HOSE, BRAKE 2 | 1 | 1 | 1 | | | |
| 21 | 90201–10X07 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 22 | 90401–10X03 | BOLT, UNION | 1 | 1 | 1 | | | |
| 23 | 11D–H2530–00 | STOP SWITCH ASSY | 1 | 1 | 1 | | | |
| 24 | 5JJ–25894–01 | TANK, RESERVOIR | 1 | 1 | 1 | | | |
| 25 | 3XP–25852–50 | CAP, RESERVOIR | 1 | 1 | 1 | | | |
| 26 | 2VN–25854–00 | GASKET, DIAPHRAGM | 1 | 1 | 1 | | | |
| 27 | 2VN–25855–00 | BUSH,DIAPHRAGM | 1 | 1 | 1 | | | |


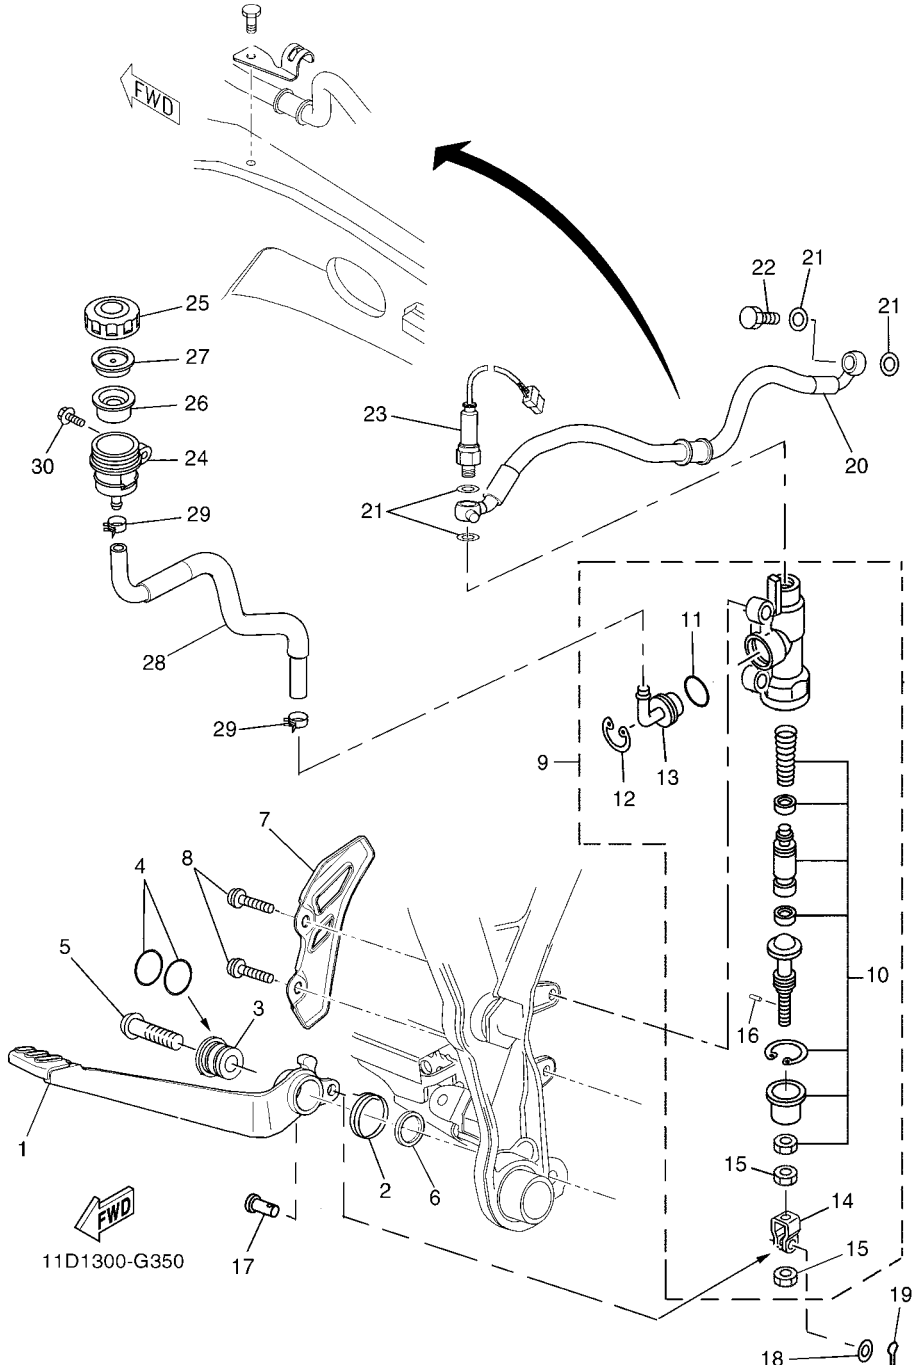



**FIG. 35 REAR MASTER CYLINDER**


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 11D–25895–00 | HOSE, RESERVOIR | 1 | 1 | 1 | | | |
| 29 | 90467–12085 | CLIP | 2 | 2 | 2 | | | |
| 30 | 90119–06044 | BOLT, WITH WASHER | 1 | 1 | 1 | | | |

## FIG. 36 COWLING

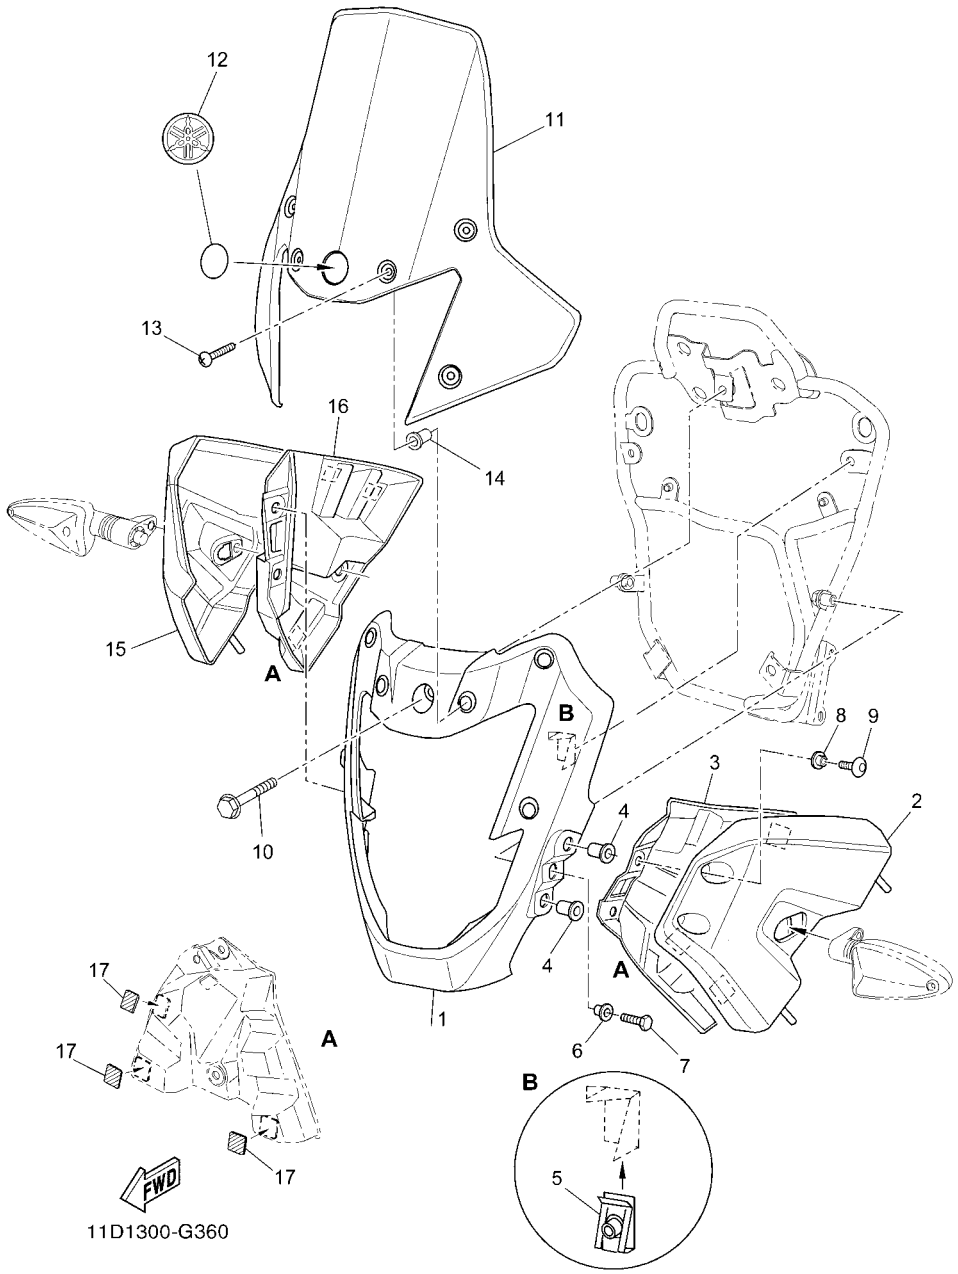



| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–F8351–00–P0 | BODY, COWLING | 1 | 1 | 1 | | | FOR SMX |
| | 11D–F8351–00–P1 | BODY, COWLING | 1 | 1 | 1 | | | FOR BWC1 |
| | 11D–F8351–00–P2 | BODY, COWLING | 1 | 1 | 1 | | | FOR YNS5 |
| 2 | 11D–F842M–00 | COVER 1 | 1 | 1 | 1 | | | |
| 3 | 11D–F836L–00 | PANEL, INNER 2 | 1 | 1 | 1 | | | |
| 4 | 90179–06520 | NUT | 4 | 4 | 4 | | | |
| 5 | 2VW–F1736–00 | NUT,PLATE | 2 | 2 | 2 | | | |
| 6 | 90387–06X02 | COLLAR | 2 | 2 | 2 | | | |
| 7 | 97017–06025 | BOLT | 2 | 2 | 2 | | | |
| 8 | 90387–06X09 | COLLAR | 4 | 4 | 4 | | | |
| 9 | 90111–06X20 | BOLT,HEX. SOCKET BUTTON | 4 | 4 | 4 | | | |
| 10 | 95817–06050 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 11 | 11D–F8381–00 | WINDSHIELD | 1 | 1 | 1 | | | |
| 12 | 11D–F836B–00 | TUNING FORK MARK | 1 | 1 | 1 | | | |
| 13 | 90150–05024 | SCREW, ROUND HEAD | 6 | 6 | 6 | | | |
| 14 | 90179–05523 | NUT | 6 | 6 | 6 | | | |
| 15 | 11D–F842N–00 | COVER 2 | 1 | 1 | 1 | | | |
| 16 | 11D–F836M–00 | PANEL, INNER 3 | 1 | 1 | 1 | | | |
| 17 | 11D–F836U–00 | DAMPER, LOCATING 2 | 6 | 6 | 6 | | | |

## FIG. 37 GENERATOR

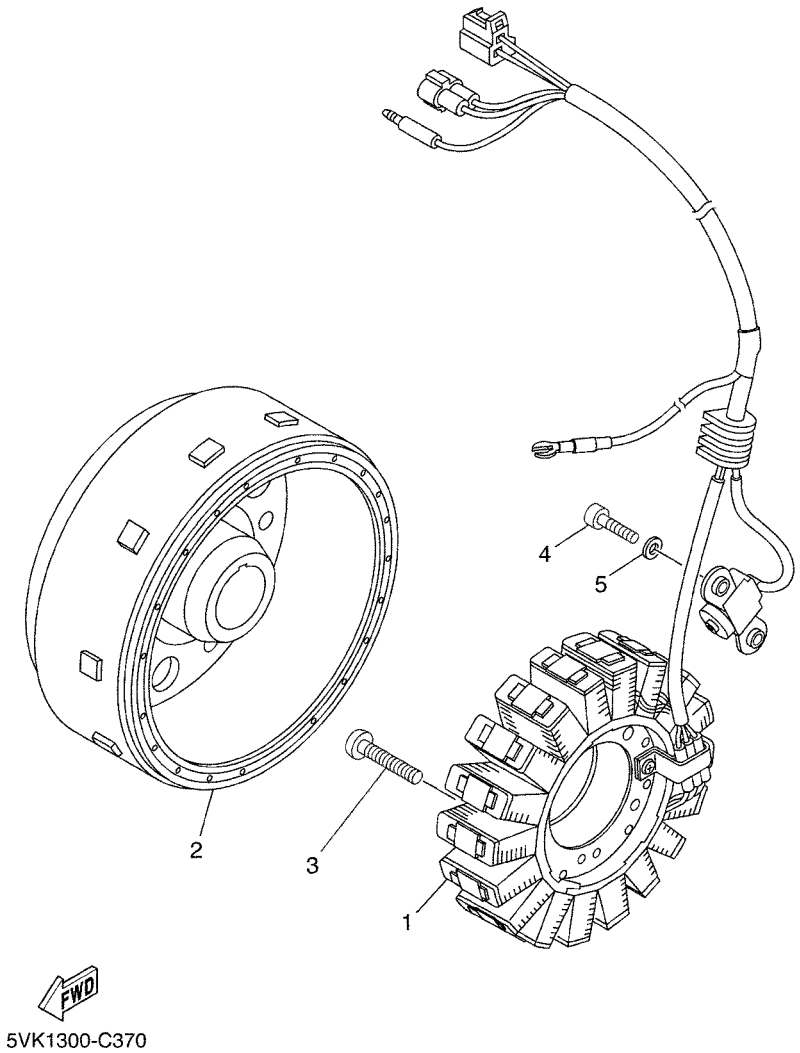


5VK1300-C370


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VK–81410–00 | STATOR ASSY | 1 | 1 | 1 | | | |
| 2 | 5VK–81450–10 | ROTOR ASSY | 1 | 1 | 1 | | | |
| 3 | 92017–06030 | BOLT, BUTTON HEAD | 3 | 3 | 3 | | | |
| 4 | 91317–05014 | BOLT | 2 | 2 | 2 | | | |
| 5 | 90201–05X08 | WASHER, PLATE | 2 | 2 | 2 | | | |

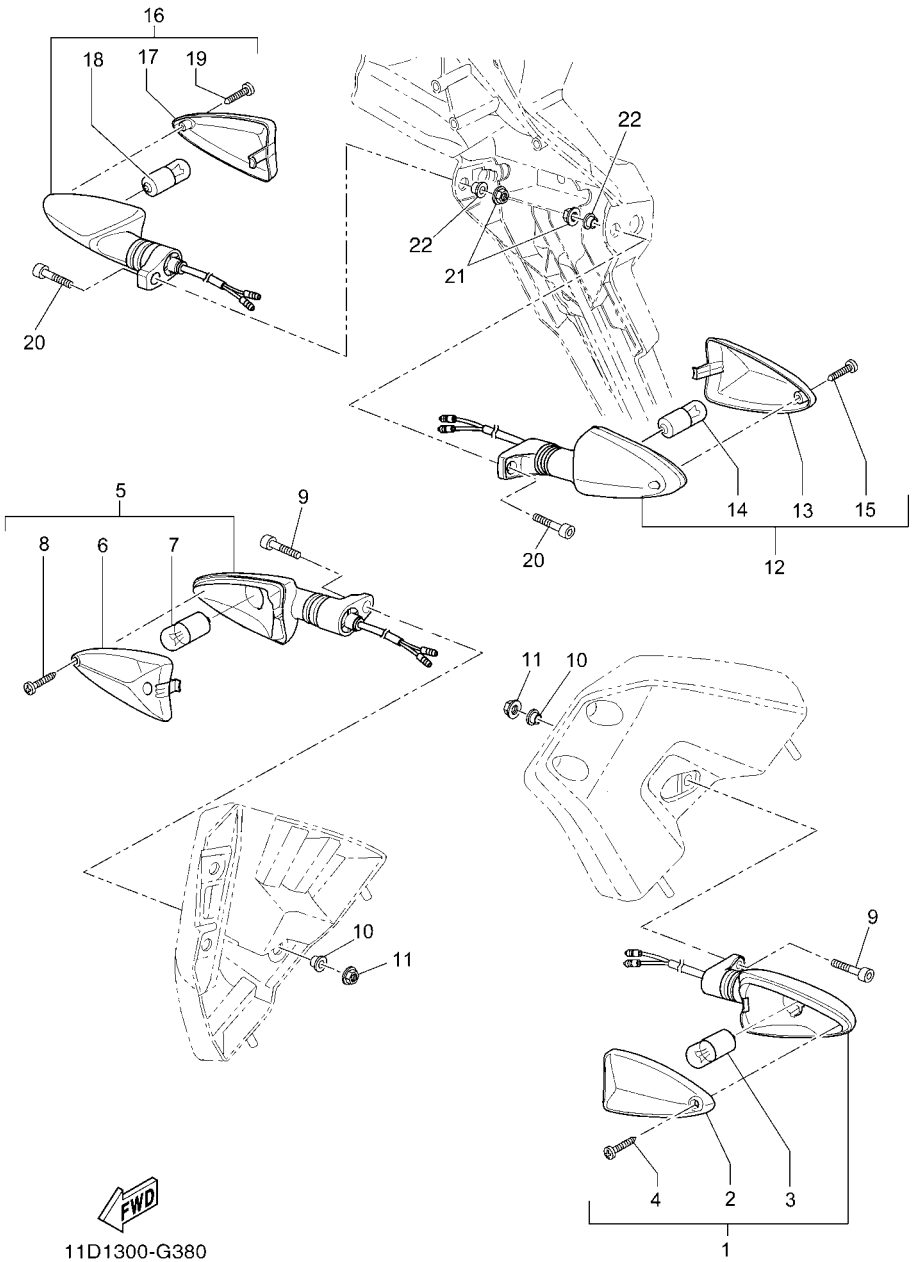



## FIG. 38 FLASHER LIGHT

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–H3310–10 | FRONT FLASHER LIGHT ASSY 1 | 1 | 1 | 1 | | | |
| 2 | 22B–H3312–00 | .LENS, FLASHER | 1 | 1 | 1 | | | |
| 3 | 5VK–H3311–00 | .BULB, FLASHER (12V/10W) | 1 | 1 | 1 | | | |
| 4 | 97780–30116 | .SCREW, TAPPING | 1 | 1 | 1 | | | |
| 5 | 11D–H3320–10 | FRONT FLASHER LIGHT ASSY 2 | 1 | 1 | 1 | | | |
| 6 | 22B–H3322–00 | .LENS, FLASHER 2 | 1 | 1 | 1 | | | |
| 7 | 5VK–H3311–00 | .BULB, FLASHER (12V/10W) | 1 | 1 | 1 | | | |
| 8 | 97780–30116 | .SCREW, TAPPING | 1 | 1 | 1 | | | |
| 9 | 9131M–06020 | BOLT | 2 | 2 | 2 | | | |
| 10 | 90387–06X01 | COLLAR | 2 | 2 | 2 | | | |
| 11 | 90185–06837 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |
| 12 | 11D–H3330–10 | REAR FLASHER LIGHT ASSY 1 | 1 | 1 | 1 | | | |
| 13 | 22B–H3322–00 | .LENS, FLASHER 2 | 1 | 1 | 1 | | | |
| 14 | 5VK–H3311–00 | .BULB, FLASHER (12V/10W) | 1 | 1 | 1 | | | |
| 15 | 97780–30116 | .SCREW, TAPPING | 1 | 1 | 1 | | | |
| 16 | 11D–H3340–10 | REAR FLASHER LIGHT ASSY 2 | 1 | 1 | 1 | | | |
| 17 | 22B–H3312–00 | .LENS, FLASHER | 1 | 1 | 1 | | | |
| 18 | 5VK–H3311–00 | .BULB, FLASHER (12V/10W) | 1 | 1 | 1 | | | |
| 19 | 97780–30116 | .SCREW, TAPPING | 1 | 1 | 1 | | | |
| 20 | 9131M–06020 | BOLT | 2 | 2 | 2 | | | |
| 21 | 90185–06837 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |
| 22 | 90387–06M31 | COLLAR | 2 | 2 | 2 | | | |

## FIG. 39 METER

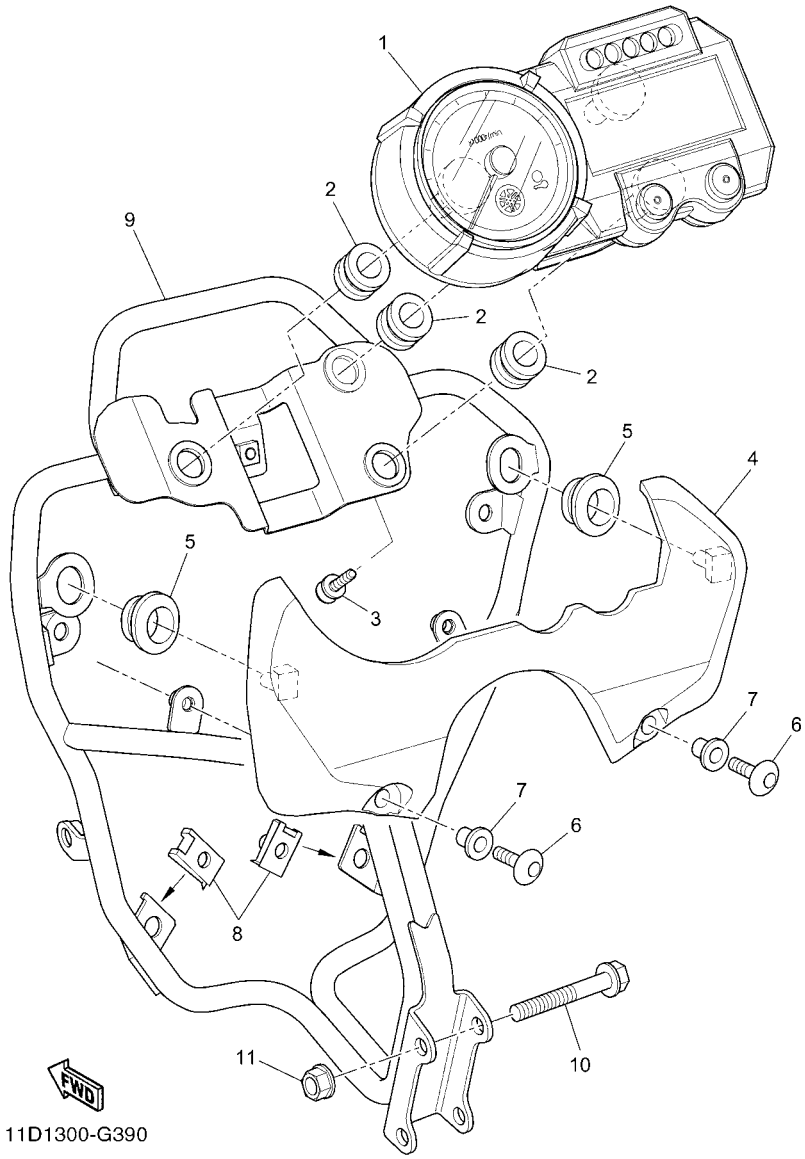


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–H3500–00 | METER ASSY | 1 | 1 | 1 | | | |
| 2 | 5CH–H3523–00 | DAMPER | 3 | 3 | 3 | | | |
| 3 | 90164–05014 | SCREW, TAPPING | 3 | 3 | 3 | | | |
| 4 | 11D–F836K–00 | PANEL, INNER 1 | 1 | 1 | 1 | | | |
| 5 | 90480–01558 | GROMMET | 2 | 2 | 2 | | | |
| 6 | 90111–06X17 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 7 | 90387–06X38 | COLLAR | 2 | 2 | 2 | | | |
| 8 | 2VW–F1736–00 | NUT,PLATE | 2 | 2 | 2 | | | |
| 9 | 11D–F8356–00 | STAY 1 | 1 | 1 | 1 | | | |
| 10 | 95817–08045 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 11 | 95607–08200 | NUT, SELF-LOCKING | 2 | 2 | 2 | | | |

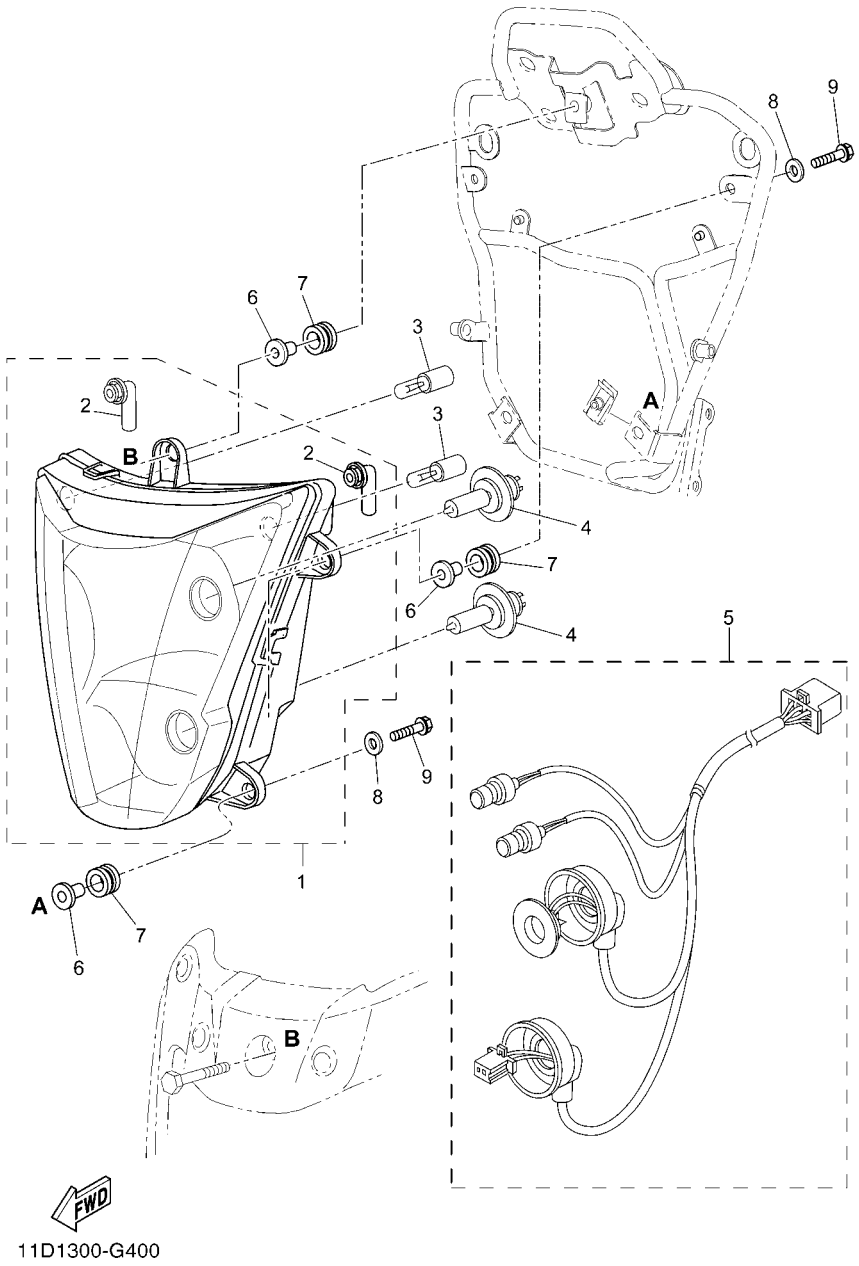



11D1300-G400


## FIG. 40 HEADLIGHT

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–H410A–00 | HEADLIGHT UNIT COMP. | 1 | 1 | 1 | | | |
| 2 | 5JN–H4352–00 | .GROMMET | 2 | 2 | 2 | | | |
| 3 | 5B2–H4314–00 | BULB, HEADLIGHT (H7, 12V-55W) | 2 | 2 | 2 | | | |
| 4 | 5B2–H4301–00 | PILOT LIGHT ASSY 1 | 2 | 2 | 2 | | | |
| 5 | 11D–H4312–00 | CORD ASSY | 1 | 1 | 1 | | | |
| 6 | 90387–068L3 | COLLAR | 5 | 5 | 5 | | | |
| 7 | 90480–14023 | GROMMET | 5 | 5 | 5 | | | |
| 8 | 9290M–06200 | WASHER | 2 | 2 | 2 | | | |
| 9 | 95817–06035 | BOLT, FLANGE | 4 | 4 | 4 | | | |

## FIG. 41 TAILLIGHT

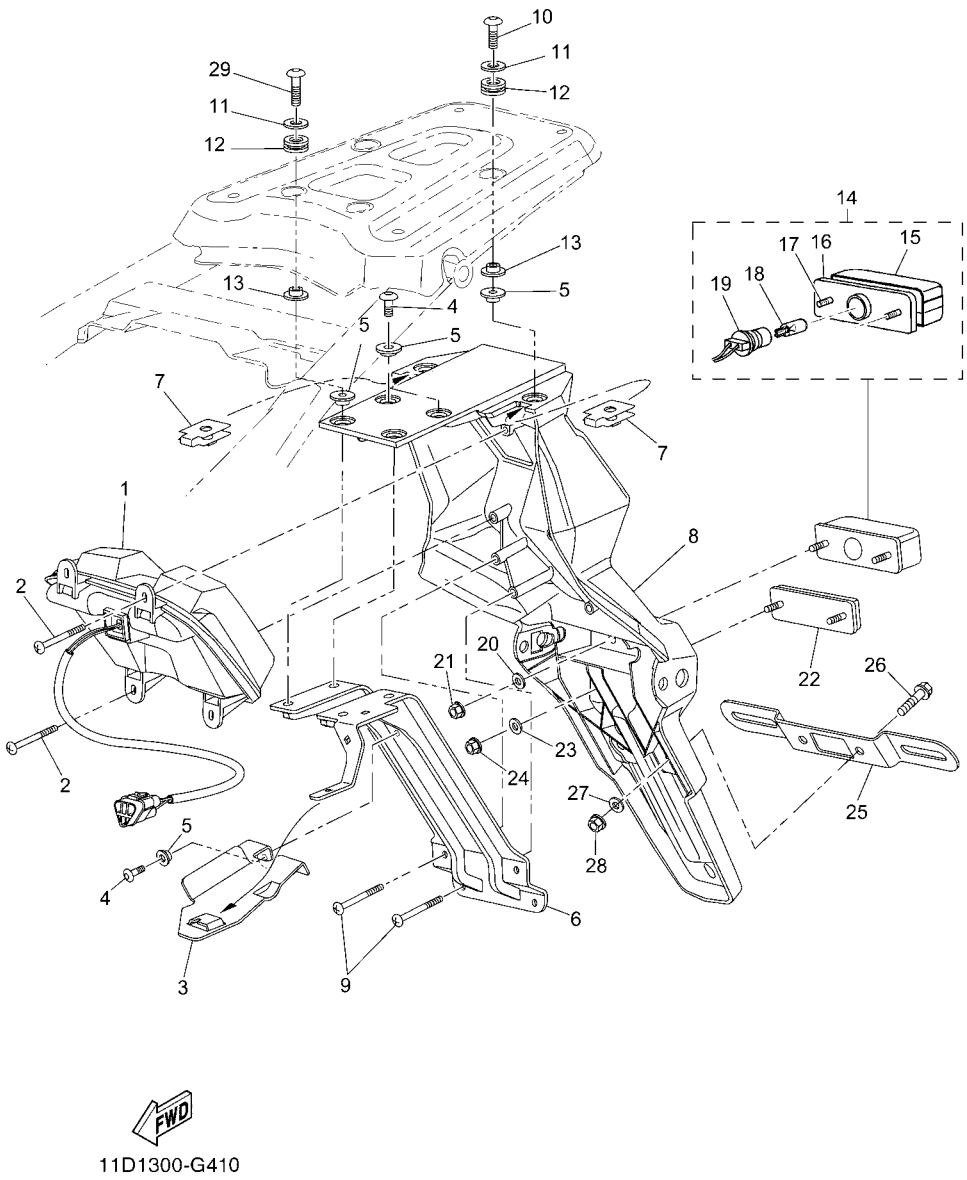



| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–H4710–00 | TAILLIGHT UNIT ASSY | 1 | 1 | 1 | | | |
| 2 | 97707–40012 | SCREW, TAPPING | 4 | 4 | 4 | | | |
| 3 | 11D–H2589–01 | PROTECTER, WIRE HARNESS | 1 | 1 | 1 | | | |
| 4 | 9201L–06014 | BOLT, BUTTON HEAD | 3 | 3 | 3 | | | |
| 5 | 90387–06X41 | COLLAR | 7 | 7 | 7 | | | |
| 6 | 11D–F1670–01 | REINF. COMP. | 1 | 1 | 1 | | | |
| 7 | 47X–21736–01 | NUT,PLATE | 2 | 2 | 2 | | | |
| 8 | 11D–F1685–00 | BRACKET, LICENSE | 1 | 1 | 1 | | | |
| 9 | 97707–40020 | SCREW, TAPPING | 4 | 4 | 4 | | | |
| 10 | 92017–06020 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |
| 11 | 90201–06X14 | WASHER, PLATE | 4 | 4 | 4 | | | |
| 12 | 90480–11006 | GROMMET | 4 | 4 | 4 | | | |
| 13 | 90387–06X42 | COLLAR | 4 | 4 | 4 | | | |
| 14 | 11D–H4745–00 | LICENCE LIGHT UNIT ASSY | 1 | 1 | 1 | | | |
| 15 | 5YK–H4749–00 | .BODY, LICENCE LIGHT | 1 | 1 | 1 | | | |
| 16 | 5YK–H4741–00 | .BASE, LICENCE LIGHT | 1 | 1 | 1 | | | |
| 17 | 9770L–30110 | .SCREW, TAPPING | 2 | 2 | 2 | | | |
| 18 | * | .BULB (12V-5W) | 1 | 1 | 1 | | | LM |
| 19 | 11D–H4547–00 | .CORD, LICENCE LIGHT | 1 | 1 | 1 | | | |
| 20 | 9290L–05200 | WASHER | 2 | 2 | 2 | | | |
| 21 | 9570L–05300 | NUT, FLANGE | 2 | 2 | 2 | | | |
| 22 | 5YK–H5130–00 | REAR REFLECTOR ASSY | 1 | 1 | 1 | | | |
| 23 | 92907–04200 | WASHER | 2 | 2 | 2 | | | |
| 24 | 9570L–04300 | NUT, FLANGE | 2 | 2 | 2 | | | |
| 25 | 3SH–H4551–00 | BRACKET, LICENCE | 1 | 1 | 1 | | | |
| 26 | 9581M–06016 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 27 | 90201–06X14 | WASHER, PLATE | 2 | 2 | 2 | | | |

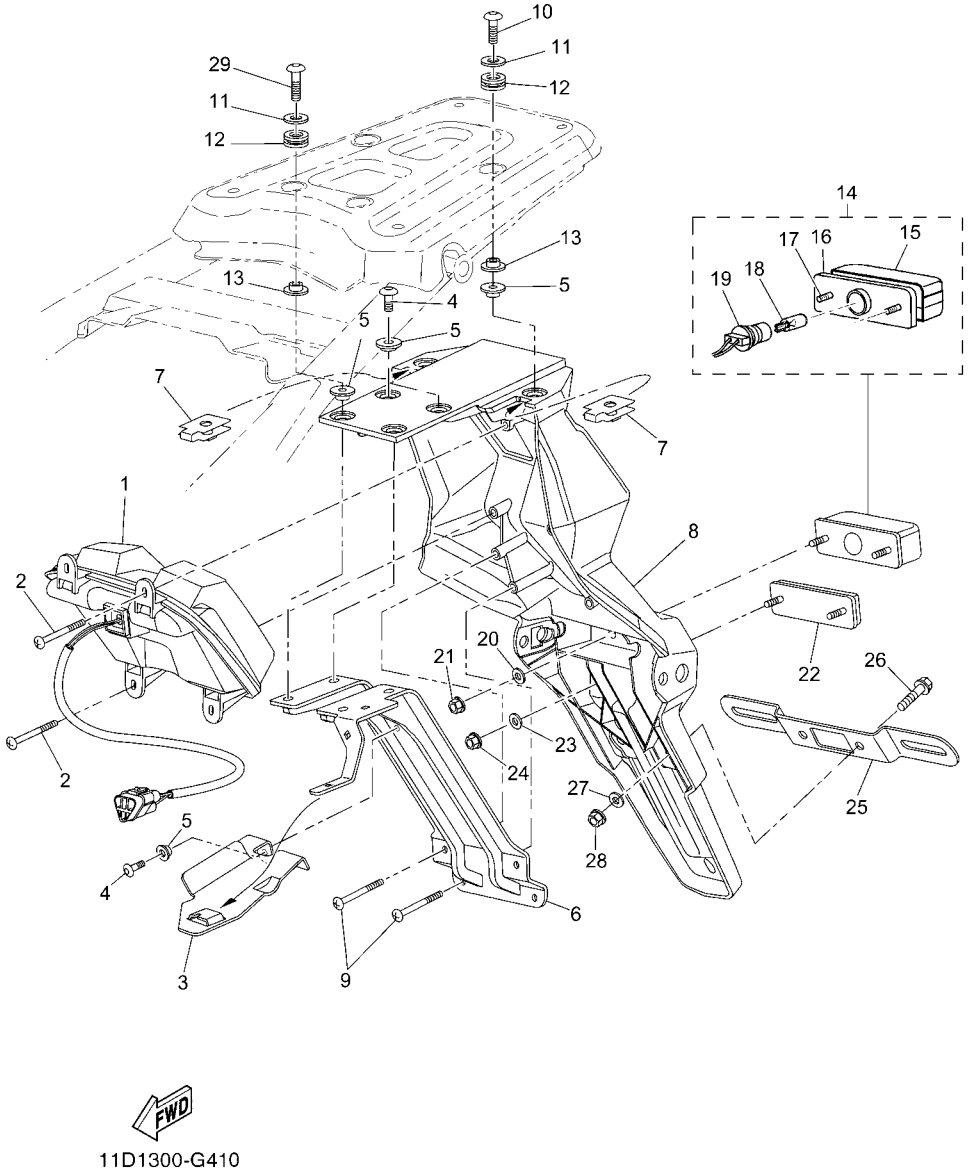


11D1300-G410

**FIG. 41 TAILLIGHT**

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 9571L–06300 | NUT, FLANGE | 2 | 2 | 2 | | | |
| 29 | 9201L–06025 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |

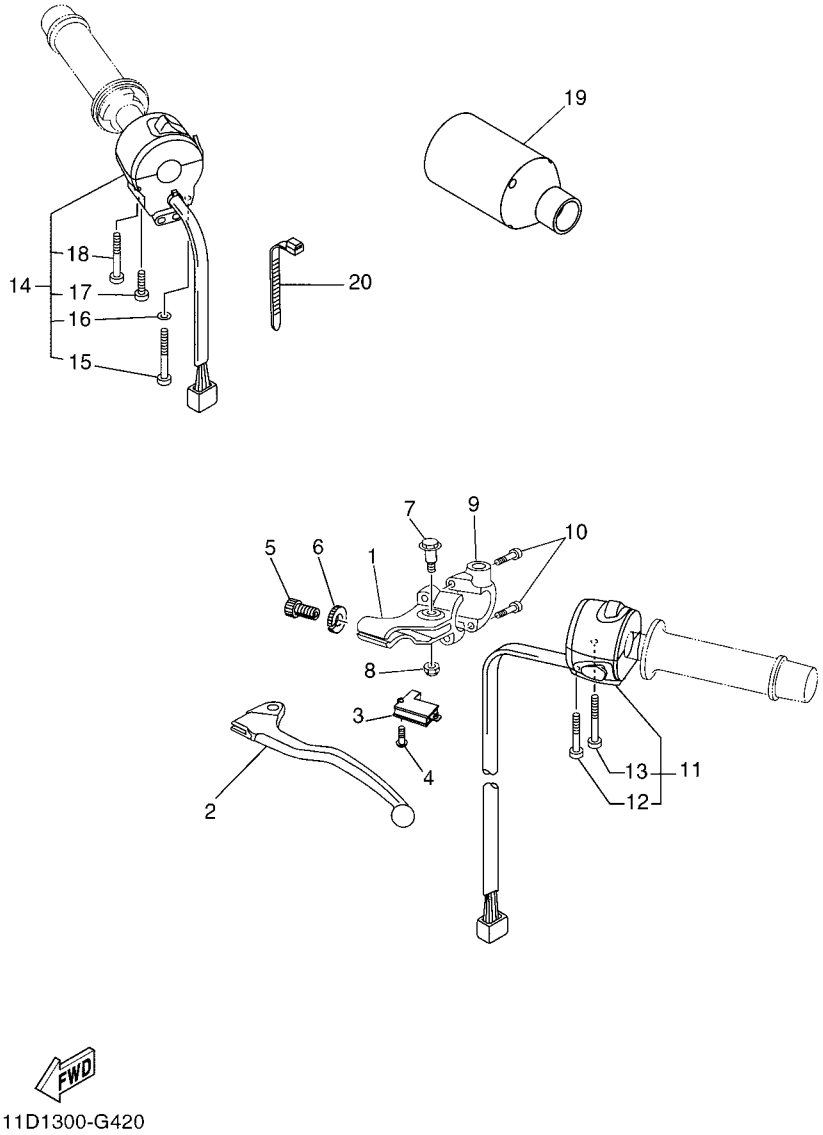



11D1300-G420

## FIG. 42 HANDLE SWITCH & LEVER

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 11D–H2911–00 | HOLDER, LEVER 1 | 1 | 1 | 1 | | | |
| 2 | 11D–H3912–00 | LEVER 1 | 1 | 1 | 1 | | | |
| 3 | 3YX–82917–01 | SWITCH | 1 | 1 | 1 | | | |
| 4 | 98707–03020 | SCREW, FLAT HEAD | 1 | 1 | 1 | | | |
| 5 | 11D–H3951–00 | BOLT, CABLE ADJUSTING | 1 | 1 | 1 | | | |
| 6 | 5D7–H3927–00 | NUT, ADJUSTING | 1 | 1 | 1 | | | |
| 7 | 5D7–H3945–00 | BOLT, LEVER | 1 | 1 | 1 | | | |
| 8 | 90185–06837 | NUT, SELF-LOCKING | 1 | 1 | 1 | | | |
| 9 | 11D–H2913–00 | HOLDER, LEVER LOWER 1 | 1 | 1 | 1 | | | |
| 10 | 11D–H3546–00 | BOLT | 2 | 2 | 2 | | | |
| 11 | 5VK–83969–00 | SWITCH, HANDLE 5 | 1 | 1 | 1 | | | |
| 12 | 98507–05030 | .SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 13 | 98507–05045 | .SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 14 | 5VK–83975–00 | SWITCH, HANDLE 2 | 1 | 1 | 1 | | | |
| 15 | 98507–05055 | .SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 16 | 92907–05600 | .WASHER, PLATE | 1 | 1 | 1 | | | |
| 17 | 98507–05045 | .SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 18 | 98507–05020 | .SCREW, PAN HEAD | 1 | 1 | 1 | | | |
| 19 | 11D–H1662–00 | COVER, CONNECTER | 1 | 1 | 1 | | | |
| 20 | 90464–25004 | CLAMP | 4 | 4 | 4 | | | |

## FIG. 43 ELECTRICAL 1

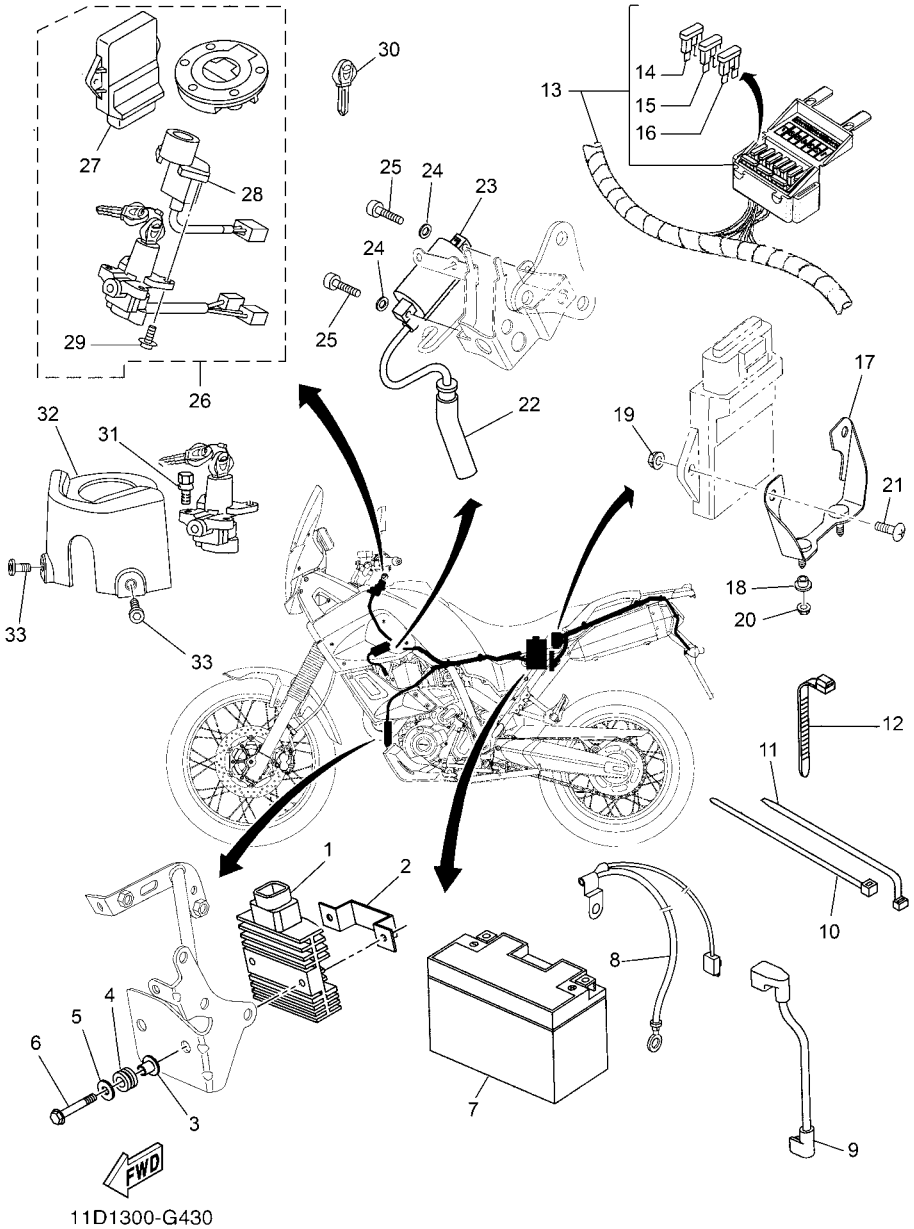


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 4XY–81960–00 | RECTIFIER & REGULATOR ASSY | 1 | 1 | 1 | | | |
| 2 | 11D–F1287–00 | BRACKET, REGULATOR | 1 | 1 | 1 | | | |
| 3 | 90387–06042 | COLLAR | 2 | 2 | 2 | | | |
| 4 | 90480–15363 | GROMMET | 2 | 2 | 2 | | | |
| 5 | 90201–06072 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 6 | 95807–06040 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 7 | 5FL–82100–01 | BATTERY ASSY (GT9B-4) | 1 | 1 | 1 | | | |
| 8 | 11D–H2116–00 | WIRE, MINUS LEAD | 1 | 1 | 1 | | | |
| 9 | 5YK–82115–00 | WIRE, PLUS LEAD | 1 | 1 | 1 | | | |
| 10 | 4GV–H3936–00 | BAND, SWITCH CORD | 11 | 11 | 11 | | | |
| 11 | 2AJ–F3192–50 | BAND | 15 | 15 | 15 | | | |
| 12 | 90464–25004 | CLAMP | 2 | 2 | 2 | | | |
| 13 | 11D–H2590–00 | WIRE HARNESS ASSY | 1 | 1 | 1 | | | |
| 14 | 5JJ–82151–00 | .FUSE (7.5A-BL) | 2 | 2 | 2 | | | |
| 15 | 5JJ–82151–30 | .FUSE (10A-BL) | 6 | 6 | 6 | | | |
| 16 | 5JJ–82151–20 | .FUSE (20A-BL) | 2 | 2 | 2 | | | |
| 17 | 11D–H5991–00 | BRACKET, UNIT | 1 | 1 | 1 | | | |
| 18 | 90387–06202 | COLLAR | 2 | 2 | 2 | | | |
| 19 | 9570L–06500 | NUT, FLANGE | 2 | 2 | 2 | | | |
| 20 | 95607–06200 | NUT, SELF U-FLANGE | 2 | 2 | 2 | | | |
| 21 | 90111–06X19 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |
| 22 | 5VK–82370–00 | PLUG CAP ASSY | 1 | 1 | 1 | | | |
| 23 | 4GV–82310–00 | IGNITION COIL ASSY | 1 | 1 | 1 | | | |
| 24 | 9290M–05600 | WASHER | 2 | 2 | 2 | | | |
| 25 | 9131M–05020 | BOLT | 2 | 2 | 2 | | | |
| 26 | 11D–W8250–00 | MAIN SW. IMMOBILIZER KIT | 1 | 1 | 1 | | | |
| 27 | 11D–8591A–00 | .ENGINE CONTROL UNIT ASSY | 1 | 1 | 1 | | | |


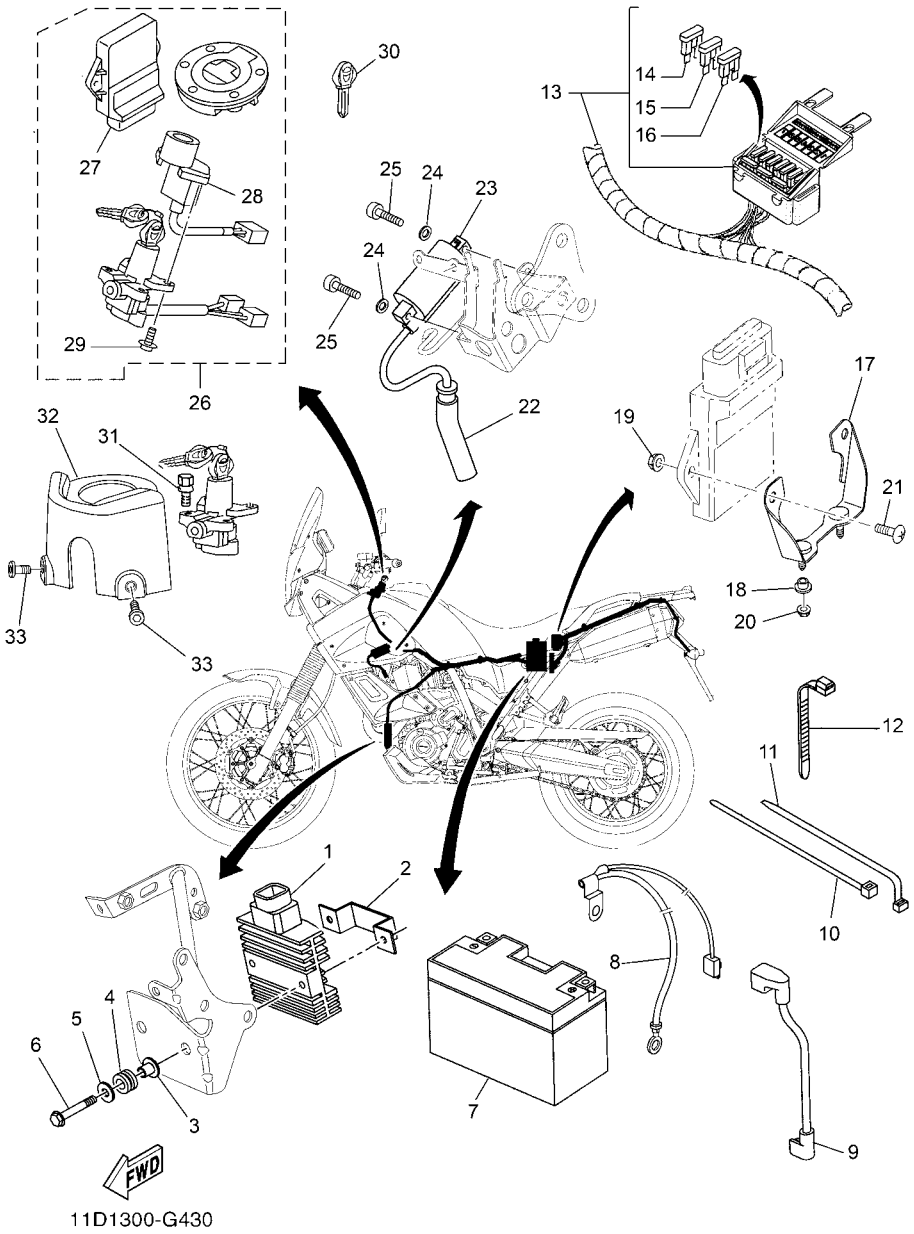




**FIG. 43 ELECTRICAL 1**

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5YK–8255P–00 | .IMMOBILIZER. UNIT COMP. | 1 | 1 | 1 | | | |
| 29 | 5SL–82113–01 | .SCREW | 2 | 2 | 2 | | | |
| 30 | 5SL–82511–08 | BLANK KEY | 1 | 1 | 1 | | | AP |
| 31 | 90109–080G5 | BOLT | 2 | 2 | 2 | | | |
| 32 | 11D–H2568–00 | COVER, MAIN SWITCH | 1 | 1 | 1 | | | |
| 33 | 90111–05011 | BOLT,HEX. SOCKET BUTTON | 2 | 2 | 2 | | | |

## FIG. 44 ELECTRICAL 2

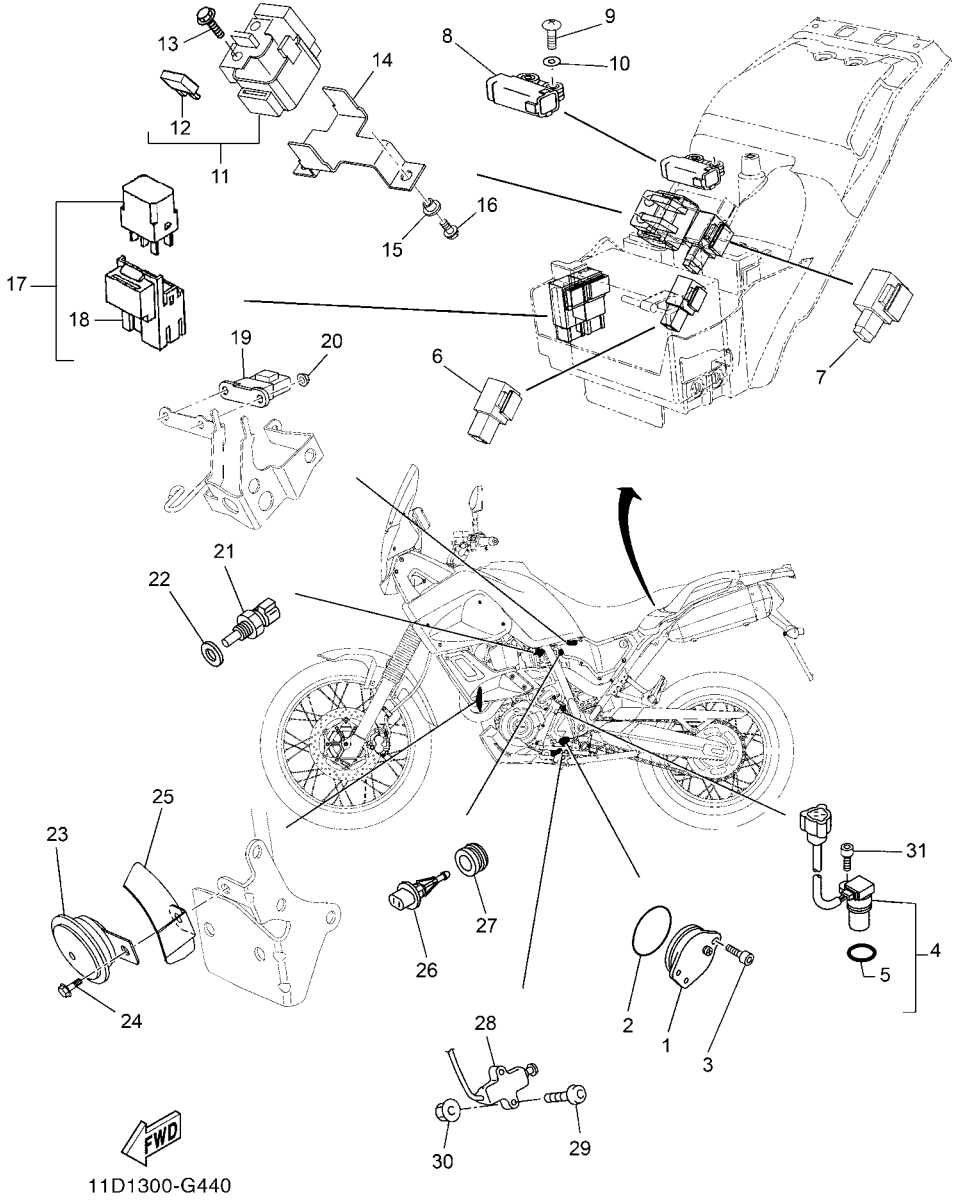


| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1AE–82540–00 | NEUTRAL SWITCH ASSY | 1 | 1 | 1 | | | |
| 2 | 93210–29X00 | O-RING | 1 | 1 | 1 | | | |
| 3 | 90110–06122 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | 2 | | | |
| 4 | 11D–83755–00 | SENSOR, SPEED | 1 | 1 | 1 | | | |
| 5 | 4D9–81168–00 | .O-RING | 1 | 1 | 1 | | | |
| 6 | 4GY–83350–00 | FLASHER RELAY ASSY | 1 | 1 | 1 | | | |
| 7 | 5VK–81950–40 | RELAY ASSY | 1 | 1 | 1 | | | |
| 8 | 2S5–H2576–00 | SENSOR, LEAN ANGLE | 1 | 1 | 1 | | | |
| 9 | 97707–40025 | SCREW, TAPPING | 2 | 2 | 2 | | | |
| 10 | 90201–047A2 | WASHER, PLATE | 2 | 2 | 2 | | | |
| 11 | 4SV–81940–12 | STARTER RELAY ASSY | 1 | 1 | 1 | | | |
| 12 | 1AE–82151–00 | .FUSE (30A-BL) | 2 | 2 | 2 | | | |
| 13 | 95027–06008 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 14 | 11D–H1953–00 | STAY, RELAY | 1 | 1 | 1 | | | |
| 15 | 90387–06202 | COLLAR | 2 | 2 | 2 | | | |
| 16 | 9581M–06014 | BOLT, FLANGE | 2 | 2 | 2 | | | |
| 17 | 5EA–81950–20 | RELAY ASSY | 2 | 2 | 2 | | | |
| 18 | 5EA–81952–00 | .HOLDER, RELAY | 1 | 1 | 1 | | | |
| 19 | 5PS–82380–00 | SENSOR, PRESSURE | 1 | 1 | 1 | | | |
| 20 | 9571L–06300 | NUT, FLANGE | 2 | 2 | 2 | | | |
| 21 | 5PS–85790–00 | THERMOSENSOR ASSY | 1 | 1 | 1 | | | |
| 22 | 90430–12X00 | GASKET | 1 | 1 | 1 | | | |
| 23 | 5VK–H3371–00 | HORN | 1 | 1 | 1 | | | |
| 24 | 9581M–06012 | BOLT, FLANGE | 1 | 1 | 1 | | | |
| 25 | 11D–H3376–00 | COVER, HORN | 1 | 1 | 1 | | | |
| 26 | 5VU–85886–00 | SENSOR, AIR TEMPRATURE | 1 | 1 | 1 | | | |
| 27 | 5CA–14435–00 | GROMMET | 1 | 1 | 1 | | | |

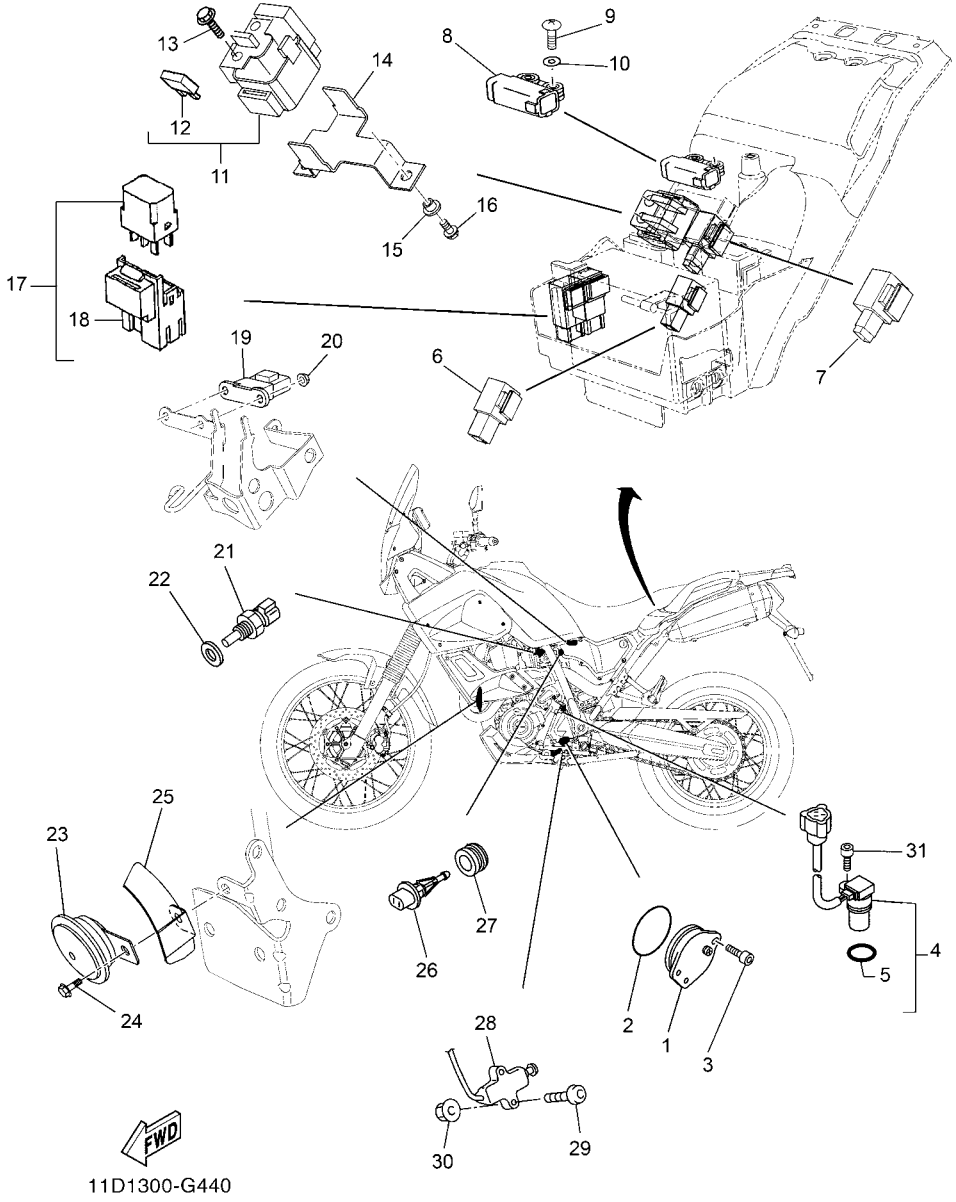


## FIG. 44 ELECTRICAL 2

| REF. NO. | PART NO. | DESCRIPTION | 010 | 020 | 030 | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VS–82566–61 | SWITCH, SIDE STAND | 1 | 1 | 1 | | | |
| 29 | 92017–05025 | BOLT, BUTTON HEAD | 2 | 2 | 2 | | | |
| 30 | 95607–05200 | NUT, U FLANGE | 2 | 2 | 2 | | | |
| 31 | 91317–06014 | BOLT | 1 | 1 | 1 | | | |

| PART NO. | REF. NO. |
|---|---|
| 4G0–11133–11 | 1 – 2 |
| 5VK–11181–00 | 1 – 5 |
| 214–11198–01 | 8 – 14 |
| 5VK–11311–00 | 2 – 1 |
| 5VK–11351–00 | 2 – 2 |
| 5VK–11400–00 | 3 – 1 |
| 5VK–11401–09 | 3 – 2 |
| 5VK–11422–00 | 3 – 3 |
| 5VK–11603–00 | 3 – 12 |
| 5VK–11631–00 | 3 – 11 |
| 5VK–11633–00 | 3 – 13 |
| 5VK–11651–00 | 3 – 6 |
| 5VK–11681–00 | 3 – 4 |
| 5VK–12111–00 | 4 – 1 |
| 5VK–12113–00 | 4 – 3 |
| 3YF–12116–00 | 4 – 4 |
| 3YF–12117–01 | 4 – 6 |
| 4G0–12118–00 | 4 – 7 |
| 5H0–12119–00 | 4 – 5 |
| 5VK–12121–00 | 4 – 2 |
| 5VK–12146–00 | 4 – 10 |
| 5BP–12159–01 | 4 – 11 |
| 4DW–12213–00 | 5 – 15 |
| 5VK–12280–01 | 5 – 5 |
| 5VK–12284–00 | 5 – 3 |
| 5VK–12290–00 | 5 – 4 |
| 5VK–12410–00 | 7 – 1 |
| 5VK–12421–00 | 6 – 6 |
| 5VK–12422–00 | 6 – 3 |
| 5VK–12428–00 | 6 – 11 |
| 11H–12438–10 | 6 – 9 |
| 5VK–12450–00 | 6 – 2 |
| 5VK–12459–00 | 6 – 14 |
| 5VK–12481–00 | 6 – 19 |
| 583–13113–00 | 8 – 32 |
| 5VK–13160–00 | 10 – 2 |
| 5VK–13161–00 | 8 – 25 |
| 5VK–13171–00 | 8 – 28 |
| 5LP–13300–00 | 8 – 1 |
| 3AJ–13325–00 | 8 – 5 |
| 5LP–13329–00 | 8 – 2 |
| 11D–13405–00 | 8 – 40 |
| 4X7–13440–01 | 8 – 17 |
| 2WK–13447–00 | 8 – 18 |
| 5VK–13464–00 | 8 – 35 |
| 11D–13467–00 | 8 – 39 |
| 5YK–13750–11 | 10 – 1 |
| 5VK–13761–00 | 10 – 8 |
| 11D–13907–01 | 26 – 16 |
| 5YK–13971–00 | 26 – 32 |
| 5PS–14147–00 | 10 – 9 |
| 8CC–14216–10 | 10 – 5 |
| 5CA–14435–00 | 44 – 27 |
| 5VK–14503–00 | 10 – 6 |
| 5VK–14531–00 | 10 – 7 |
| 3YF–14613–01 | 12 – 9 |
| 4EL–14714–00 | 12 – 6 |
| 5VK–14803–00 | 11 – 1 |
| 5VK–14815–00 | 11 – 3 |
| 5VK–14871–02 | 11 – 2 |
| 5VK–15455–00 | 14 – 35 |
| 3YF–15515–00 | 15 – 1 |
| 5VK–15590–00 | 15 – 8 |
| 2JN–16154–00 | 16 – 14 |
| 22U–16321–00 | 16 – 11 |
| 5TA–16321–00 | 16 – 18 |
| 4X7–16325–00 | 16 – 10 |
| 5VK–16331–00 | 16 – 15 |
| 5VK–16340–00 | 16 – 22 |
| 132–16346–00 | 18 – 10 |
| 5VK–16351–00 | 16 – 8 |
| 4XV–16356–01 | 16 – 21 |
| 5VK–16371–00 | 16 – 7 |
| 5JG–16383–00 | 16 – 16 |
| 5JG–16384–00 | 16 – 17 |
| 5VK–18101–00 | 19 – 1 |
| 5VK–18127–00 | 18 – 12 |
| 5JW–18140–00 | 18 – 11 |
| 5VK–18540–00 | 18 – 1 |
| 4UN–18542–00 | 18 – 3 |
| 4UN–18566–00 | 18 – 4 |
| 2J5–21732–00 | 20 – 13 |
| 47X–21736–01 | 41 – 7 |
| 4YR–22141–10 | 22 – 30 |
| 10V–22178–00 | 20 – 19 |
| 30X–22178–00 | 20 – 24 |
| 10V–22184–00 | 20 – 20 |
| 30X–2219X–00 | 22 – 5 |
| 1C3–22969–10 | 22 – 25 |
| 3XJ–23125–L0 | 25 – 10 |
| | 25 – 31 |
| 4DA–23144–L0 | 25 – 14 |
| | 25 – 35 |
| 4DA–23145–L0 | 25 – 11 |
| | 25 – 32 |
| 3XJ–23171–L0 | 25 – 5 |
| 3XJ–23171–L0 | 25 – 26 |
| 4V4–23188–L0 | 25 – 17 |
| | 25 – 38 |
| 1W1–23416–00 | 24 – 3 |
| 3YF–23418–00 | 24 – 6 |
| 1E6–23441–10–35 | 24 – 11 |
| 3AJ–23442–00–35 | 24 – 12 |
| 5JW–24486–00 | 26 – 18 |
| 11D–24602–00 | 26 – 3 |
| 5VK–25181–00 | 28 – 12 |
| 5VK–25311–00 | 30 – 1 |
| 5Y1–25364–00 | 30 – 12 |
| 5VK–25366–00 | 30 – 5 |
| 1VJ–25377–00 | 30 – 7 |
| 10S–25381–00 | 30 – 20 |
| 3HT–25398–00 | 28 – 10 |
| | 30 – 18 |
| 5VK–25445–01 | 30 – 10 |
| 4ML–2582A–50 | 35 – 13 |
| 5VK–2583V–00 | 35 – 9 |
| 5VS–25852–00 | 33 – 3 |
| 3XP–25852–50 | 35 – 25 |
| 20S–25854–00 | 33 – 5 |
| 2VN–25854–00 | 35 – 26 |
| 2VN–25855–00 | 35 – 27 |
| 5VS–25855–00 | 33 – 4 |
| 2VN–25866–00 | 35 – 12 |
| 5VS–25867–00 | 33 – 11 |
| 5JJ–25894–01 | 35 – 24 |
| 11D–25895–00 | 35 – 28 |
| 5VS–2589F–00 | 33 – 7 |
| 5VS–2589H–00 | 33 – 6 |
| 4YR–26240–02 | 32 – 2 |
| 4YR–26241–02 | 32 – 3 |
| 5VS–26332–00 | 33 – 10 |
| 1E6–26342–00 | 32 – 5 |
| 4SS–27218–00 | 35 – 15 |
| 2YK–27222–00 | 35 – 14 |
| 3KW–27234–00 | 35 – 16 |
| 3LD–27411–01 | 34 – 9 |
| 3LD–27413–00 | 34 – 10 |
| | 34 – 19 |
| 3LD–27421–01 | 34 – 18 |
| 5JJ–27437–01 | 34 – 31 |
| | 34 – 41 |
| 4D9–81168–00 | 44 – 5 |
| 5VK–81410–00 | 37 – 1 |
| 5VK–81450–10 | 37 – 2 |
| 4SV–81940–12 | 44 – 11 |
| 5EA–81950–20 | 44 – 17 |
| 5VK–81950–40 | 44 – 7 |
| 5EA–81952–00 | 44 – 18 |
| 4XY–81960–00 | 43 – 1 |
| 5FL–82100–01 | 43 – 7 |
| 5SL–82113–01 | 43 – 29 |
| 5YK–82115–00 | 43 – 9 |
| 1AE–82151–00 | 44 – 12 |
| 5JJ–82151–00 | 43 – 14 |
| 5JJ–82151–20 | 43 – 16 |
| 5JJ–82151–30 | 43 – 15 |
| 4GV–82310–00 | 43 – 23 |
| 5VK–82370–00 | 43 – 22 |
| 5PS–82380–00 | 44 – 19 |
| 5SL–82511–08 | 43 – 30 |
| 1AE–82540–00 | 44 – 1 |
| 5YK–8255P–00 | 43 – 28 |
| 5VS–82566–61 | 44 – 28 |
| 3YX–82917–01 | 42 – 3 |
| 4GY–83350–00 | 44 – 6 |
| 11D–83755–00 | 44 – 4 |
| 5VS–83922–00 | 33 – 9 |
| 5VK–83969–00 | 42 – 11 |
| 5VK–83975–00 | 42 – 14 |
| 4HM–83980–00 | 33 – 12 |
| 5PS–85790–00 | 44 – 21 |
| 3P6–85885–00 | 10 – 10 |
| 5VU–85886–00 | 44 – 26 |
| 11D–8591A–00 | 43 – 27 |
| 1B9–8592A–00 | 12 – 2 |
| 5VK–E1101–00 | 1 – 1 |
| 11D–E111B–00 | 12 – 27 |
| 5VK–E111F–00 | 5 – 6 |
| 11D–E112B–00 | 12 – 38 |
| 11D–E113B–00 | 12 – 13 |
| 11D–E113B–10 | 12 – 15 |
| 5YK–E1166–00 | 13 – 13 |
| 11D–E1167–00 | 9 – 19 |
| 5VK–E1185–00 | 1 – 13 |
| 5VK–E1186–00 | 1 – 17 |
| 5VK–E1454–00 | 3 – 18 |
| 5VK–E1531–00 | 3 – 17 |
| 5VK–E1536–00 | 3 – 16 |
| 5VK–E2151–00 | 4 – 8 |
| 5VK–E2161–00 | 4 – 9 |
| 5VK–E2170–10 | 5 – 1 |
| 5VK–E2210–00 | 5 – 13 |
| 5VK–E2231–00 | 5 – 10 |
| 5VK–E2241–00 | 5 – 11 |
| 11D–E2405–00 | 7 – 8 |
| 11D–E240J–00 | 7 – 15 |
| 11D–E240K–00 | 7 – 30 |
| 5VK–E2413–00 | 7 – 2 |
| 5VK–E2436–00 | 6 – 1 |
| 5YK–E243A–00 | 9 – 30 |
| 5YK–E244G–00 | 9 – 22 |
| 11D–E2461–00 | 7 – 7 |
| 5VK–E2462–00 | 7 – 9 |
| 5VK–E2469–00 | 6 – 16 |
| 11D–E2498–00 | 7 – 24 |
| 5VK–E2577–00 | 6 – 22 |
| 11D–E2578–00 | 7 – 5 |
| 11D–E2579–00 | 7 – 14 |
| 5B2–E2623–00 | 7 – 11 |
| 11D–E2662–00 | 7 – 13 |
| 5B2–E2671–00 | 7 – 12 |
| 5B2–E2675–00 | 7 – 10 |
| 5VK–E3181–00 | 8 – 15 |
| 5VK–E3327–00 | 8 – 8 |
| 5VK–E3356–00 | 8 – 7 |
| 5VK–E3415–10 | 8 – 11 |
| 11D–E3542–00 | 9 – 26 |
| 11D–E3545–00 | 9 – 28 |
| 5VK–E3586–10 | 9 – 1 |
| 11D–E4411–00 | 9 – 8 |
| 11D–E441A–00 | 9 – 5 |
| 11D–E441E–00 | 9 – 13 |
| 11D–E4430–00 | 9 – 10 |
| 11D–E443E–00 | 9 – 15 |
| 11D–E4451–00 | 9 – 9 |
| 11D–E4452–00 | 9 – 7 |
| 11D–E4453–00 | 9 – 3 |
| 11D–E4457–00 | 9 – 14 |
| 5YK–E4611–10 | 12 – 1 |
| 5YK–E4612–00 | 12 – 7 |
| 5YK–E4621–00 | 12 – 5 |
| 11D–E4624–00 | 12 – 14 |
| 11D–E4628–00 | 12 – 12 |
| 11D–E4631–00 | 12 – 20 |
| 11D–E4648–00 | 12 – 33 |
| 11D–E4708–00 | 12 – 25 |
| 11D–E4708–10 | 12 – 36 |
| 11D–E4710–00 | 12 – 24 |
| 5YK–E4714–00 | 12 – 23 |
| 11D–E4715–00 | 12 – 21 |
| 11D–E4718–00 | 12 – 26 |
| 11D–E4728–00 | 12 – 37 |
| 5CH–E4766–00 | 12 – 19 |
| 11D–E4770–00 | 12 – 43 |
| 5YK–E477R–00 | 12 – 3 |
| 5YK–E477T–00 | 12 – 10 |
| 11D–E4787–00 | 12 – 28 |
| 11D–E4798–00 | 12 – 39 |
| 11D–E4881–00 | 11 – 5 |
| 11D–E4882–00 | 11 – 7 |
| 5VK–E5100–00 | 13 – 1 |
| 5VK–E5118–00 | 14 – 25 |
| 11D–E5199–00 | 15 – 23 |
| 11D–E5371–10 | 9 – 21 |
| 5VK–E5383–00 | 13 – 16 |
| 5VK–E5416–00 | 14 – 27 |
| 11D–E5421–00 | 14 – 16 |
| 5VK–E5431–00 | 14 – 19 |
| 5VK–E5441–01 | 14 – 23 |
| 5VK–E5451–10 | 14 – 2 |
| 5VK–E5453–10 | 14 – 28 |
| 5VK–E5462–10 | 14 – 20 |
| 11D–E5491–00 | 14 – 36 |
| 11D–E5492–01 | 13 – 12 |
| 5VK–E5511–00 | 15 – 12 |
| 5VK–E5517–00 | 15 – 5 |
| 5VK–E5522–00 | 15 – 4 |
| 5VK–E5560–00 | 15 – 6 |
| 5VK–E6111–00 | 16 – 1 |
| 5VK–E6150–00 | 16 – 6 |
| 5VK–E6382–00 | 16 – 24 |
| 5VK–E7121–00 | 17 – 10 |
| 5VK–E7131–00 | 17 – 5 |
| 5VK–E7141–00 | 17 – 2 |
| 5VK–E7141–10 | 17 – 2 |
| 5VK–E7151–00 | 17 – 6 |
| 5VK–E7151–10 | 17 – 6 |
| 5VK–E7211–00 | 17 – 22 |
| 5VK–E7221–00 | 17 – 14 |
| 5VK–E7231–00 | 17 – 18 |
| 5VK–E7241–00 | 17 – 21 |
| 5VK–E7251–00 | 17 – 17 |
| 5VK–E7401–00 | 17 – 1 |
| 5VK–E7402–00 | 17 – 13 |
| 5VK–E7460–10 | 17 – 32 |
| 5VK–E7466–00 | 14 – 17 |
| 5VK–E7471–00 | 17 – 29 |
| 11D–E8110–00 | 19 – 2 |

| PART NO. | REF. NO. |
|---|---|
| 5VK–E8113–00 | 19 – 3 |
| 5VK–E8144–00 | 18 – 9 |
| 5VK–E8501–00 | 18 – 6 |
| 5VK–E8502–00 | 18 – 7 |
| 5VK–E8503–00 | 18 – 8 |
| 5VK–E8699–00 | 18 – 20 |
| 11D–F1110–00–98 | 20 – 1 |
| 11D–F1165–00 | 25 – 49 |
| 5YK–F117B–A0 | 12 – 47 |
| 11D–F118W–10 | 20 – 27 |
| 11D–F1287–00 | 43 – 2 |
| 11D–F1315–00 | 20 – 17 |
| 11D–F1344–00 | 20 – 25 |
| 11D–F137W–00 | 26 – 20 |
| 11D–F137X–00 | 26 – 27 |
| 5YK–F1399–00 | 20 – 18 |
| 11D–F1400–00 | 20 – 6 |
| 11D–F1410–00 | 20 – 32 |
| 11D–F1471–00 | 20 – 9 |
| 11D–F1494–00 | 20 – 16 |
| 11D–F1511–00–P0 | 21 – 1 |
| 11D–F1511–00–P1 | 21 – 1 |
| 11D–F1511–00–P2 | 21 – 1 |
| 11D–F1568–00 | 26 – 37 |
| 11D–F1629–00 | 21 – 17 |
| 11D–F1670–01 | 41 – 6 |
| 11D–F1685–00 | 41 – 8 |
| 2VW–F1736–00 | 7 – 19 |
| | 12 – 35 |
| | 21 – 12 |
| | 36 – 5 |
| | 39 – 8 |
| 11D–F174A–01 | 21 – 8 |
| 11D–F174T–00 | 21 – 9 |
| 5VK–F1756–00 | 20 – 2 |
| 11D–F175H–00 | 27 – 22 |
| 11D–F1761–00 | 20 – 36 |
| 11D–F176B–00 | 27 – 13 |
| 5DS–F1771–00 | 7 – 33 |
| 11D–F1778–00 | 21 – 11 |
| 11D–F1779–00 | 21 – 10 |
| 11D–F177G–00 | 21 – 7 |
| 11D–F177M–00 | 20 – 29 |
| 11D–F177N–00 | 21 – 18 |
| 11D–F1823–00 | 22 – 26 |
| 11D–F1871–00 | 7 – 31 |
| 11D–F1873–00 | 7 – 37 |
| 11D–F2110–00 | 22 – 1 |
| 11D–F2123–00 | 22 – 7 |
| 11D–F2151–00 | 22 – 24 |
| 11D–F217A–00 | 22 – 14 |
| 5JN–F217M–00 | 22 – 15 |
| 11D–F2210–00 | 23 – 1 |
| 11D–F2311–00 | 22 – 28 |
| 11D–F3102–00 | 25 – 1 |
| 11D–F3103–00 | 25 – 22 |
| 11D–F3108–00 | 25 – 3 |
| | 25 – 24 |
| 11D–F3110–00 | 25 – 4 |
| | 25 – 25 |
| 11D–F3111–00 | 25 – 16 |
| | 25 – 37 |
| 11D–F3118–00 | 25 – 20 |
| | 25 – 41 |
| 11D–F3126–00 | 25 – 2 |
| 5VK–F3128–00 | 25 – 43 |
| 11D–F3136–00 | 25 – 23 |
| 11D–F3141–00 | 25 – 15 |
| | 25 – 36 |
| 11D–F3146–00 | 25 – 12 |
| | 25 – 33 |
| 5VK–F3149–00 | 25 – 21 |
| | 25 – 42 |
| 5VK–F3151–00 | 25 – 8 |
| | 25 – 29 |
| 5VK–F3153–00 | 25 – 13 |
| | 25 – 34 |
| 5VK–F3157–00 | 25 – 7 |
| | 25 – 28 |
| 5JH–F3158–00 | 25 – 18 |
| | 25 – 39 |
| 11D–F3170–00 | 25 – 6 |
| | 25 – 27 |
| 5VK–F3173–00 | 25 – 9 |
| | 25 – 30 |
| 5VK–F3181–00 | 25 – 19 |
| | 25 – 40 |
| 11D–F3191–00 | 25 – 46 |
| 11D–F3192–00 | 25 – 47 |
| 2AJ–F3192–50 | 20 – 31 |
| | 43 – 11 |
| 5VK–F3340–00 | 25 – 44 |
| 5SE–F3394–00 | 25 – 45 |
| 11D–F3430–00 | 24 – 9 |
| 11D–F4115–00 | 26 – 21 |
| 11D–F4116–00 | 26 – 26 |
| 11D–F412G–00 | 26 – 29 |
| 11D–F413B–00 | 26 – 15 |
| 11D–F4141–00 | 26 – 12 |
| 4SU–F415E–00 | 26 – 38 |
| 11D–F4181–00 | 26 – 30 |
| 11D–F4182–00 | 26 – 9 |
| 11D–F4183–00 | 20 – 30 |
| 11D–F4192–00 | 26 – 6 |
| 11D–F4230–00 | 26 – 2 |
| 11D–F4240–00 | 26 – 2 |
| 11D–F4243–00 | 26 – 28 |
| 11D–F4250–00 | 26 – 2 |
| 11D–F4318–00 | 26 – 33 |
| 5YK–F4478–00 | 26 – 35 |
| 11D–F4481–00 | 27 – 9 |
| 5YK–F4491–00 | 26 – 17 |
| 11D–F4717–00 | 26 – 11 |
| 11D–F471K–00 | 27 – 11 |
| 11D–F4731–00 | 27 – 2 |
| 5YK–F4741–00 | 27 – 3 |
| 11D–F474A–00 | 27 – 5 |
| 11D–F474W–00 | 27 – 7 |
| 11D–F4770–00 | 27 – 1 |
| 5AD–F4780–00 | 27 – 18 |
| 11D–F478E–00 | 27 – 26 |
| 11D–F483H–00 | 27 – 27 |
| 11D–F4844–00 | 27 – 10 |
| 11D–F4845–00 | 27 – 4 |
| 11D–F4846–00 | 27 – 6 |
| 11D–F5104–00 | 28 – 6 |
| 11D–F5111–00 | 28 – 1 |
| 11D–F5117–00 | 28 – 2 |
| 5VK–F5183–00 | 28 – 11 |
| 5VK–F5186–00 | 28 – 13 |
| 5VK–F5304–00 | 30 – 13 |
| 10S–F5388–00 | 30 – 21 |
| 10S–F5389–00 | 30 – 22 |
| 11D–F580T–00 | 29 – 1 |
| 11D–F580U–00 | 29 – 8 |
| 5VK–F580W–00 | 31 – 1 |
| 11D–F5811–00 | 29 – 2 |
| | 29 – 9 |
| 5VK–F581T–00 | 29 – 16 |
| 5SE–F5824–00 | 31 – 6 |
| 5D7–F5824–10 | 29 – 4 |
| | 29 – 11 |
| 5DS–F5825–00 | 29 – 5 |
| | 29 – 12 |
| 5DS–F5825–00 | 31 – 5 |
| 5VK–F582W–00 | 31 – 8 |
| 11D–F5872–00 | 33 – 16 |
| 11D–F5873–00 | 35 – 20 |
| 5DS–F5917–00 | 29 – 7 |
| | 29 – 14 |
| | 31 – 7 |
| 5DS–F5919–00 | 29 – 6 |
| | 29 – 13 |
| 5VK–F5919–10 | 31 – 4 |
| 5D7–F5924–00 | 29 – 3 |
| | 29 – 10 |
| 5VK–F5924–10 | 31 – 3 |
| 11D–F6111–00 | 32 – 1 |
| 11D–F6246–00 | 32 – 4 |
| 5VK–F6280–00 | 32 – 9 |
| 5VK–F6290–00 | 32 – 10 |
| 5VK–F6311–00 | 32 – 6 |
| 5VK–F6312–00 | 32 – 7 |
| 5VK–F6335–00 | 32 – 8 |
| 11D–F7211–00 | 35 – 1 |
| 5YK–F7213–00 | 35 – 3 |
| 11D–F7216–00 | 35 – 2 |
| 11D–F7311–00 | 34 – 1 |
| 11D–F7313–00 | 34 – 4 |
| 11D–F7321–00 | 34 – 2 |
| 11D–F741L–00 | 34 – 25 |
| 11D–F742L–00 | 34 – 36 |
| 11D–F743A–00 | 34 – 26 |
| 11D–F743G–00 | 34 – 37 |
| 11D–F7446–00 | 35 – 7 |
| 11D–F7452–00 | 34 – 13 |
| | 34 – 24 |
| 1B9–F7454–00 | 34 – 27 |
| | 34 – 38 |
| 11D–F8100–00 | 26 – 14 |
| 11D–F8170–00 | 26 – 13 |
| 11D–F8187–00 | 26 – 40 |
| 11D–F8199–D0 | 27 – 29 |
| 11D–F8199–E0 | 27 – 29 |
| 11D–F8199–F0 | 27 – 29 |
| 11D–F8199–G0 | 27 – 29 |
| 11D–F8199–H0 | 27 – 29 |
| 11D–F8199–P0 | 27 – 29 |
| 11D–F8199–S0 | 27 – 29 |
| 11D–F819R–10 | 21 – 19 |
| 5DS–F8317–00 | 12 – 48 |
| 11D–F8351–00–P0 | 36 – 1 |
| 11D–F8351–00–P1 | 36 – 1 |
| 11D–F8351–00–P2 | 36 – 1 |
| 11D–F8356–00 | 39 – 9 |
| 11D–F836B–00 | 36 – 12 |
| 11D–F836K–00 | 39 – 4 |
| 11D–F836L–00 | 36 – 3 |
| 11D–F836M–00 | 36 – 16 |
| 11D–F836U–00 | 26 – 25 |
| | 36 – 17 |
| 11D–F8381–00 | 36 – 11 |
| 11D–F842M–00 | 36 – 2 |
| 11D–F842N–00 | 36 – 15 |
| 11D–H1662–00 | 42 – 19 |
| 5VK–H1801–00 | 15 – 14 |
| 5VK–H1809–00 | 15 – 17 |
| 5VK–H1815–00 | 15 – 21 |
| 5VK–H182A–00 | 15 – 20 |
| 5VK–H1844–00 | 15 – 18 |
| 5VK–H1847–00 | 15 – 15 |
| 5VK–H1850–00 | 15 – 16 |
| 5VK–H1871–00 | 15 – 19 |
| 3SX–H1890–00 | 15 – 11 |
| 11D–H1953–00 | 44 – 14 |
| 11D–H2116–00 | 43 – 8 |
| 11D–H2530–00 | 35 – 23 |
| 11D–H2568–00 | 43 – 32 |
| 2S5–H2576–00 | 44 – 8 |
| 11D–H2589–01 | 41 – 3 |
| 11D–H2590–00 | 43 – 13 |
| 11D–H2911–00 | 42 – 1 |
| 11D–H2913–00 | 42 – 9 |
| 11D–H3310–10 | 38 – 1 |
| 5VK–H3311–00 | 38 – 3 |
| | 38 – 7 |
| | 38 – 14 |
| | 38 – 18 |
| 22B–H3312–00 | 38 – 2 |
| | 38 – 17 |
| 11D–H3320–10 | 38 – 5 |
| 22B–H3322–00 | 38 – 6 |
| | 38 – 13 |
| 11D–H3330–10 | 38 – 12 |
| 11D–H3340–10 | 38 – 16 |
| 5VK–H3371–00 | 44 – 23 |
| 11D–H3376–00 | 44 – 25 |
| 11D–H3500–00 | 39 – 1 |
| 5CH–H3523–00 | 39 – 2 |
| 11D–H3546–00 | 42 – 10 |
| 11D–H3912–00 | 42 – 2 |
| 5D7–H3927–00 | 42 – 6 |
| 4GV–H3936–00 | 43 – 10 |
| 5D7–H3945–00 | 42 – 7 |
| 11D–H3951–00 | 42 – 5 |
| 11D–H410A–00 | 40 – 1 |
| 5B2–H4301–00 | 40 – 4 |
| 11D–H4312–00 | 40 – 5 |
| 5B2–H4314–00 | 40 – 3 |
| 5JN–H4352–00 | 40 – 2 |
| 11D–H4547–00 | 41 – 19 |
| 3SH–H4551–00 | 41 – 25 |
| 11D–H4710–00 | 41 – 1 |
| 5YK–H4741–00 | 41 – 16 |
| 11D–H4745–00 | 41 – 14 |
| 5YK–H4749–00 | 41 – 15 |
| 5YK–H5130–00 | 41 – 22 |
| 11D–H5991–00 | 43 – 17 |
| 5VS–W0041–00 | 33 – 2 |
| 3BN–W0042–50 | 35 – 10 |
| 5VK–W0046–00 | 31 – 2 |
| 2TV–W2470–00 | 27 – 21 |
| 5PS–W2587–00 | 33 – 1 |
| 11D–W8250–00 | 43 – 26 |
| 5VK–WE343–00 | 8 – 10 |
| 5VK–WE541–00 | 14 – 1 |
| 5VK–WE544–00 | 14 – 31 |
| 11D–XF411–00–P0 | 26 – 1 |
| 11D–XF411–00–P1 | 26 – 1 |
| 11D–XF411–00–P2 | 26 – 1 |
| 90101–06X26 | 17 – 30 |
| 90101–08777 | 30 – 23 |
| 90101–10659 | 23 – 4 |
| 90101–12002 | 22 – 8 |
| 90105–05016 | 27 – 24 |
| 90105–06X06 | 1 – 15 |
| | 7 – 3 |
| 90105–06X20 | 14 – 30 |
| 90105–07004 | 5 – 8 |
| 90105–08053 | 34 – 16 |
| 90105–08154 | 24 – 10 |
| | 24 – 14 |
| 90105–08X20 | 12 – 4 |
| | 12 – 11 |
| | 12 – 22 |
| 90105–09002 | 1 – 6 |
| 90105–09003 | 1 – 8 |
| 90105–09004 | 1 – 7 |

| PART NO. | REF. NO. |
|---|---|
| 90105–10077 | 2 – 4 |
| 90105–10078 | 2 – 3 |
| 90105–10212 | 20 – 33 |
| 90105–10638 | 29 – 15 |
| 90105–10733 | 20 – 15 |
| 90105–10X16 | 34 – 3 |
| 90105–12028 | 23 – 2 |
| 90109–06419 | 8 – 21 |
| 90109–064G6 | 29 – 17 |
| 90109–065F3 | 31 – 9 |
| 90109–080G5 | 43 – 31 |
| 90109–12X00 | 22 – 18 |
| 90110–05112 | 26 – 4 |
| 90110–06122 | 44 – 3 |
| 90110–06202 | 7 – 34 |
| 90110–08221 | 34 – 35 |
| 90110–10191 | 34 – 8 |
| 90111–05011 | 43 – 33 |
| 90111–06023 | 12 – 42 |
| 90111–06051 | 9 – 32 |
| 90111–06068 | 12 – 31 |
| 90111–06X17 | 7 – 25 |
| | 12 – 16 |
| | 39 – 6 |
| 90111–06X19 | 7 – 16 |
| | 7 – 23 |
| | 26 – 23 |
| | 27 – 12 |
| | 43 – 21 |
| 90111–06X20 | 7 – 22 |
| | 36 – 9 |
| 90116–10485 | 30 – 9 |
| 90119–06044 | 35 – 30 |
| 90119–06105 | 16 – 13 |
| 90119–06X05 | 5 – 12 |
| 90149–05110 | 8 – 23 |
| 90149–05321 | 18 – 5 |
| 90150–05024 | 36 – 13 |
| 90154–06061 | 20 – 10 |
| | 21 – 4 |
| 90157–05079 | 34 – 28 |
| | 34 – 39 |
| 90164–05014 | 39 – 3 |
| 90167–04X00 | 12 – 49 |
| 90170–06128 | 4 – 12 |
| 90170–18003 | 3 – 23 |
| 90170–20274 | 16 – 5 |
| 90170–20327 | 16 – 20 |
| 90176–22081 | 24 – 7 |
| 90179–05523 | 36 – 14 |
| 90179–06403 | 21 – 6 |
| 90179–06520 | 36 – 4 |
| 90179–08442 | 12 – 8 |
| 90179–16448 | 3 – 9 |
| 90179–18003 | 17 – 34 |
| 90179–25615 | 24 – 4 |
| 90183–05812 | 27 – 25 |
| 90185–06837 | 38 – 11 |
| | 38 – 21 |
| | 42 – 8 |
| 90185–12119 | 22 – 19 |
| 90201–047A2 | 44 – 10 |
| 90201–05X08 | 37 – 5 |
| 90201–06072 | 43 – 5 |
| 90201–06X04 | 27 – 19 |
| 90201–06X14 | 41 – 11 |
| | 41 – 27 |
| 90201–06X28 | 26 – 24 |
| 90201–08083 | 35 – 18 |
| 90201–082H0 | 20 – 22 |
| 90201–086A3 | 12 – 45 |
| 90201–08M03 | 26 – 8 |
| 90201–08X18 | 15 – 10 |
| 90201–08X19 | 16 – 25 |
| 90201–096J9 | 1 – 10 |
| 90201–100L3 | 35 – 6 |
| 90201–10141 | 24 – 13 |
| 90201–101A4 | 2 – 5 |
| 90201–101J1 | 23 – 6 |
| 90201–10X07 | 33 – 18 |
| | 35 – 21 |
| 90201–10X17 | 16 – 30 |
| 90201–10X18 | 15 – 7 |
| 90201–10X21 | 34 – 6 |
| 90201–124G9 | 22 – 20 |
| 90201–12541 | 6 – 10 |
| 90201–12X05 | 18 – 19 |
| 90201–12X06 | 18 – 16 |
| 90201–16013 | 3 – 8 |
| 90201–16021 | 22 – 9 |
| 90201–17X01 | 18 – 18 |
| 90201–208G4 | 17 – 23 |
| 90201–220T0 | 24 – 8 |
| 90201–30X00 | 3 – 15 |
| 90201–30X01 | 15 – 3 |
| 90202–08X01 | 26 – 39 |
| 90202–26142 | 24 – 5 |
| 90209–20012 | 16 – 3 |
| 90209–21351 | 17 – 9 |
| 90209–21X00 | 17 – 3 |
| | 17 – 19 |
| 90209–22X00 | 17 – 8 |
| 90209–26348 | 17 – 15 |
| 90215–18X00 | 3 – 24 |
| 90215–20X00 | 16 – 4 |
| 90215–20X01 | 16 – 19 |
| 90215–21X00 | 17 – 33 |
| 90240–08124 | 35 – 17 |
| 90240–10101 | 34 – 14 |
| | 34 – 22 |
| 90267–40X01 | 12 – 29 |
| | 12 – 40 |
| 90269–07007 | 7 – 18 |
| 90269–08066 | 22 – 29 |
| 90280–05001 | 3 – 7 |
| 90282–05058 | 3 – 22 |
| 90282–07001 | 16 – 2 |
| 90338–05008 | 27 – 28 |
| 90340–14132 | 8 – 13 |
| 90340–14X00 | 14 – 10 |
| 90340–36X00 | 14 – 12 |
| 90380–22111 | 22 – 3 |
| 90387–06014 | 34 – 33 |
| | 34 – 43 |
| 90387–06042 | 7 – 20 |
| | 43 – 3 |
| 90387–06161 | 7 – 35 |
| 90387–06202 | 21 – 16 |
| | 43 – 18 |
| | 44 – 15 |
| 90387–065J6 | 20 – 11 |
| | 21 – 2 |
| 90387–06648 | 7 – 21 |
| 90387–068L3 | 40 – 6 |
| 90387–068P7 | 9 – 34 |
| 90387–06M31 | 38 – 22 |
| 90387–06X01 | 27 – 14 |
| | 38 – 10 |
| 90387–06X02 | 7 – 17 |
| | 12 – 17 |
| | 36 – 6 |
| 90387–06X09 | 36 – 8 |
| 90387–06X36 | 12 – 34 |
| 90387–06X38 | 39 – 7 |
| 90387–06X41 | 41 – 5 |
| 90387–06X42 | 41 – 13 |
| 90387–07037 | 9 – 35 |
| 90387–08024 | 20 – 21 |
| 90387–087L3 | 26 – 10 |
| 90387–124V0 | 22 – 22 |
| 90387–126Y1 | 22 – 13 |
| 90387–127W0 | 22 – 23 |
| 90387–17801 | 30 – 25 |
| 90387–17802 | 30 – 26 |
| 90387–21002 | 17 – 7 |
| 90387–25802 | 17 – 26 |
| 90401–08133 | 8 – 26 |
| 90401–10096 | 8 – 29 |
| 90401–10X03 | 33 – 17 |
| | 35 – 22 |
| 90430–05X00 | 8 – 24 |
| 90430–06014 | 6 – 12 |
| 90430–08119 | 20 – 5 |
| 90430–08X01 | 8 – 27 |
| 90430–09002 | 10 – 3 |
| 90430–10X00 | 8 – 30 |
| 90430–12X00 | 44 – 22 |
| 90430–22123 | 20 – 3 |
| 90445–08X05 | 7 – 38 |
| 90445–08X06 | 7 – 28 |
| 90445–11X01 | 8 – 43 |
| 90450–20X01 | 8 – 45 |
| | 20 – 37 |
| 90450–32X03 | 6 – 23 |
| | 7 – 6 |
| 90450–59001 | 9 – 4 |
| 90450–72001 | 9 – 2 |
| 90462–07X00 | 13 – 11 |
| 90462–16X00 | 14 – 15 |
| 90464–08126 | 7 – 29 |
| 90464–09X00 | 26 – 36 |
| 90464–10X03 | 20 – 34 |
| 90464–16005 | 26 – 31 |
| 90464–25004 | 42 – 20 |
| | 43 – 12 |
| 90465–10044 | 1 – 16 |
| 90465–10045 | 2 – 7 |
| 90467–07138 | 9 – 25 |
| 90467–08003 | 7 – 32 |
| 90467–09006 | 26 – 34 |
| 90467–10008 | 8 – 44 |
| 90467–11090 | 9 – 16 |
| 90467–11090 | 9 – 24 |
| 90467–11108 | 9 – 23 |
| | 9 – 31 |
| 90467–12085 | 9 – 17 |
| | 35 – 29 |
| 90467–14015 | 13 – 14 |
| | 13 – 15 |
| 90467–14800 | 9 – 20 |
| 90467–17089 | 11 – 6 |
| | 11 – 8 |
| 90467–170A0 | 11 – 9 |
| 90467–170A2 | 9 – 29 |
| 90467–17128 | 9 – 27 |
| 90467–17800 | 20 – 38 |
| 90467–17801 | 9 – 18 |
| 90480–01558 | 39 – 5 |
| 90480–11006 | 41 – 12 |
| 90480–12072 | 20 – 12 |
| 90480–12497 | 21 – 3 |
| 90480–12581 | 12 – 32 |
| 90480–13398 | 15 – 24 |
| 90480–14014 | 7 – 36 |
| 90480–14023 | 40 – 7 |
| 90480–15363 | 7 – 26 |
| | 43 – 4 |
| 90480–18276 | 7 – 27 |
| | 9 – 36 |
| 90501–04X01 | 8 – 34 |
| 90501–06022 | 18 – 2 |
| 90501–15001 | 34 – 29 |
| | 34 – 40 |
| 90501–260A1 | 16 – 12 |
| 90506–25X01 | 34 – 5 |
| 90508–16X00 | 16 – 23 |
| 90508–28777 | 34 – 12 |
| | 34 – 21 |
| 90560–17306 | 30 – 2 |
| 91317–05008 | 8 – 9 |
| 91317–05010 | 26 – 5 |
| 91317–05014 | 37 – 4 |
| 91317–06010 | 34 – 11 |
| | 34 – 20 |
| 91317–06012 | 6 – 21 |
| | 8 – 31 |
| | 14 – 14 |
| | 14 – 26 |
| 91317–06014 | 44 – 31 |
| 91317–06016 | 8 – 42 |
| | 13 – 17 |
| 91317–06018 | 1 – 19 |
| 91317–06020 | 6 – 17 |
| | 8 – 12 |
| | 19 – 4 |
| 91317–06025 | 5 – 14 |
| | 8 – 38 |
| | 14 – 5 |
| | 14 – 34 |
| 91317–06030 | 1 – 9 |
| | 13 – 5 |
| | 14 – 22 |
| 91317–06035 | 14 – 4 |
| | 14 – 33 |
| 91317–06040 | 2 – 6 |
| 91317–06045 | 13 – 6 |
| | 14 – 18 |
| 91317–06050 | 6 – 24 |
| | 14 – 6 |
| | 14 – 7 |
| 91317–06055 | 13 – 7 |
| 91317–06060 | 13 – 8 |
| 91317–06080 | 13 – 9 |
| 91317–06090 | 13 – 10 |
| 91317–06095 | 8 – 22 |
| 91317–08025 | 15 – 9 |
| 9131L–06035 | 9 – 33 |
| 9131M–05020 | 43 – 25 |
| 9131M–06020 | 38 – 9 |
| | 38 – 20 |
| 91380–06016 | 11 – 4 |
| 91380–08020 | 12 – 18 |
| 91380–08030 | 12 – 46 |
| 91401–20012 | 35 – 19 |
| 91401–25020 | 34 – 15 |
| | 34 – 23 |
| 91808–16X00 | 13 – 3 |
| | 14 – 29 |
| | 14 – 32 |
| 91810–14X00 | 8 – 37 |
| 92014–08025 | 35 – 8 |
| 92017–05025 | 44 – 29 |
| 92017–06014 | 27 – 23 |
| 92017–06020 | 27 – 20 |
| | 41 – 10 |
| 92017–06030 | 37 – 3 |
| 92017–06035 | 8 – 4 |

| PART NO. | REF. NO. |
|---|---|
| 92017–10045 | 35 – 5 |
| 9201L–06014 | 41 – 4 |
| 9201L–06025 | 41 – 29 |
| 92507–06012 | 9 – 11 |
| 92902–04100 | 33 – 14 |
| 92902–04600 | 33 – 15 |
| 92907–04200 | 41 – 23 |
| 92907–05600 | 42 – 16 |
| 92907–06600 | 9 – 12 |
| 9290L–04600 | 12 – 30 |
| | 12 – 41 |
| 9290L–05200 | 41 – 20 |
| 9290M–05600 | 43 – 24 |
| 9290M–06200 | 40 – 8 |
| 93101–12173 | 6 – 8 |
| 93101–14164 | 14 – 24 |
| 93101–25106 | 3 – 21 |
| 93102–12106 | 18 – 14 |
| 93102–15212 | 16 – 28 |
| 93102–35368 | 17 – 28 |
| 93106–22019 | 22 – 4 |
| 93106–23002 | 28 – 4 |
| | 30 – 4 |
| 93106–30029 | 30 – 8 |
| 93108–35004 | 22 – 6 |
| 93109–17071 | 22 – 12 |
| 93210–07X01 | 8 – 20 |
| | 13 – 4 |
| 93210–10X00 | 8 – 36 |
| 93210–11X00 | 8 – 16 |
| 93210–13X00 | 8 – 3 |
| | 14 – 8 |
| 93210–14X00 | 14 – 11 |
| 93210–15414 | 35 – 4 |
| 93210–15620 | 35 – 11 |
| 93210–15X00 | 8 – 41 |
| 93210–19123 | 20 – 35 |
| 93210–21X00 | 6 – 20 |
| 93210–22X00 | 17 – 27 |
| 93210–29X00 | 44 – 2 |
| 93210–33X00 | 6 – 18 |
| 93210–35X00 | 14 – 13 |
| 93210–41X00 | 7 – 4 |
| 93210–61750 | 6 – 4 |
| 93210–64X01 | 8 – 19 |
| 93210–78X00 | 1 – 18 |
| 93210–96X00 | 1 – 14 |
| 93306–00106 | 6 – 5 |
| 93306–00304 | 16 – 9 |
| 93306–004XL | 17 – 12 |
| 93306–004XM | 17 – 31 |
| 93306–07209 | 5 – 2 |
| 93306–20348 | 30 – 3 |
| 93306–203XN | 28 – 3 |
| 93306–205XA | 17 – 11 |
| 93306–30437 | 30 – 6 |
| 93306–305X4 | 17 – 25 |
| 93306–305YH | 3 – 20 |
| 93306–305YJ | 3 – 19 |
| 93306–308Y0 | 3 – 10 |
| 93310–530C7 | 15 – 2 |
| 93310–84010 | 3 – 5 |
| 93315–11206 | 18 – 13 |
| 93315–22251 | 22 – 2 |
| 93315–31502 | 16 – 29 |
| 93315–31758 | 22 – 17 |
| 93317–11020 | 16 – 27 |
| 93317–21746 | 22 – 11 |
| 93317–31771 | 22 – 16 |
| 93332–00001 | 24 – 2 |
| 93332–00008 | 24 – 1 |
| 93410–11X00 | 8 – 6 |
| 93410–17X00 | 18 – 17 |
| 93410–20825 | 17 – 24 |
| 93440–10X00 | 1 – 3 |
| 93440–11024 | 15 – 13 |
| 93440–25084 | 17 – 4 |
| | 17 – 20 |
| 93440–28062 | 17 – 16 |
| 93450–24824 | 3 – 14 |
| 93501–04011 | 34 – 30 |
| | 34 – 42 |
| 93503–08007 | 8 – 33 |
| 93603–16219 | 6 – 13 |
| 93612–16X00 | 1 – 12 |
| 94109–21800 | 28 – 7 |
| 94109–21801 | 28 – 7 |
| 94113–17800 | 30 – 15 |
| 94113–17801 | 30 – 15 |
| 94418–21X00 | 28 – 5 |
| 94427–17X00 | 30 – 14 |
| 9456X–08110 | 30 – 19 |
| 94591–57126 | 5 – 9 |
| 94701–00X09 | 1 – 11 |
| 95024–06012 | 33 – 19 |
| 95024–06025 | 21 – 5 |
| 95027–06008 | 44 – 13 |
| 95027–06012 | 5 – 7 |
| | 22 – 27 |
| 95027–06014 | 26 – 22 |
| 95027–06025 | 6 – 7 |
| 95602–06200 | 27 – 15 |
| 95604–06200 | 34 – 34 |
| | 34 – 44 |
| 95604–16200 | 22 – 10 |
| | 30 – 27 |
| 95607–05200 | 44 – 30 |
| 95607–06200 | 43 – 20 |
| 95607–08200 | 34 – 17 |
| | 39 – 11 |
| 95607–10200 | 20 – 8 |
| | 23 – 5 |
| | 24 – 15 |
| | 30 – 11 |
| 95607–12200 | 23 – 3 |
| 95617–06100 | 33 – 8 |
| 95617–08618 | 1 – 4 |
| 95617–12100 | 22 – 21 |
| 9561M–10100 | 34 – 7 |
| 95707–08500 | 30 – 24 |
| 9570L–04300 | 41 – 24 |
| 9570L–05300 | 41 – 21 |
| 9570L–06500 | 43 – 19 |
| 9571L–06300 | 41 – 28 |
| | 44 – 20 |
| 95807–06008 | 21 – 14 |
| 95807–06010 | 20 – 28 |
| 95807–06016 | 21 – 13 |
| | 21 – 15 |
| 95807–06040 | 43 – 6 |
| 95807–08012 | 20 – 4 |
| 95812–06030 | 25 – 50 |
| 95817–06035 | 15 – 22 |
| | 40 – 9 |
| 95817–06040 | 34 – 32 |
| 95817–06050 | 36 – 10 |
| 95817–08014 | 12 – 44 |
| 95817–08030 | 27 – 8 |
| 95817–08040 | 26 – 7 |
| 95817–08045 | 39 – 10 |
| 95817–10035 | 20 – 14 |
| 95817–10070 | 20 – 7 |
| 9581M–06012 | 20 – 26 |
| | 44 – 24 |
| 9581M–06014 | 44 – 16 |
| 9581M–06016 | 41 – 26 |
| 95827–08040 | 20 – 23 |
| 97017–06025 | 36 – 7 |
| 97707–40010 | 27 – 16 |
| 97707–40012 | 41 – 2 |
| 97707–40014 | 27 – 17 |
| 97707–40020 | 41 – 9 |
| 97707–40025 | 44 – 9 |
| 9770L–30110 | 41 – 17 |
| 9770M–50030 | 9 – 6 |
| 97780–30116 | 38 – 4 |
| | 38 – 8 |
| | 38 – 15 |
| | 38 – 19 |
| 98502–04012 | 33 – 13 |
| 98507–05020 | 42 – 18 |
| 98507–05030 | 42 – 12 |
| 98507–05045 | 42 – 13 |
| | 42 – 17 |
| 98507–05055 | 42 – 15 |
| 98507–06012 | 10 – 4 |
| 98580–04016 | 25 – 48 |
| 98707–03020 | 42 – 4 |
| 99001–07600 | 16 – 26 |
| 99001–10600 | 18 – 15 |
| 99009–10400 | 16 – 31 |
| 99009–12400 | 6 – 15 |
| 99530–12016 | 13 – 2 |
| | 14 – 3 |
| | 14 – 9 |
| | 14 – 21 |
| 99530–14016 | 13 – 18 |