YAMAHA

PARTS CATALOGUE

XVS650AY (4C5Y) AUSTRALIA

YAMAHA GENUINE Parts & Accessories

1H4C5-700E1

( )

XVS650AY
PARTS CATALOGUE
©2008 by Yamaha Motor Co., Ltd.
1st edition, May 2008
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.


PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.


6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

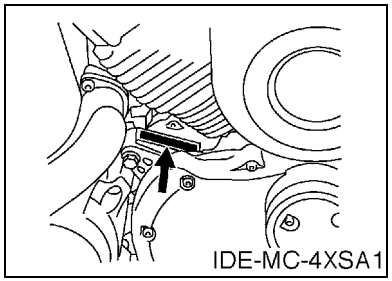

Frame Serial No.

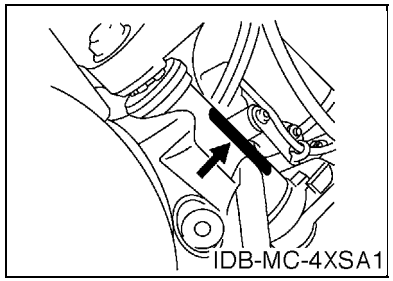


8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
BS4(*)	BLUISH SILVER 4	0820
BWC1(*)	BLUISH WHITE COCKTAIL 1	0390
S3	SILVER 3	0791
SL	SILVER	0035


MODEL LABEL

(1) A label called “Model Label” is affixed in the location as indicated in (3) below.
When using this parts catalogue, please be sure to cross–reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.


(2) “Model Label” Indication

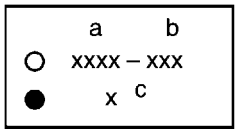

a: Model Type Code
b: Production Code No.
c: Colouring Type

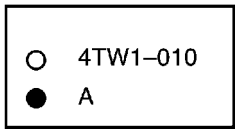

(3) Model Label Affixing Location

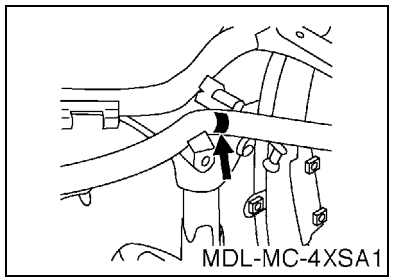

(4) Colouring Information

Model Code	Colouring Type Code	Colour Code	Colour Name	Abbreviation
4C5Y	A	0820	BLUISH SILVER 4	BS4
	B	0390	BLUISH WHITE COCKTAIL 1	BWC1

(5) Model Code – Production Code Number of Model Listed in This Parts Catalogue

Model Code	Production Code No.	Country (destination)
4C5Y	010	AUSTRALIA

CONTENTS

ENGINE

CYLINDER HEAD 1
CYLINDER 3
CRANKSHAFT & PISTON 4
VALVE 5
CAMSHAFT & CHAIN 6
OIL PUMP 7
INTAKE 8
CARBURETOR 10
EXHAUST 12
CRANKCASE 14
CRANKCASE COVER 1 16
STARTER CLUTCH 18
CLUTCH 19
TRANSMISSION 21
MIDDLE DRIVE GEAR 22
SHIFT CAM & FORK 23
SHIFT SHAFT 24

CHASSIS

FRAME 25
FENDER 27
SIDE COVER 29
REAR ARM & SUSPENSION 31
DRIVE SHAFT 32
STEERING 34
FRONT FORK 35
FUEL TANK 37
SEAT 39
FRONT WHEEL 40
FRONT BRAKE CALIPER 41
REAR WHEEL 42
STEERING HANDLE & CABLE 44
FRONT MASTER CYLINDER 45
STAND & FOOTREST 46
GENERATOR 49
FLASHER LIGHT 50
METER 52
HEADLIGHT 53
TAILLIGHT 54
HANDLE SWITCH & LEVER 55
ELECTRICAL 1 56
ELECTRICAL 2 58

INDEX

NUMERICAL INDEX 59

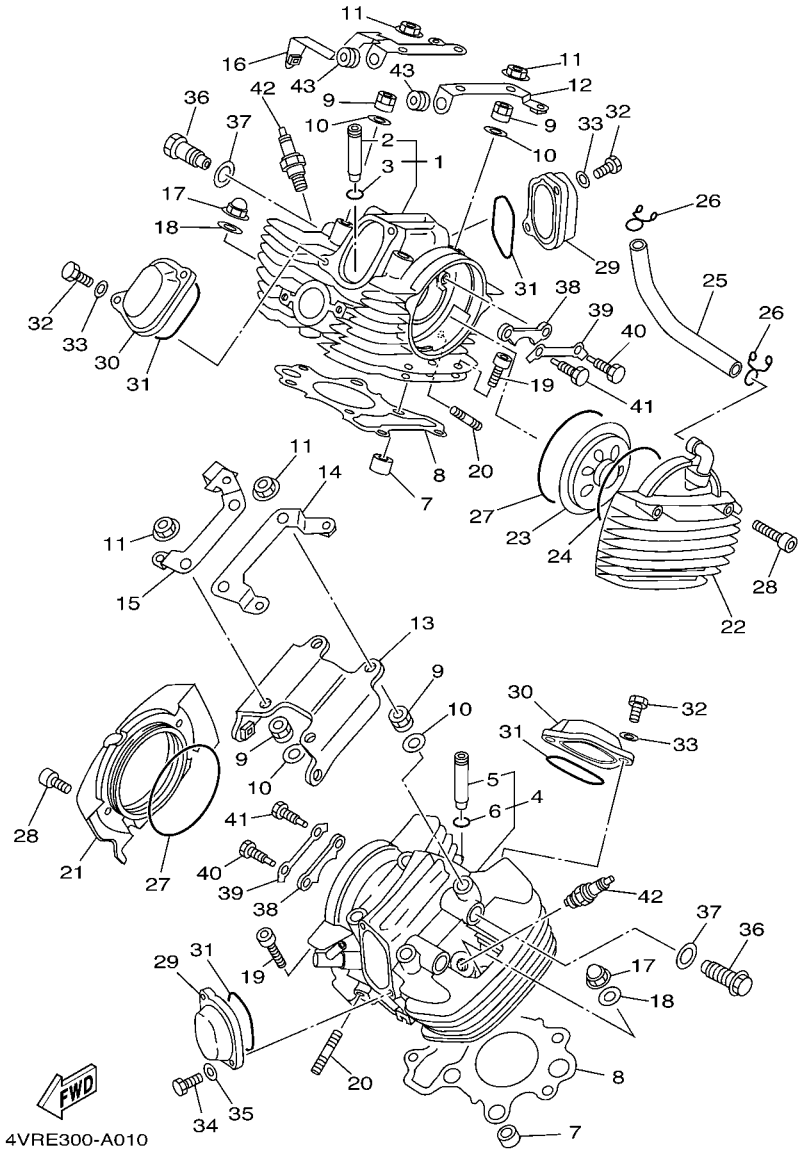


FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–11101–20	CYLINDER HEAD ASSY	1					
2	4H7–11133–11	.GUIDE, VALVE 1	2					
3	93440–12052	.CIRCLIP	2					
4	4XP–11101–20	CYLINDER HEAD ASSY	1					
5	4H7–11133–11	.GUIDE, VALVE 1	2					
6	93440–12052	.CIRCLIP	2					
7	99530–17016	PIN, DOWEL	4					
8	4VR–11181–10	GASKET, CYLINDER HEAD 1	2					
9	90179–10395	NUT	8					
10	90201–10131	WASHER, PLATE	8					
11	95707–10500	NUT, FLANGE	8					
12	4TR–11142–00	BRACKET, CYLINDER HEAD COVER 2	1					
13	4TR–11152–00	BRACKET, CYLINDER HEAD COVER	1					
14	4TR–1111F–00	PLATE	1					
15	4TR–1112F–00	PLATE 2	1					
16	4TR–1135A–00	BRACKET	1					
17	90176–08080	NUT, CROWN	2					
18	90201–08609	WASHER, PLATE	2					
19	90110–08019	BOLT, HEXAGON SOCKET HEAD	4					
20	95617–08630	BOLT, STUD	4					
21	4TR–11187–20	COVER, CYLINDER HEAD SIDE 3	1					
22	4TR–11186–20	COVER, CYLINDER HEAD SIDE 2	1					
23	22U–11165–00	PLATE, BREATHER	1					
24	93210–89568	O-RING	1					
25	4TR–11166–00	PIPE, BREATHER 1	1					
26	90467–14015	CLIP	2					
27	93211–00612	O-RING	2					


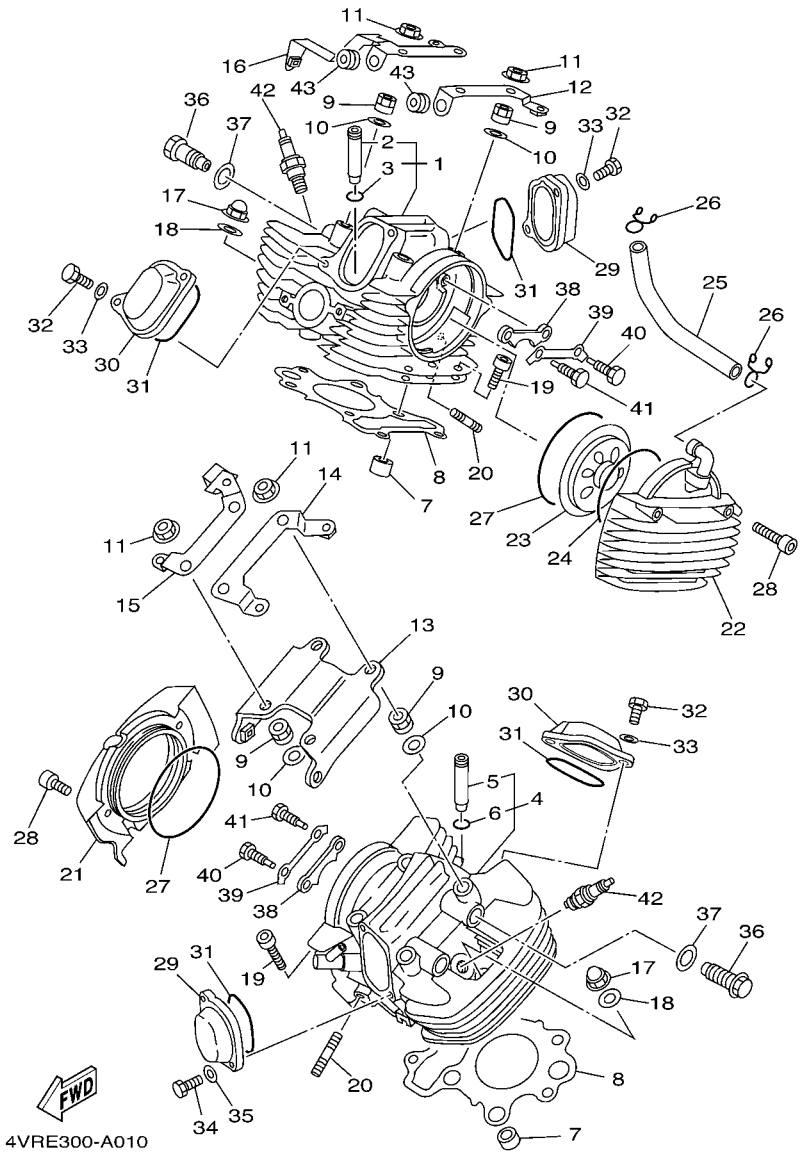


FIG. 1 CYLINDER HEAD


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	91314–06035	BOLT, HEXAGON SOCKET HEAD	4					
29	22U–11186–01	COVER, CYLINDER HEAD SIDE 2	2					
30	22U–11187–01	COVER, CYLINDER HEAD SIDE 3	2					
31	93210–62446	O-RING	4					
32	97027–06016	BOLT, HEXAGON	6					
33	92907–06600	WASHER, PLATE	6					
34	97024–06016	BOLT	2					
35	92904–06600	WASHER	2					
36	90401–16166	BOLT, UNION	4					
37	90430–17168	GASKET	4					
38	22U–1111F–01	PLATE	2					
39	90215–08229	WASHER, LOCK	2					
40	90109–08782	BOLT	2					
41	90109–08781	BOLT	2					
42	94701–00262	PLUG, SPARK (NGK DPR7EA)	2					
43	90480–13018	GROMMET	2					

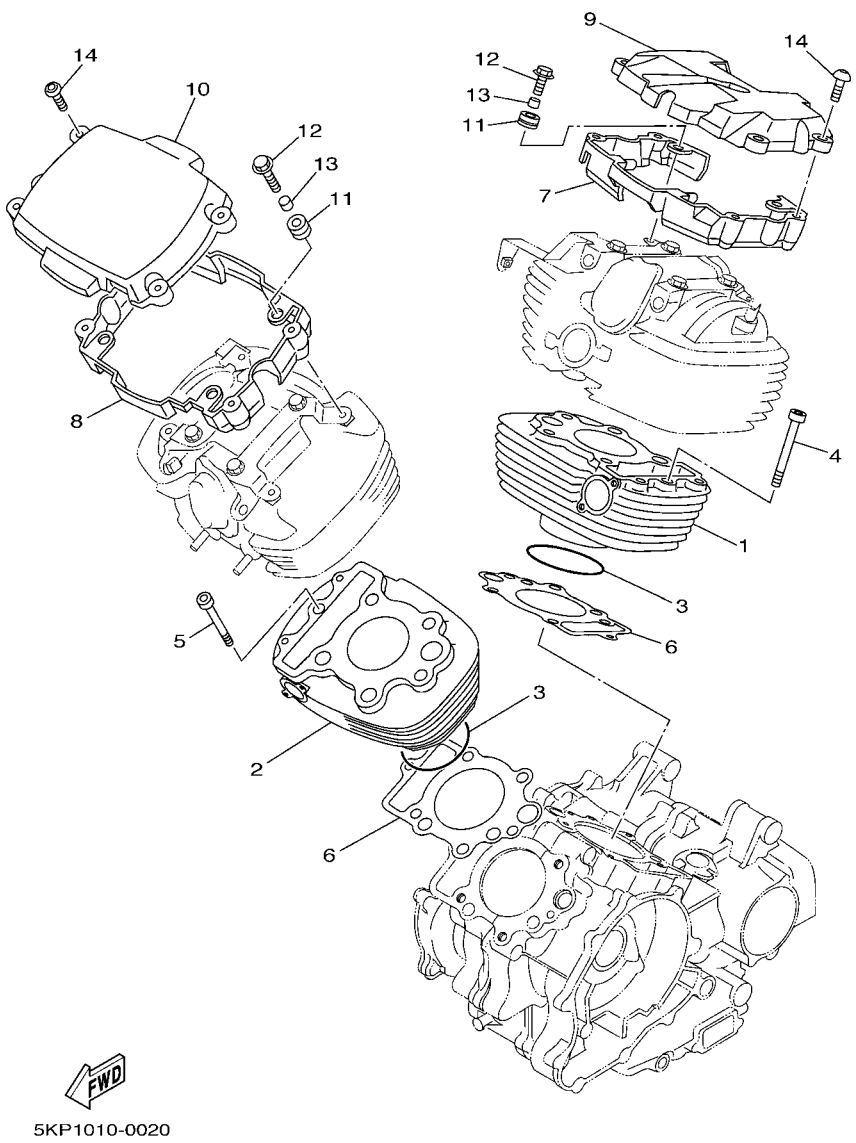

5KP1010-0020

FIG. 2 CYLINDER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–11310–20	CYLINDER	1					
2	4VR–11320–20	CYLINDER 2	1					
3	93210–84724	O-RING	2					
4	91317–06085	BOLT	1					
5	90110–06011	BOLT, HEXAGON SOCKET HEAD	1					
6	4VR–11351–01	GASKET, CYLINDER	2					
7	4VR–11191–00	COVER, CYLINDER HEAD 1	1					
8	4VR–11192–00	COVER, CYLINDER HEAD 2	1					
9	4VR–11190–10	COVER, CYLINDER HEAD 1	1					
10	4VR–1111N–00	COVER 2	1					
11	90480–13018	GROMMET	6					
12	90119–06170	BOLT, WITH WASHER	6					
13	90387–06043	COLLAR	6					
14	90149–06302	SCREW	8					

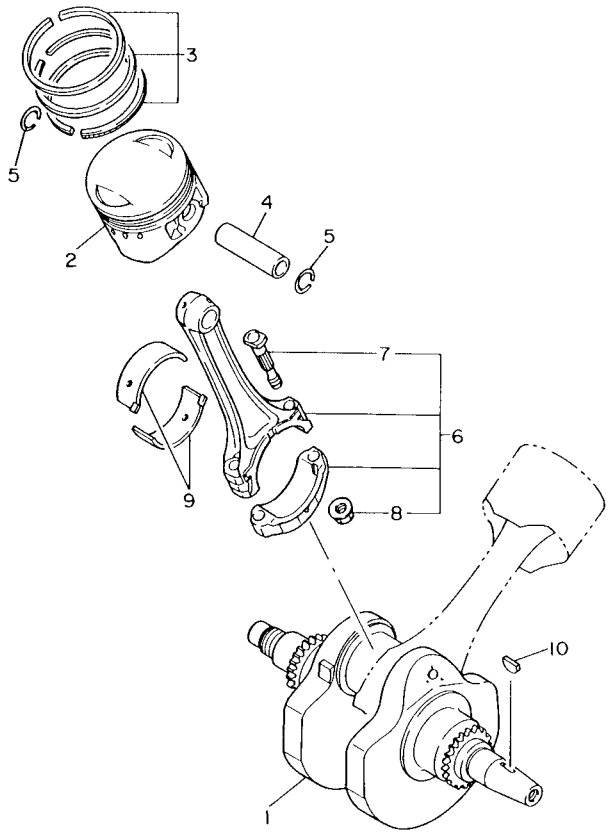

2GV110-7030

FIG. 3 CRANKSHAFT & PISTON


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–11411–00	CRANKSHAFT	1					
2	4VR–11631–01–A0	PISTON (STD)	2					
	4VR–11636–00	PISTON (0.50MM O/S)	2					AP
	4VR–11638–00	PISTON (1.00MM O/S)	2					AP
3	4VR–11603–00	PISTON RING SET (STD)	2					
	4VR–11605–00	PISTON RING SET (0.50MM O/S)	2					AP
	4VR–11607–00	PISTON RING SET (1.00MM O/S)	2					AP
4	3LD–11633–00	PIN, PISTON	2					
5	93450–22027	CIRCLIP	4					
6	4VR–11650–00	CONNECTING ROD ASSY	2					
7	22U–11654–00	.BOLT, CONNECTING ROD	2					
8	90179–08327	.NUT	2					
9	3LD–11656–00	PLANE BEARING, CONNECTING ROD	4					UR BLUE
	3LD–11656–10	PLANE BEARING, CONNECTING ROD	4					UR BLACK
	3LD–11656–20	PLANE BEARING, CONNECTING ROD	4					UR BROWN
	3LD–11656–30	PLANE BEARING, CONNECTING ROD	4					UR GREEN
10	90280–05048	KEY, WOODRUFF	1					

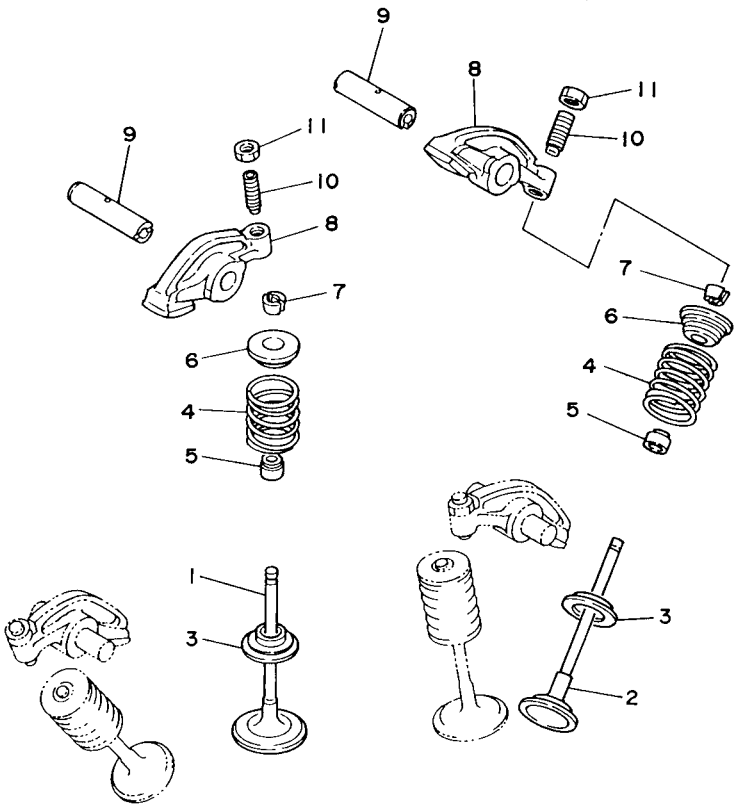

4TR1010-6040

FIG. 4 VALVE


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–12111–01	VALVE, INTAKE	2					
2	4VR–12121–01	VALVE, EXHAUST	2					
3	3Y1–12116–00	SEAT, VALVE SPRING	4					
4	3Y1–12114–01	SPRING, VALVE OUTER	4					
5	1J7–12119–01	SEAL, VALVE STEM	4					
6	3Y1–12117–01	RETAINER, VALVE SPRING	4					
7	1J7–12118–00	COTTER, VALVE	8					
8	22U–12151–00	ARM, VALVE ROCKER	4					
9	22U–12156–01	SHAFT, ROCKER 2	4					
10	22U–12159–00	SCREW, VALVE ADJUSTING	4					
11	90170–06128	NUT	4					

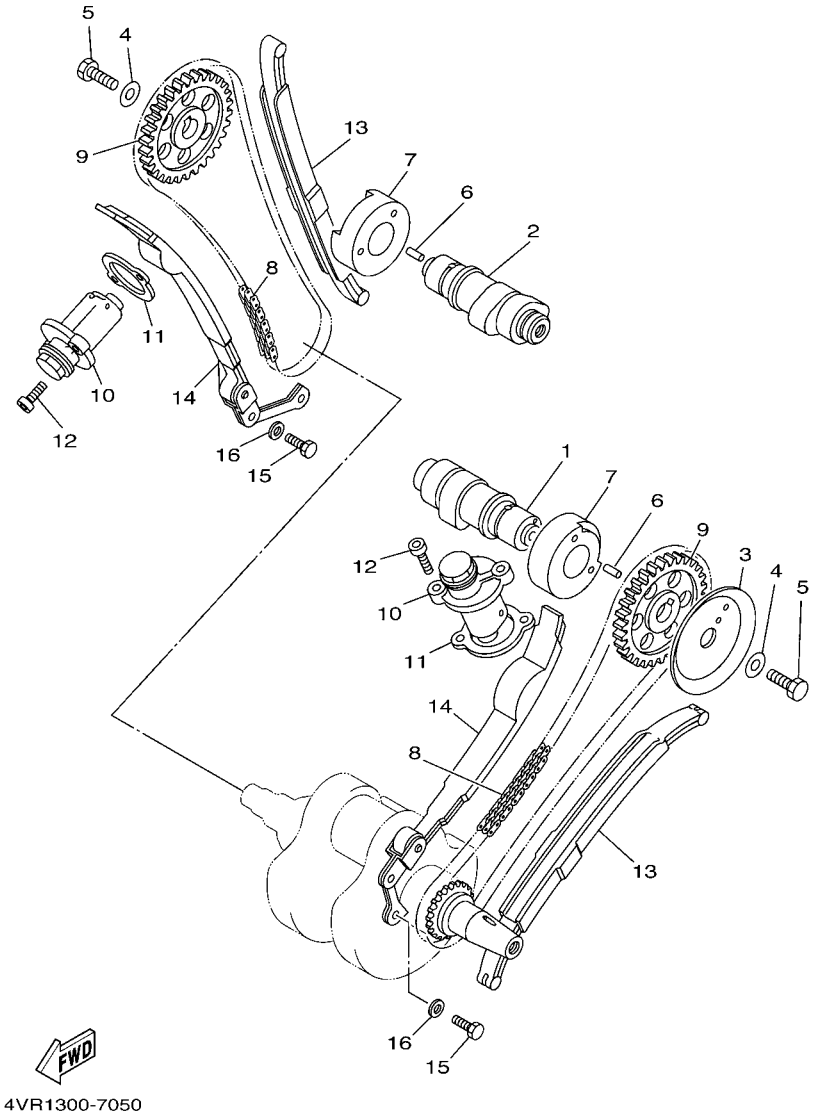

4VR1300-7050

FIG. 5 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–12171–00	CAMSHAFT 1	1					
2	4VR–12181–00	CAMSHAFT 2	1					
3	22U–11145–00	PLATE, BREATHER 2	1					
4	90201–10591	WASHER, PLATE	2					
5	90101–10303	BOLT	2					
6	93605–10108	PIN, DOWEL	2					
7	90380–28131	BUSH, SOLID	2					
8	94591–41118	CHAIN	2					
9	22U–12176–01	SPROCKET, CAM CHAIN	2					
10	11H–12210–02	TENSIONER ASSY, CAM CHAIN	2					
11	3BT–12213–00	GASKET, TENSIONER CASE	2					
12	91314–06025	BOLT, HEXAGON SOCKET HEAD	4					
13	4VR–12231–00	GUIDE, STOPPER 1	2					
14	22U–12241–00	GUIDE, STOPPER 2	2					
15	97027–06016	BOLT, HEXAGON	4					
16	92907–06600	WASHER, PLATE	4					

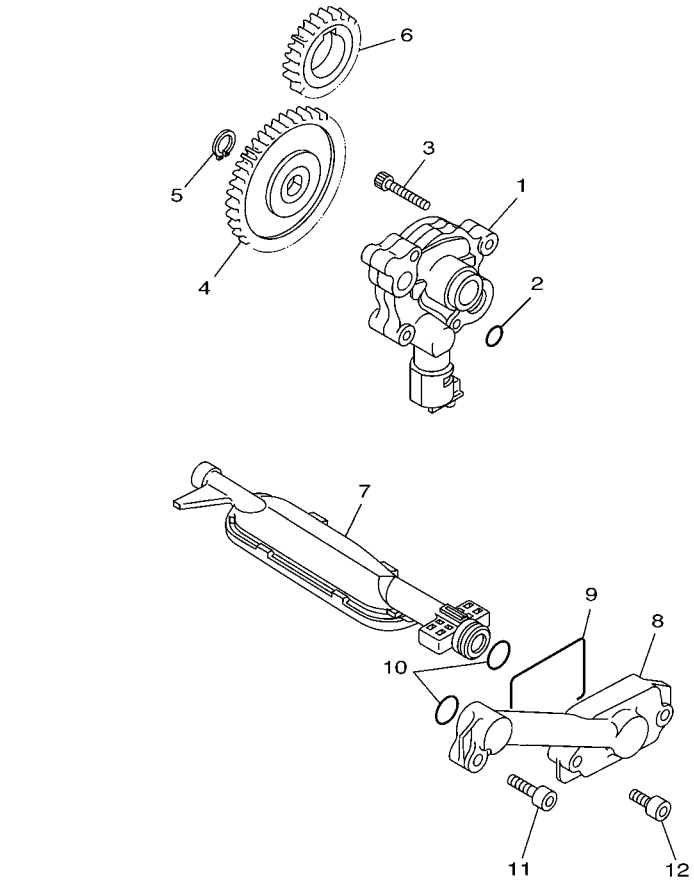


4VR1300-7060


FIG. 6 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–13300–00	OIL PUMP ASSY	1					
2	93210–10096	O-RING	1					
3	91317–06030	BOLT	3					
4	4VR–13325–01	GEAR, PUMP DRIVEN (39T)	1					
5	99009–11400	CIRCLIP	1					
6	22U–13324–00	GEAR, DRIVE (24T)	1					
7	4TR–13410–00	STRAINER HOUSING ASSY	1					
8	4VR–13417–00	COVER, STRAINER	1					
9	22U–13415–00	SEAL, OIL STRAINER	1					
10	93210–15151	O-RING	2					
11	91314–06025	BOLT, HEXAGON SOCKET HEAD	1					
12	91314–06020	BOLT, HEXAGON SOCKET HEAD	2					

FIG. 7 INTAKE

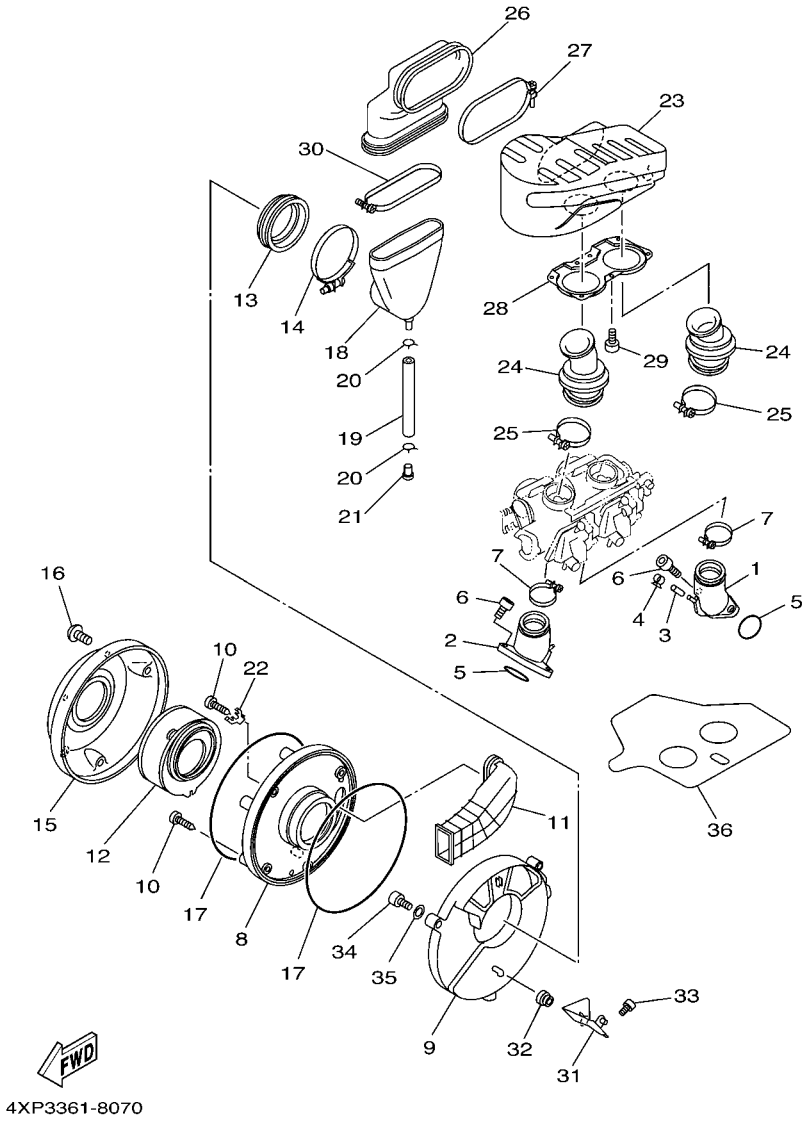

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–13586–01	JOINT, CARBURETOR 1	1					
2	4TR–13596–01	JOINT, CARBURETOR 2	1					
3	16G–13569–00	PLUG, BLIND	1					
4	90467–10039	CLIP	1					
5	93210–36769	O-RING	2					
6	91317–06020	BOLT	4					
7	4TR–13474–01	BAND	2					
8	4TR–14411–00	CASE, AIR CLEANER 1	1					
9	4TR–14417–01	COVER 1	1					
10	97707–50125	SCREW, TAPPING	4					
11	4TR–14437–00	DUCT	1					
12	4TR–14451–00	ELEMENT, AIR CLEANER	1					
13	4TR–14463–00	JOINT, AIR CLEANER 2	1					
14	4TR–14456–00	BAND	1					
15	4TR–14421–00	CASE, AIR CLEANER 2	1					
16	92014–05016	BOLT, BUTTON HEAD	3					
17	4TR–14452–00	SEAL	2					
18	4TR–1440G–00	JOINT, AIR FILTER 2	1					
19	90445–11587	HOSE (L100)	1					
20	90467–11106	CLIP	2					
21	90338–08174	PLUG	1					
22	4TR–14413–00	STAY	1					
23	4VR–14431–01	SILENCER, INTAKE 1	1					
24	4TR–14453–00	JOINT, AIR CLEANER 1	2					
25	90460–53200	CLAMP, HOSE	2					
26	4TR–1440F–00	JOINT, AIR FILTER 1	1					
27	4TR–13575–00	BAND	1					

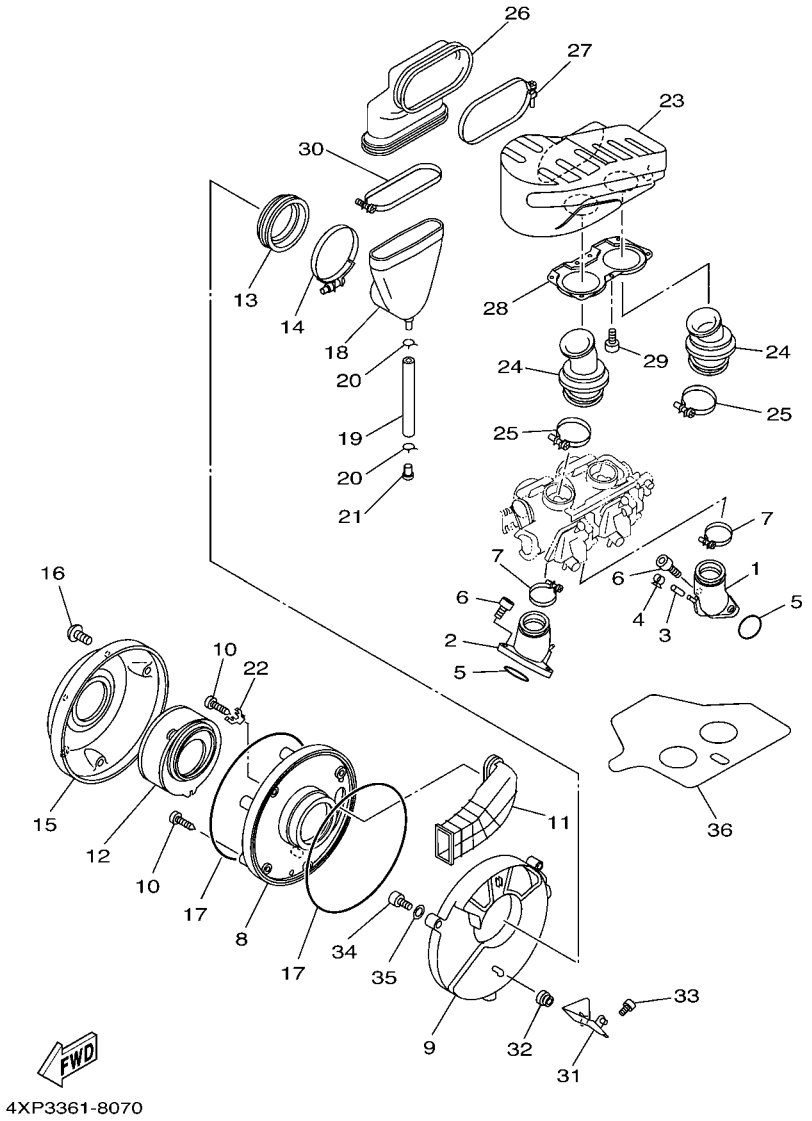


4XP3361-8070


FIG. 7 INTAKE

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	4VR–13594–00	COVER, MANIFOLD 2	1					
29	97707–40106	SCREW, TAPPING	7					
30	4TR–14455–00	BAND	1					
31	4TR–14499–00	STAY 2	1					
32	90480–13398	GROMMET	1					
33	91317–06016	BOLT	2					
34	91317–06020	BOLT	2					
35	92907–06600	WASHER, PLATE	2					
36	4TR–12682–01	PROTECTOR, HEAT	1					

FIG. 8 CARBURETOR

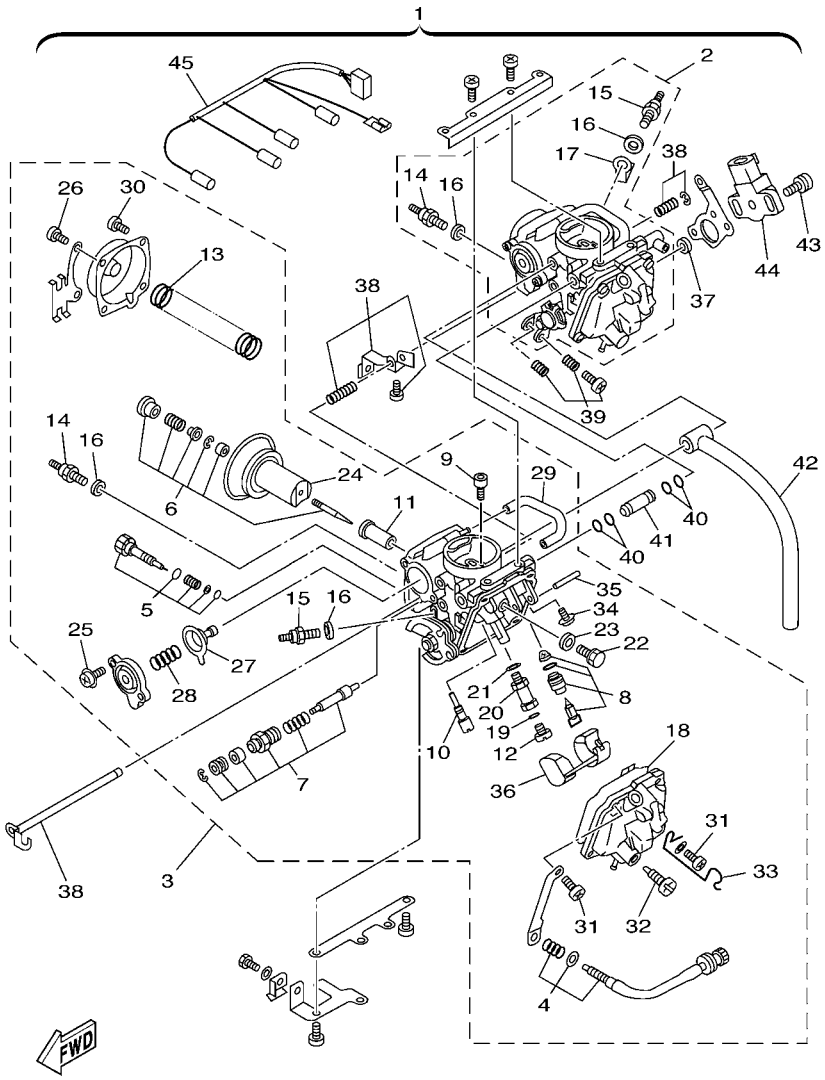

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–14900–50	CARBURETOR ASSY	1					
2	5BN–14901–50	.CARBURETOR ASSY 1	1					(#1) REAR
3	5BN–14902–50	.CARBURETOR ASSY 2	1					(#2) FRONT
4	4TR–14103–00	..THROTTLE SCREW SET	1					(#2) FRONT
5	4TR–14105–00	..PILOT SCREW SET	1					
6	4XP–1490J–00	..NEEDLE SET	1					
7	4DN–1410A–01	..STARTER SET	1					
8	3CF–14107–10	..NEEDLE VALVE SET	1					
9	1HX–14231–20	..JET,PILOT AIR(#100)	1					
10	4KM–14142–20	..JET, PILOT (# 20)	1					
11	3DM–14141–34	..NOZZLE, MAIN	1					
12	620–14231–18	..JET, MAIN (# 90)	1					
13	4VR–14933–00	..SPRING, DIAPHRAGM	1					
14	5FU–83790–00	..HEATER ASSY (15W)	1					
15	5FU–83790–20	..HEATER ASSY (30W)	1					
16	90201–08016	..WASHER, PLATE	2					
17	4DH–82103–00	..TERMINAL 1	1					(#1) REAR
18	1HX–14147–00	..O-RING	1					
19	1AE–14227–00	..O-RING	1					
20	1AE–14261–00	..HOLDER	1					
21	1AE–14237–00	..GASKET	1					
22	1HX–14565–00	..SCREW	1					
23	137–14153–00	..WASHER,MAIN JET	1					
24	4TR–14940–00	..DIAPHRAGM ASSY	1					
25	1UY–14565–00	..SCREW	2					
26	3KW–14486–00	..SCREW, ROD	2					(#2) FRONT
27	22V–14940–00	..DIAPHRAGM ASSY	1					

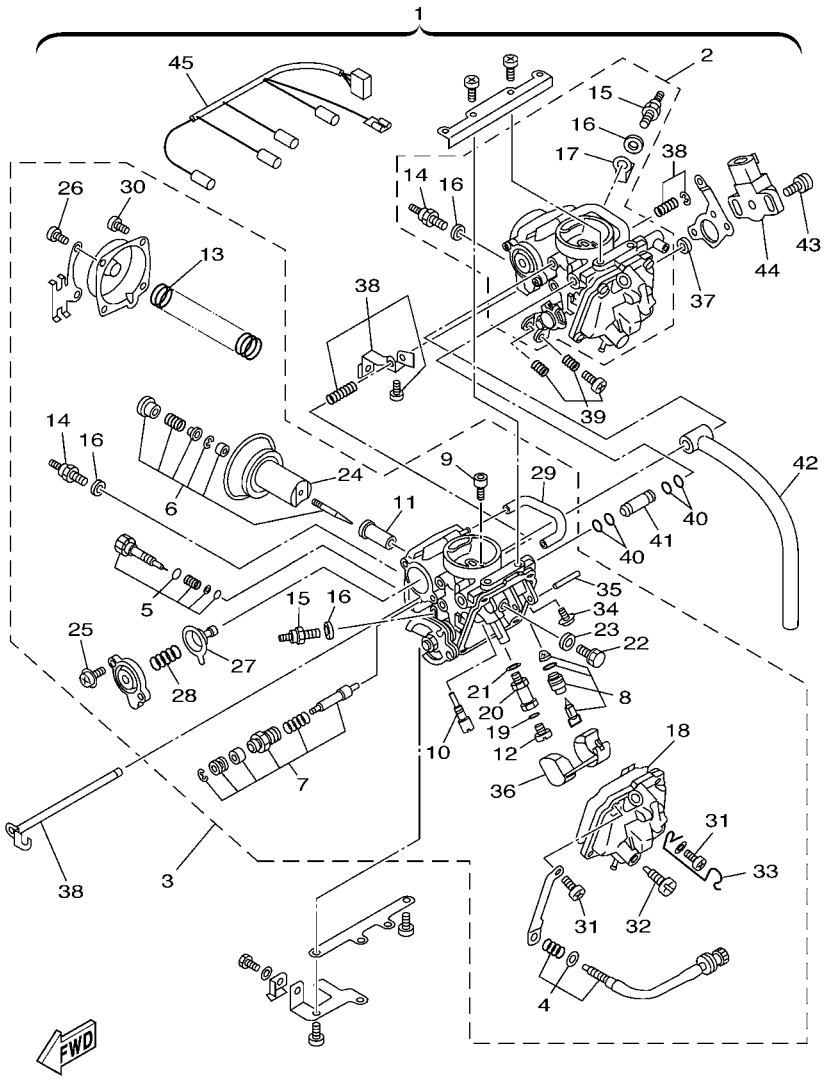

4XS7700-1080

FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	26H–14275–00	..SPRING	1					
29	4TR–14348–00	..PIPE 1	1					
30	98507–04008	..SCREW, PAN HEAD	4					UR (#1) REAR
	98507–04008	..SCREW, PAN HEAD	2					UR (#2) FRONT
31	98507–04014	..SCREW, PAN HEAD	4					
32	12R–14191–00	..PLUG, DRAIN	1					
33	4TR–14937–00	..CLIP	1					(#2) FRONT
34	1FN–14565–00	..SCREW	1					
35	353–14186–00	..PIN, FLOAT	1					
36	1HX–14985–00	..FLOAT	1					
37	4HM–14239–00	.SEAL	1					
38	4TR–1490L–00	.STARTER LEVER SET, 1	1					
39	3KW–1490K–00	.STOP SCREW SET	1					
40	36Y–14147–00	.O-RING	4					
41	1WG–14251–00	.NIPPLE	1					
42	4TR–14987–00	.HOSE	1					
43	4KM–24453–00	.SCREW	2					
44	4NK–85885–00	.THROTTLE POSITION SENSOR ASSY	1					
45	5KP–81517–00	.WIRE, SUB LEAD	1					

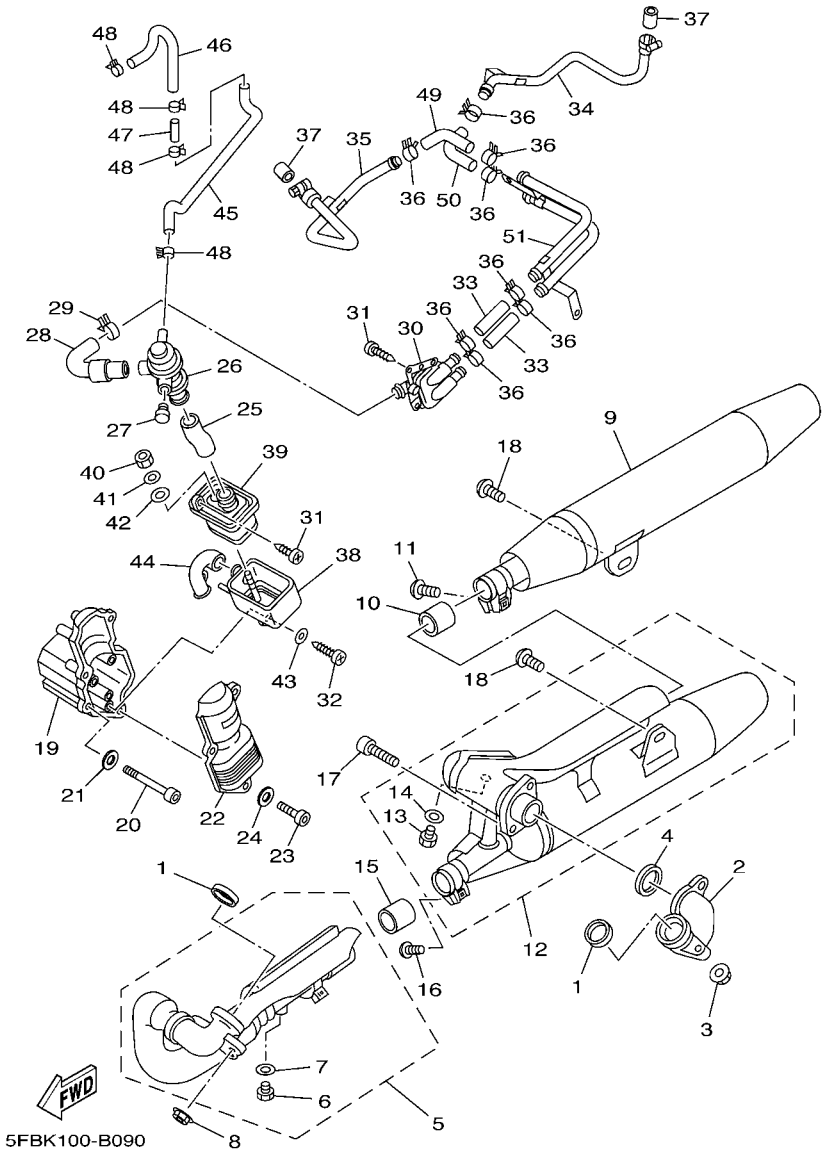


FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–14613–00	GASKET, EXHAUST PIPE	2					
2	4TR–14615–02	JOINT, EXHAUST 1	1					
3	90185–08097	NUT, SELF-LOCKING	2					
4	4BR–14613–00	GASKET, EXHAUST PIPE	1					
5	5BN–14620–02	EXHAUST PIPE ASSY 2	1					
6	90101–06576	.BOLT	1					
7	92990–06600	.WASHER, PLATE	1					
8	90185–08097	NUT, SELF-LOCKING	2					
9	4VR–14703–05	MUFFLER COMP. 1	1					
10	4BH–14714–00	GASKET, MUFFLER	1					
11	92017–08025	BOLT, BUTTON HEAD	1					
12	4VR–14704–06	MUFFLER COMP. 2	1					
13	90101–06576	.BOLT	1					
14	92990–06600	.WASHER, PLATE	1					
15	4BH–14714–00	GASKET, MUFFLER	1					
16	92017–08025	BOLT, BUTTON HEAD	1					
17	91314–08035	BOLT, HEXAGON SOCKET HEAD	2					
18	92017–10020	BOLT, BUTTON HEAD	2					
19	5BN–14604–00	COVER, AIR 1	1					
20	90110–06059	BOLT, HEXAGON SOCKET HEAD	3					
21	92907–06600	WASHER, PLATE	3					
22	5BN–14603–00	COVER 1	1					
23	91314–06020	BOLT, HEXAGON SOCKET HEAD	3					
24	92907–06200	WASHER	3					
25	5BN–14882–00	HOSE, BEND 2	1					
26	5BN–14840–00	AIR CUT VALVE ASSY	1					
27	90338–10132	PLUG	1					

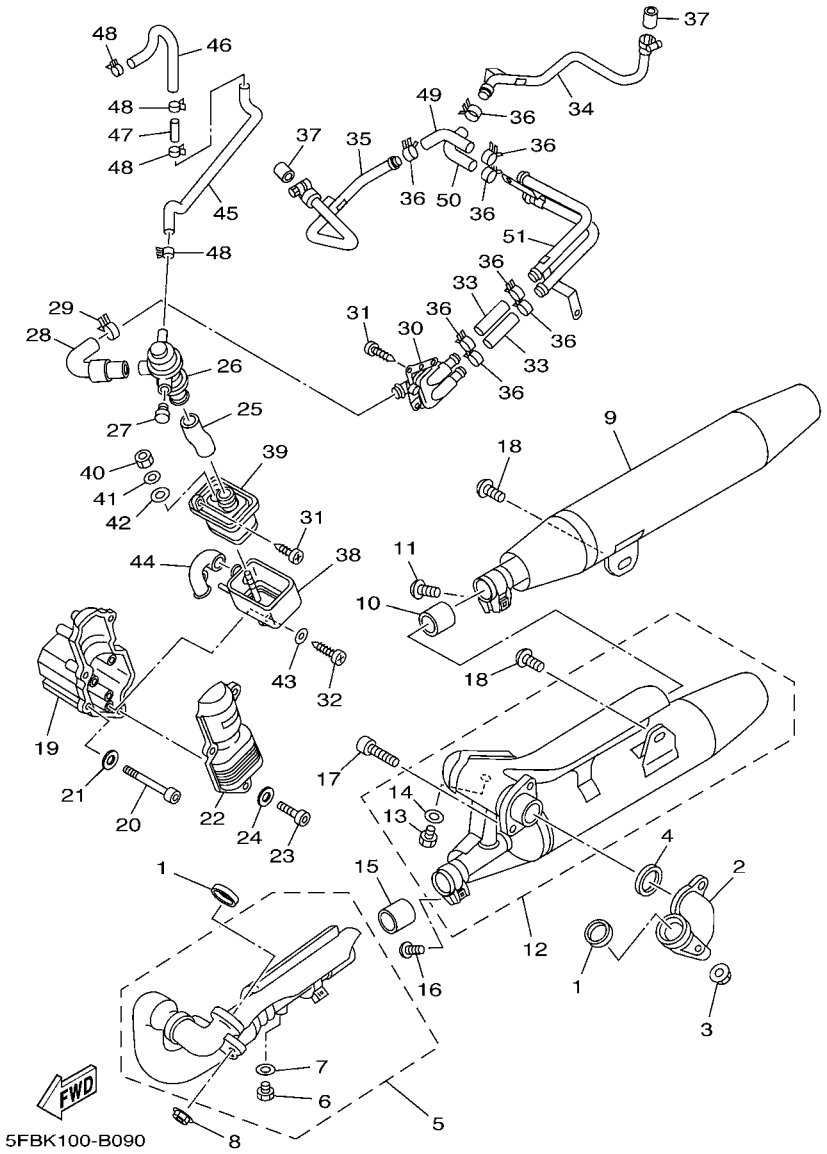


FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	5BN–14883–00	HOSE, BEND 3	1					
29	90467–19065	CLIP	1					
30	5BN–14808–00	REED VALVE ASSY	1					
31	97707–60114	SCREW, TAPPING	4					
32	97707–60120	SCREW, TAPPING	1					
33	5BN–14884–00	HOSE, BEND 4	2					
34	5BN–14871–00	PIPE 1	1					
35	5BN–14872–00	PIPE 2	1					
36	90468–08104	CLIP	8					
37	4KM–14714–01	GASKET, MUFFLER	2					
38	5BN–14857–01	CASE, AIR CLEANER	1					
39	5BN–14858–00	CAP, CASE	1					
40	95607–05100	NUT, U	1					
41	92907–05200	WASHER	1					
42	90202–05057	WASHER, PLATE	1					
43	90201–062P7	WASHER, PLATE	1					
44	5BN–14885–00	HOSE, BEND 5	1					
45	5BN–13542–00	HOSE, VACUUM SENSING 1	1					
46	5BN–13544–00	HOSE, VACUUM SENSING 2	1					
47	4MM–13582–00	PIPE	1					
48	90467–08092	CLIP	4					
49	5BN–14881–00	HOSE, BEND 1	1					
50	5BN–14881–10	HOSE, BEND 1	1					
51	5BN–14875–00	PIPE 5	1					

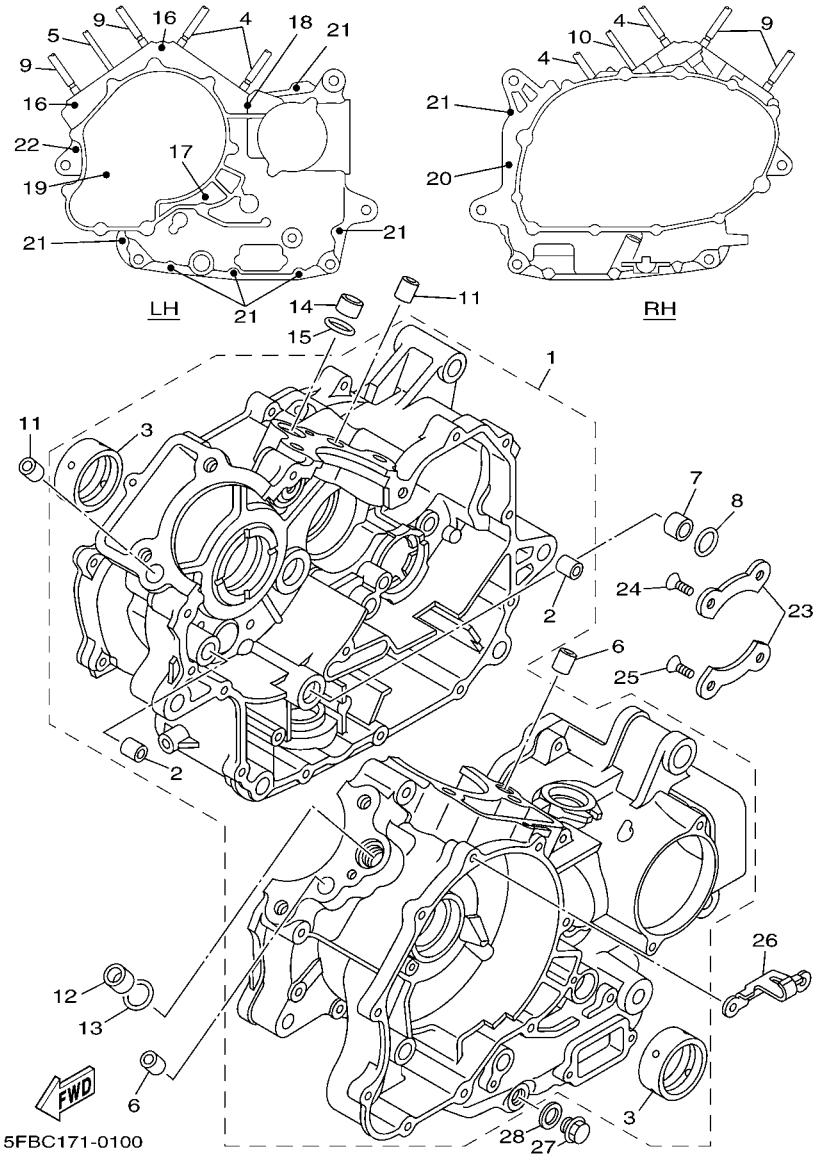


FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–15100–20	CRANKCASE ASSY	1					
2	91815–16017	.PIN, DOWEL	2					
3	22U–11416–80	.PLANE BEARING, CRANKSHAFT 1	2					UR BLUE
	22U–11416–90	.PLANE BEARING, CRANKSHAFT 1	2					UR GREEN
4	90116–10611	BOLT, STUD	4					
5	90116–08404	BOLT, STUD	1					
6	99530–14016	PIN, DOWEL	2					
7	90387–16547	COLLAR	1					
8	93210–18322	O-RING	1					
9	90116–10405	BOLT, STUD	4					
10	90116–08404	BOLT, STUD	1					
11	99530–14016	PIN, DOWEL	2					
12	90387–16547	COLLAR	1					
13	93210–18322	O-RING	1					
14	90387–16547	COLLAR	1					
15	93210–18322	O-RING	1					
16	91314–08060	BOLT, HEXAGON SOCKET HEAD	2					
17	91317–08080	BOLT	1					
18	91314–08100	BOLT, HEXAGON SOCKET HEAD	1					
19	91317–06095	BOLT	1					
20	91380–06045	BOLT	1					
21	91317–06045	BOLT	7					
22	91314–06055	BOLT, HEXAGON SOCKET HEAD	1					
23	11H–15383–02	PLATE, BEARING COVER	2					
24	90151–08022	SCREW, COUNTERSUNK	1					
25	90149–08152	SCREW	3					
26	22U–15441–01	HOLDER, CLUTCH CABLE	1					


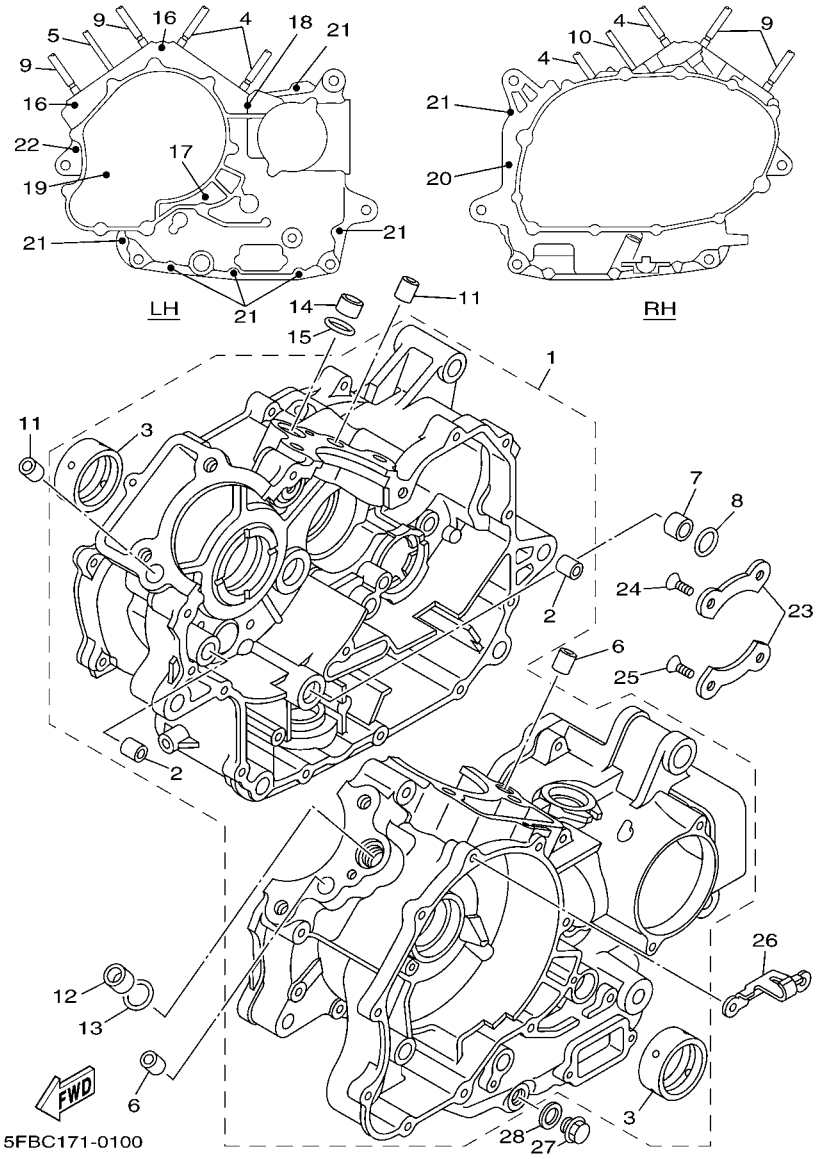


FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
27	90340–14132	PLUG, STRAIGHT SCREW	1					
28	214–11198–01	GASKET	1					

FIG. 11 CRANKCASE COVER 1

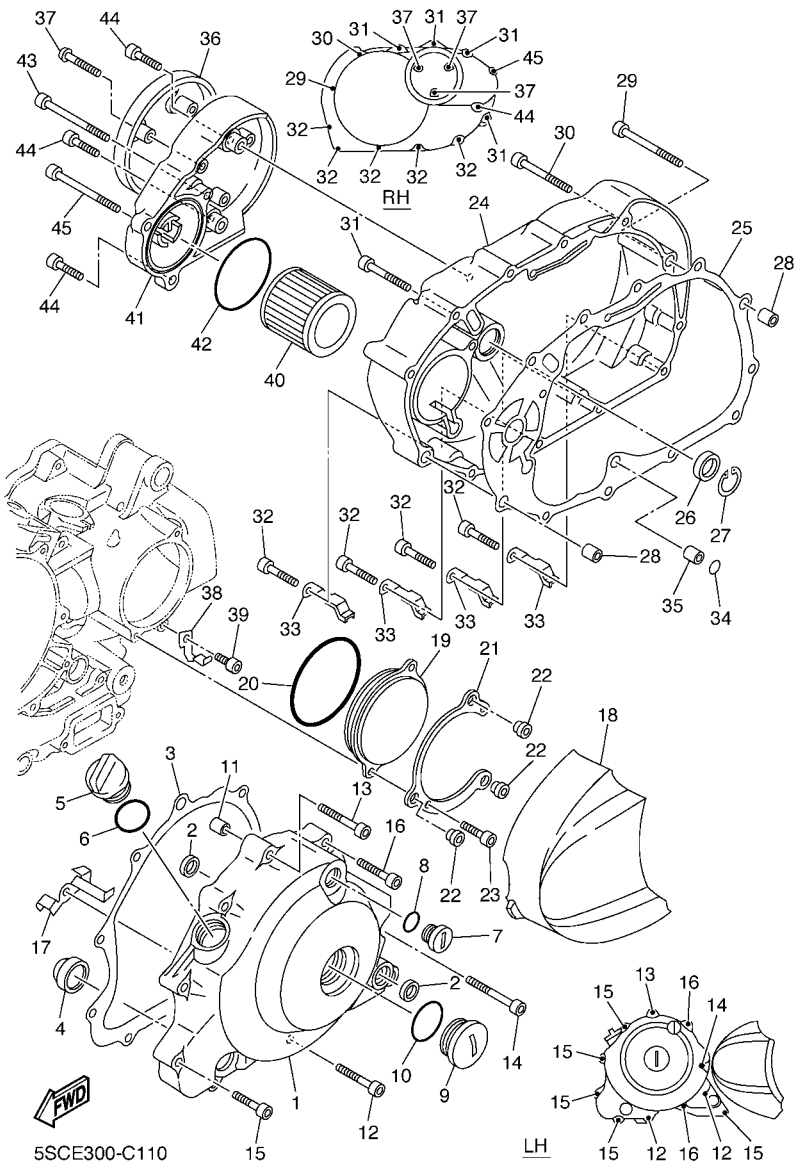

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–15411–00	COVER, CRANKCASE 1	1					
2	93109–12075	OIL SEAL	2					
3	4VR–15451–00	GASKET, CRANKCASE COVER 1	1					
4	2H7–15361–00	GAUGE, LEVEL	1					
5	3F9–15362–00	PLUG, OIL LEVEL	1					
6	93210–27370	O-RING	1					
7	90340–14153	PLUG, STRAIGHT SCREW	1					
8	93210–14369	O-RING	1					
9	90340–32140	PLUG, STRAIGHT SCREW	1					
10	93210–32172	O-RING	1					
11	99530–10114	PIN, DOWEL	2					
12	91314–06040	BOLT, HEXAGON SOCKET HEAD	2					
13	91314–06045	BOLT, HEXAGON SOCKET HEAD	1					
14	91314–06055	BOLT, HEXAGON SOCKET HEAD	1					
15	91314–06030	BOLT, HEXAGON SOCKET HEAD	5					
16	91314–06035	BOLT, HEXAGON SOCKET HEAD	2					
17	3BT–15484–00	CLAMP 2	1					
18	5KP–15415–10	COVER, GENERATOR	1					
19	4TR–15424–00	COVER 2	1					
20	93210–74316	O-RING	1					
21	5KP–1541A–10	STAY,CRANKCASECOVER 1	1					
22	90480–10627	GROMMET	3					
23	91317–06020	BOLT	2					
24	4TR–15421–00	COVER, CRANKCASE 2	1					
25	4VR–15461–00	GASKET, CRANKCASE COVER 2	1					
26	93101–14089	OIL SEAL	1					
27	99009–25500	CIRCLIP	1					


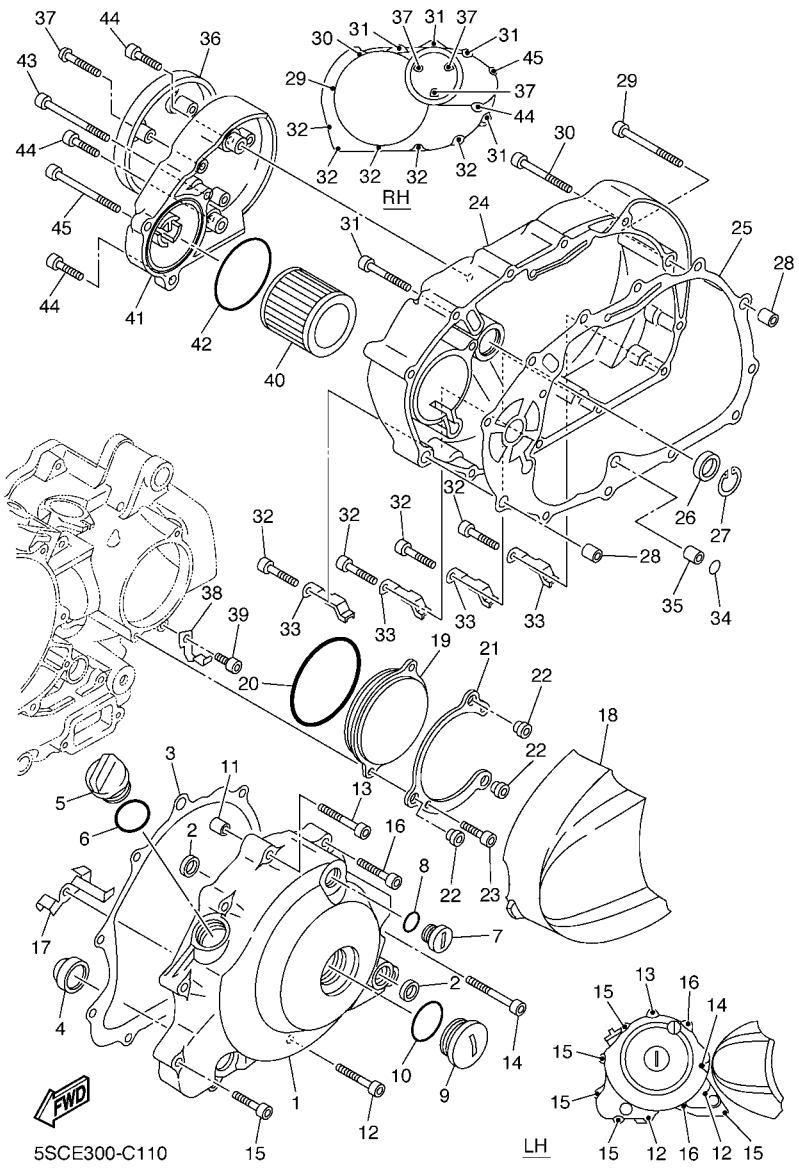


FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	99530–10120	PIN, DOWEL	2					
29	91314–06065	BOLT, HEXAGON SOCKET HEAD	1					
30	91314–06055	BOLT, HEXAGON SOCKET HEAD	1					
31	91314–06045	BOLT, HEXAGON SOCKET HEAD	4					
32	91314–06030	BOLT, HEXAGON SOCKET HEAD	5					
33	90462–10115	CLAMP	4					
34	93210–15566	O-RING	1					
35	91815–16017	PIN, DOWEL	1					
36	4VR–15423–00	COVER 2	1					
37	92014–06035	BOLT, BUTTON HEAD	3					
38	90462–08070	CLAMP	1					
39	91317–06012	BOLT	1					
40	4X7–13440–01	ELEMENT ASSY, OIL CLEANER	1					
41	4TR–13447–00	COVER, OIL ELEMENT	1					
42	93210–64297	O-RING	1					
43	90110–06010	BOLT, HEXAGON SOCKET HEAD	1					
44	91314–06025	BOLT, HEXAGON SOCKET HEAD	3					
45	91314–06070	BOLT, HEXAGON SOCKET HEAD	1					

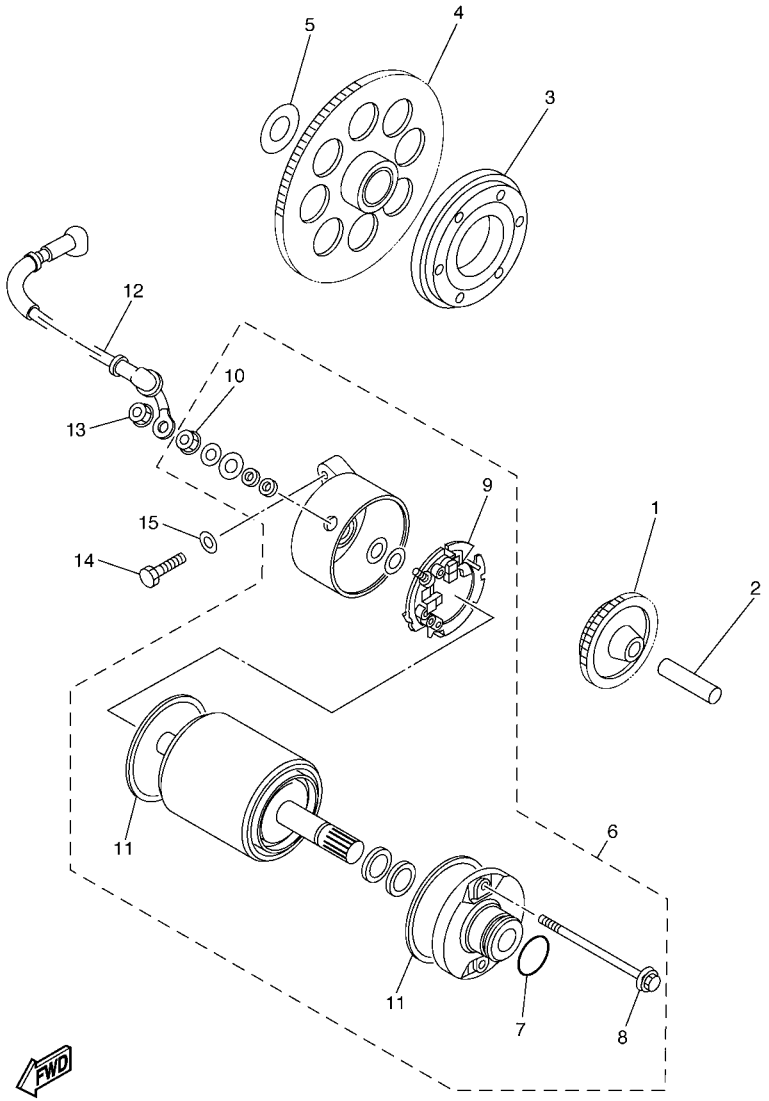


4XSA700-C120


FIG. 12 STARTER CLUTCH

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	22U–15512–00	GEAR, IDLER 1 (12T/50T)	1					
2	5H0–15521–00	SHAFT 1	1					
3	4TR–15590–00	STARTER ONE-WAY ASSY	1					
4	4VR–15517–01	GEAR, IDLER 2 (66T)	1					
5	90201–25290	WASHER, PLATE	1					
6	3JB–81890–00	MOTOR ASSY	1					
7	1FK–81847–00	.O-RING	1					
8	3HE–81826–00	.BOLT	2					
9	3KS–81840–00	.BRUSH HOLDER ASSY	1					
10	4XV–8182A–00	.NUT	1					
11	11H–81844–00	.GASKET	2					
12	4VR–81815–00	CORD, STARTER MOTOR	1					
13	4XV–8182A–00	NUT	1					
14	97070–06025	BOLT	2					
15	92990–06600	WASHER, PLATE	2					

FIG. 13 CLUTCH

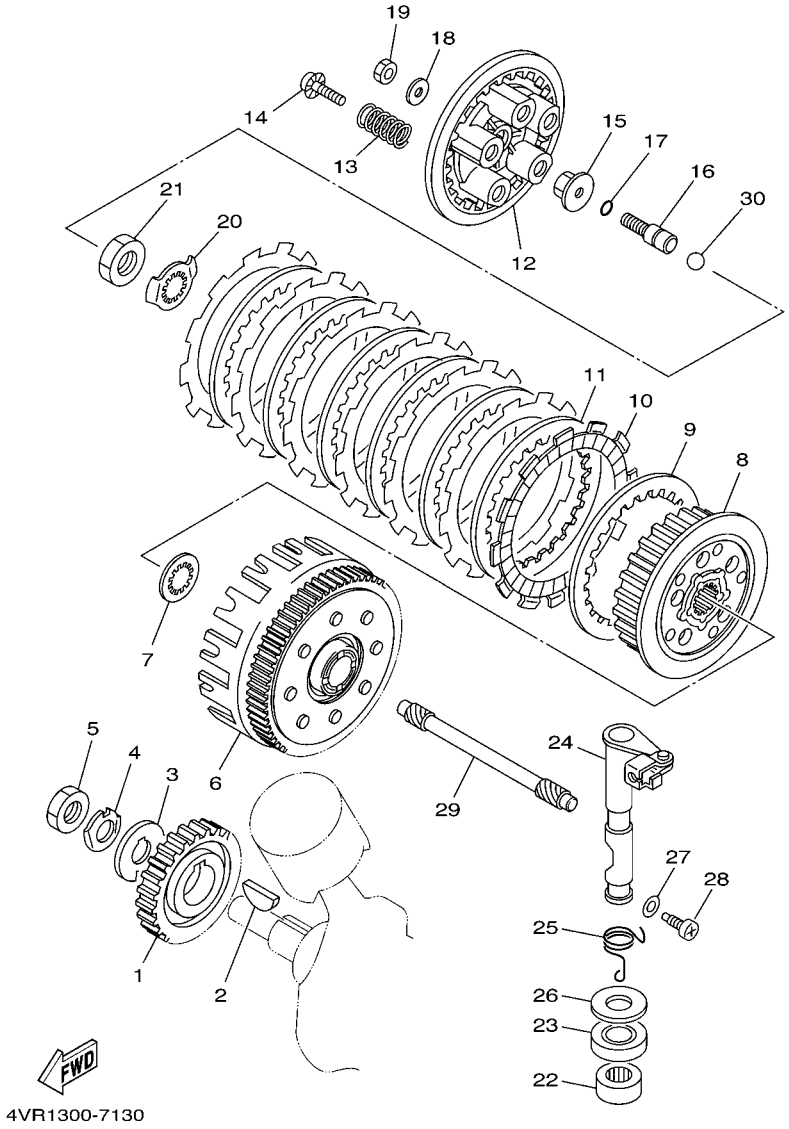

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–16111–00	GEAR, PRIMARY DRIVE (38T)	1					
2	90280–07036	KEY, WOODRUFF	1					
3	90214–16026	WASHER, CLAW	1					
4	90215–16157	WASHER, LOCK	1					
5	90170–16256	NUT	1					
6	5BN–16150–00	PRIMARY DRIVEN GEAR COMP.	1					
7	22U–16154–00	PLATE, THRUST 1	1					
8	4VR–16371–00	BOSS, CLUTCH	1					
9	4X7–16324–00	PLATE, CLUTCH 1	1					
10	22U–16321–00	PLATE, FRICTION	7					
11	4X7–16325–00	PLATE, CLUTCH 2	6					
12	22U–16351–00	PLATE, PRESSURE 1	1					
13	90501–23738	SPRING, COMPRESSION	5					
14	90159–06016	SCREW, WITH WASHER	5					
15	1W1–16358–01	PLATE, PUSH	1					
16	4VR–16356–00	ROD, PUSH 1	1					
17	93210–09525	O-RING	1					
18	92907–06200	WASHER	1					
19	95307–06600	NUT	1					
20	90215–22210	WASHER, LOCK	1					
21	90170–20310	NUT	1					
22	93315–21813	BEARING	1					
23	93102–18278	OIL SEAL	1					
24	22U–16380–00	PUSH LEVER ASSY	1					
25	90508–16577	SPRING, TORSION	1					
26	90201–18262	WASHER, PLATE	1					
27	90430–08119	GASKET	1					

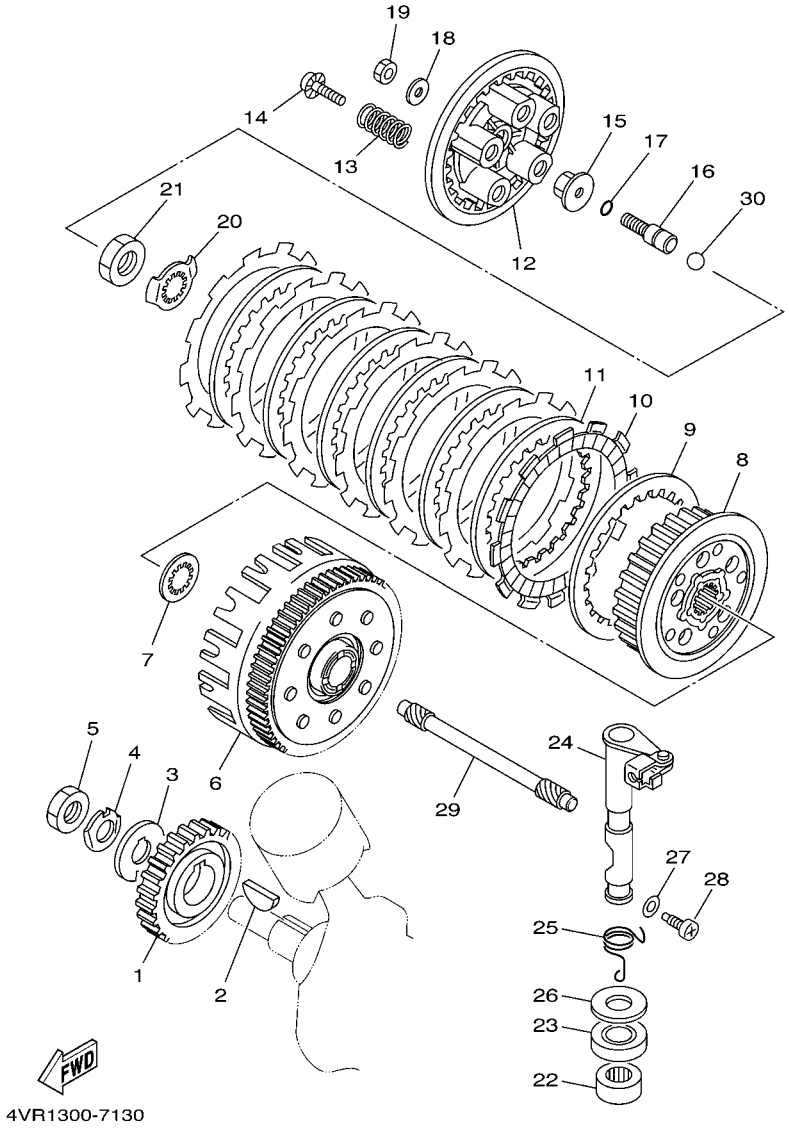


4VR1300-7130

FIG. 13 CLUTCH


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	90149–08067	SCREW	1					
29	22U–16357–00	ROD, PUSH 2	1					
30	93515–32029	BALL	1					

FIG. 14 TRANSMISSION

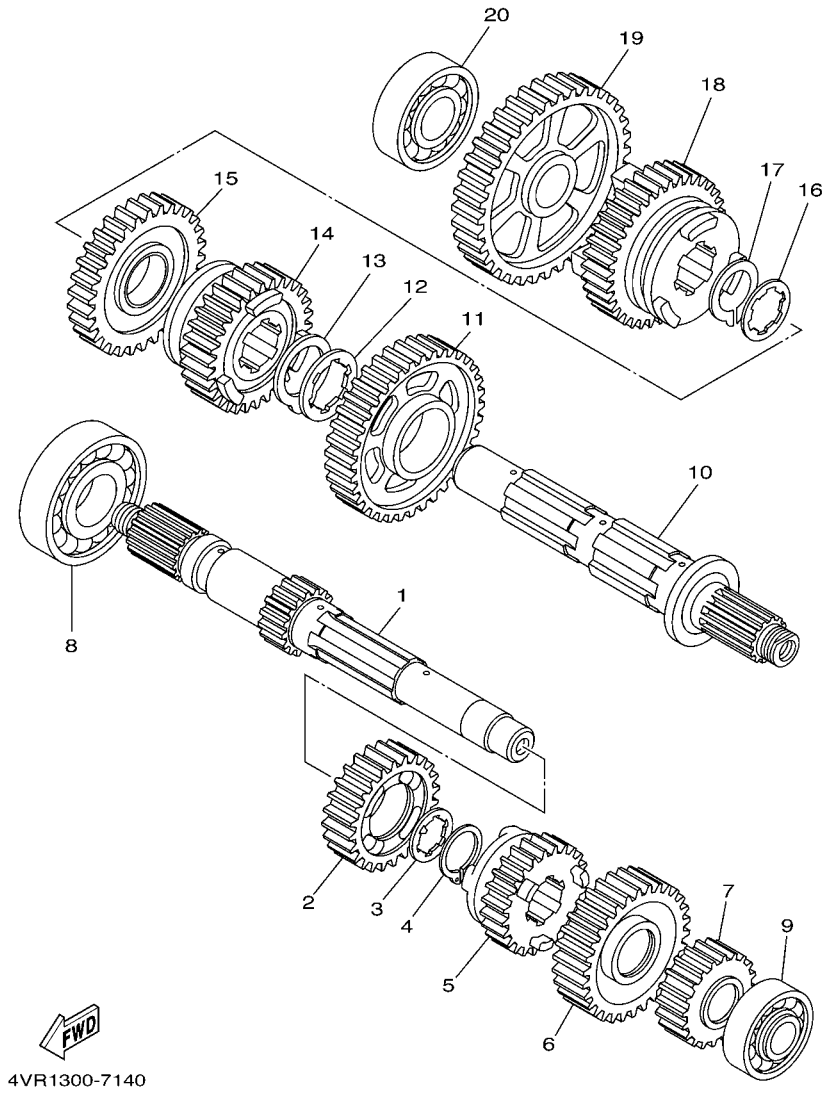

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–17411–00	AXLE, MAIN (14T)	1					
2	3JB–17141–00	GEAR, 4TH PINION (24T)	1					
3	90209–22191	WASHER	1					
4	93440–25084	CIRCLIP	1					
5	4VR–17131–00	GEAR, 3RD PINION (24T)	1					
6	4VR–17151–01	GEAR, 5TH PINION (30T)	1					
7	4KU–17121–00	GEAR, 2ND PINION (20T)	1					
8	93306–30525	BEARING	1					
9	93306–00401	BEARING	1					
10	22U–17402–00	DRIVE AXLE ASSY	1					
11	4KU–17221–00	GEAR, 2ND WHEEL (38T)	1					
12	90209–27192	WASHER	1					
13	93440–30077	CIRCLIP	1					
14	4VR–17251–01	GEAR, 5TH WHEEL (29T)	1					
15	4VR–17231–00	GEAR, 3RD WHEEL (35T)	1					
16	90209–22191	WASHER	1					
17	93440–25084	CIRCLIP	1					
18	4TR–17241–00	GEAR, 4TH WHEEL (28T)	1					
19	22U–17211–00	GEAR, 1ST WHEEL (38T)	1					
20	93306–00428	BEARING	1					

FIG. 15 MIDDLE DRIVE GEAR

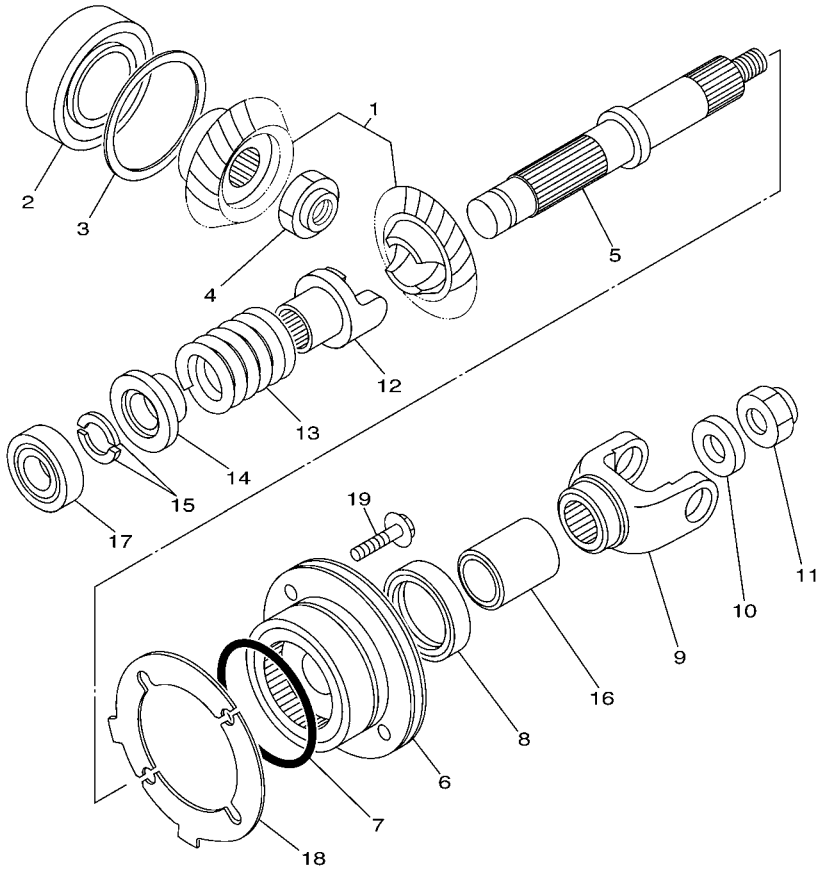

4TR1010-6150

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–Y1754–00	MIDDLE GEAR COMP.	1					
2	93306–20711	BEARING	1					
3	4H7–17537–00–20	SHIM, THRUST (0.20T)	1					UR
	4H7–17537–00–30	SHIM, THRUST (0.30T)	1					UR
	4H7–17537–00–40	SHIM, THRUST (0.40T)	1					UR
4	90179–18396	NUT	1					
5	4VR–17553–00	SHAFT, MIDDLE DRIVEN	1					
6	4VR–W1752–00	HOUSHING COMP.	1					
7	93210–71360	O-RING	1					
8	93101–35097	OIL SEAL	1					
9	22U–17556–00	YOKE, JOINT	1					
10	90201–14633	WASHER, PLATE	1					
11	90185–14070	NUT, SELF-LOCKING	1					
12	4VR–17527–00	CAM, DRIVEN	1					
13	90501–60716	SPRING, COMPRESSION	1					
14	22U–17524–00	HOLDER	1					
15	3H5–17529–00	WASHER, THRUST	2					
16	90387–2511R	COLLAR	1					
17	93306–00401	BEARING	1					
18	3JB–17531–00	SHIM, PINION (0.10T)	2					UR
	3JB–17531–10	SHIM, PINION (0.15T)	2					UR
	3JB–17531–20	SHIM, PINION (0.20T)	2					UR
	3JB–17531–30	SHIM, PINION (0.30T)	2					UR
	3JB–17531–40	SHIM, PINION (0.40T)	2					UR
	3JB–17531–50	SHIM, PINION (0.50T)	2					UR
19	95827–08035	BOLT, FLANGE	4					


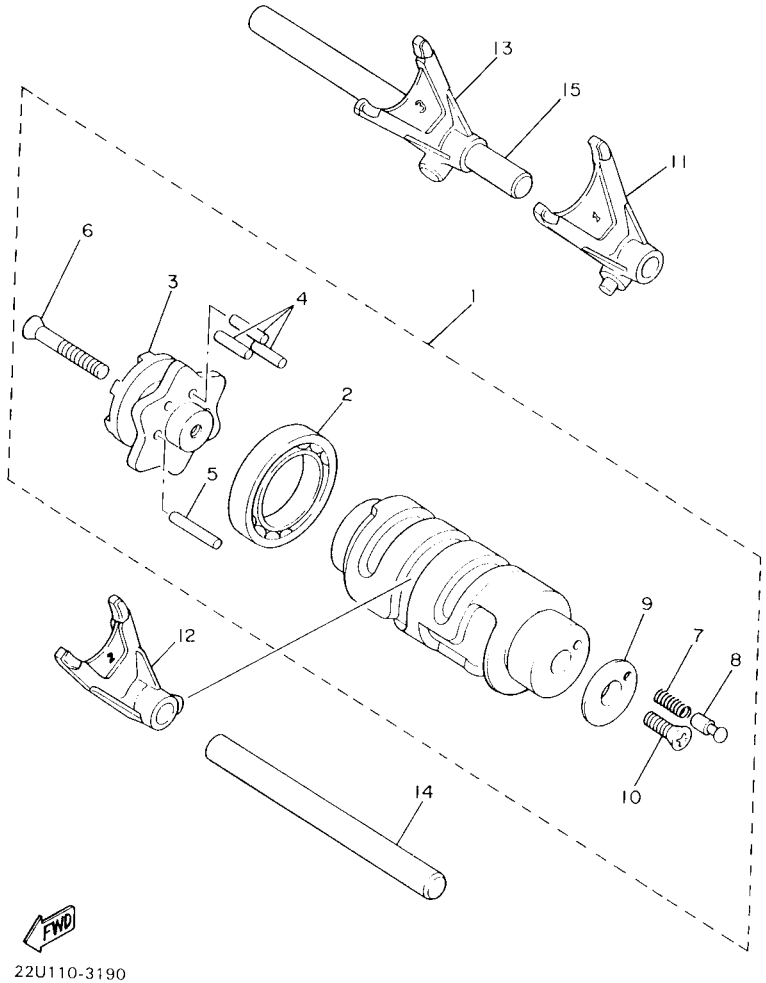


FIG. 16 SHIFT CAM & FORK

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–18540–02	SHIFT CAM ASSY	1					
2	93306–90602	.BEARING	1					
3	4H7–18185–00	.SEGMENT	1					
4	93604–16092	.PIN, DOWEL	3					
5	93604–20156	.PIN, DOWEL	1					
6	98707–05035	.SCREW, FLAT HEAD	1					
7	90501–06022	.SPRING, COMPRESSION	1					
8	4UN–18542–00	.POINT, NEUTRAL	1					
9	4UN–18566–00	.PLATE, SIDE 2	1					
10	90149–05321	.SCREW	1					
11	4TR–18511–00	FORK, SHIFT 1	1					
12	4TR–18512–00	FORK, SHIFT 2	1					
13	4TR–18513–00	FORK, SHIFT 3	1					
14	3YF–18531–00	BAR, SHIFT FORK GUIDE 1	1					
15	4TR–18535–00	BAR, SHIFT FORK GUIDE 2	1					

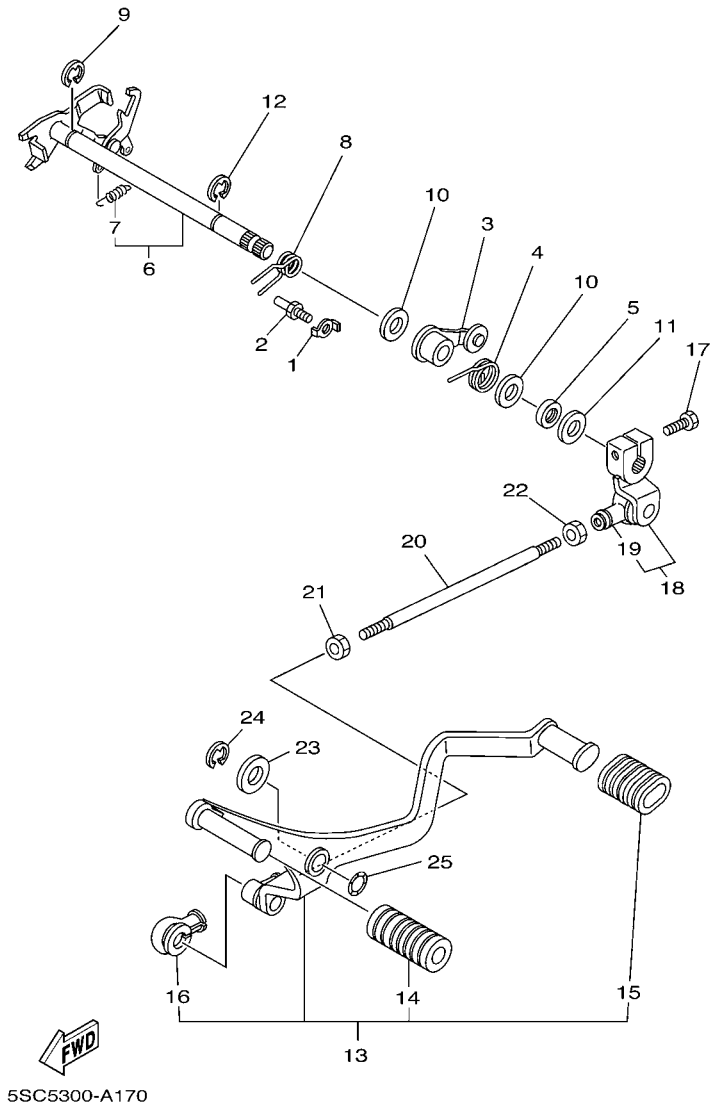


5SC5300-A170

FIG. 17 SHIFT SHAFT


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	90215–18178	WASHER, LOCK	1					
2	4G0–18127–00	STOPPER, SCREW	1					
3	4TR–18140–00	STOPPER LEVER ASSY	1					
4	90508–290B5	SPRING, TORSION	1					
5	93102–12106	OIL SEAL (SD 12-22-5 HS)	1					
6	4TR–18120–00	SHIFT LEVER ASSY	1					
7	90506–08227	.SPRING, TENSION	1					
8	90508–32536	SPRING, TORSION	1					
9	99001–10600	CIRCLIP	1					
10	90201–12588	WASHER, PLATE	2					
11	90201–12575	WASHER, PLATE	1					
12	99001–10600	CIRCLIP	1					
13	5BN–18110–00	SHIFT PEDAL ASSY	1					
14	4NK–18113–10	.COVER, SHIFT PEDAL	1					
15	22N–18113–00	.COVER, SHIFT PEDAL	1					
16	2H9–18154–00	.COVER, DUST	1					
17	97024–06020	BOLT	1					
18	4TR–18112–00	ARM, SHIFT	1					
19	2H9–18154–00	.COVER, DUST	1					
20	5A8–18115–00	ROD, SHIFT	1					
21	90170–06228	NUT(COUNTER CLOCKWISE)	1					
22	95304–06700	NUT	1					
23	90201–12688	WASHER, PLATE	1					
24	99009–12400	CIRCLIP	1					
25	90206–12074	WASHER, WAVE	1					

FIG. 18 FRAME

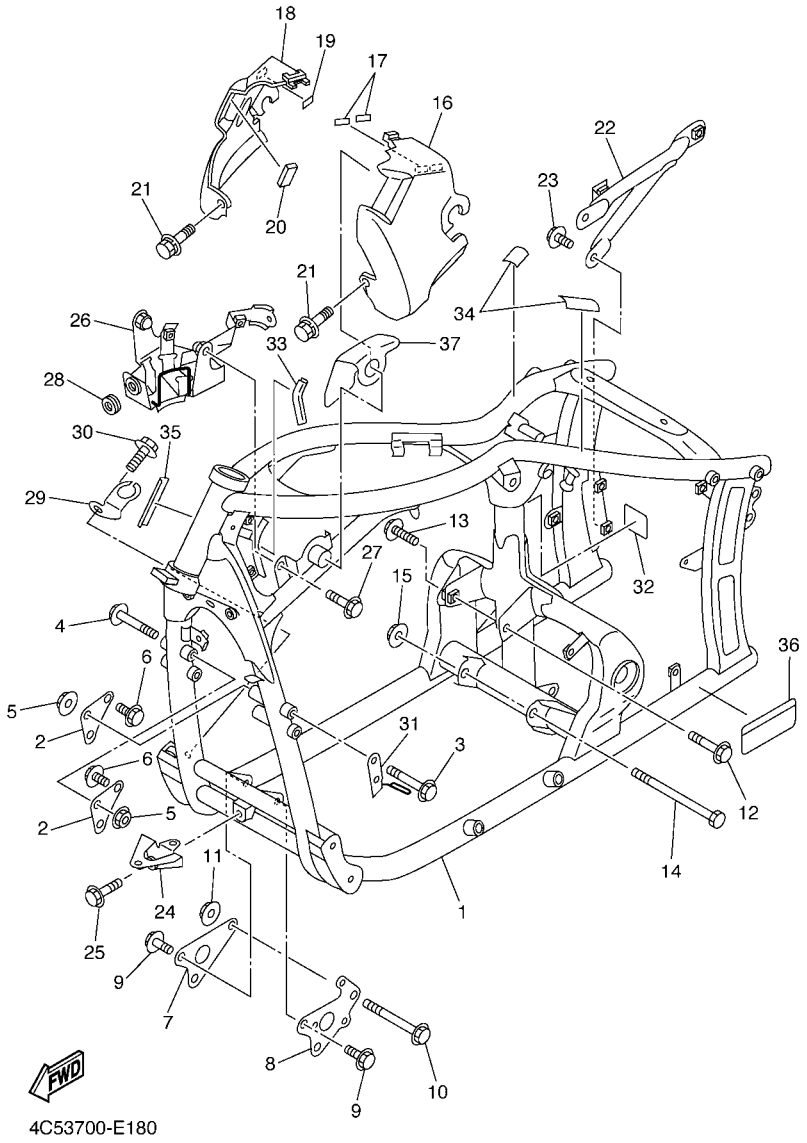

4C53700-E180

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4XS–21110–10	FRAME COMP.	1					
2	4VR–21315–00	STAY, ENGINE 2	2					
3	90105–082A4	BOLT, FLANGE	2					
4	90105–084A1	BOLT, FLANGE	2					
5	90179–08684	NUT	4					
6	95817–10025	BOLT, FLANGE	2					
7	4VR–21317–00	STAY, ENGINE 3	1					
8	5BN–21317–00	STAY, ENGINE 3	1					
9	90105–08307	BOLT, FLANGE	4					
10	95814–10100	BOLT, FLANGE	1					
11	90179–10658	NUT	1					
12	90105–10253	BOLT, FLANGE	1					
13	90105–10232	BOLT, FLANGE	1					
14	90101–12694	BOLT	1					
15	90179–12004	NUT	1					
16	4TR–2171E–00	COVER, SIDE 5	1					
17	3BN–21747–00	DAMPER	2					
18	4TR–2171X–40	COVER, SIDE 6	1					
19	3BN–21747–00	DAMPER	1					
20	4SV–28372–00	DAMPER	1					
21	90119–06236	BOLT, WITH WASHER	2					
22	4TR–21460–01	STAY, MUFFLER	1					
23	95817–08014	BOLT, FLANGE	2					
24	4VR–28356–01	STAY 1	1					
25	90105–062A2	BOLT, FLANGE	1					
26	4TR–24491–10	BRACKET, FUEL PUMP	1					
27	95807–06014	BOLT, FLANGE	2					

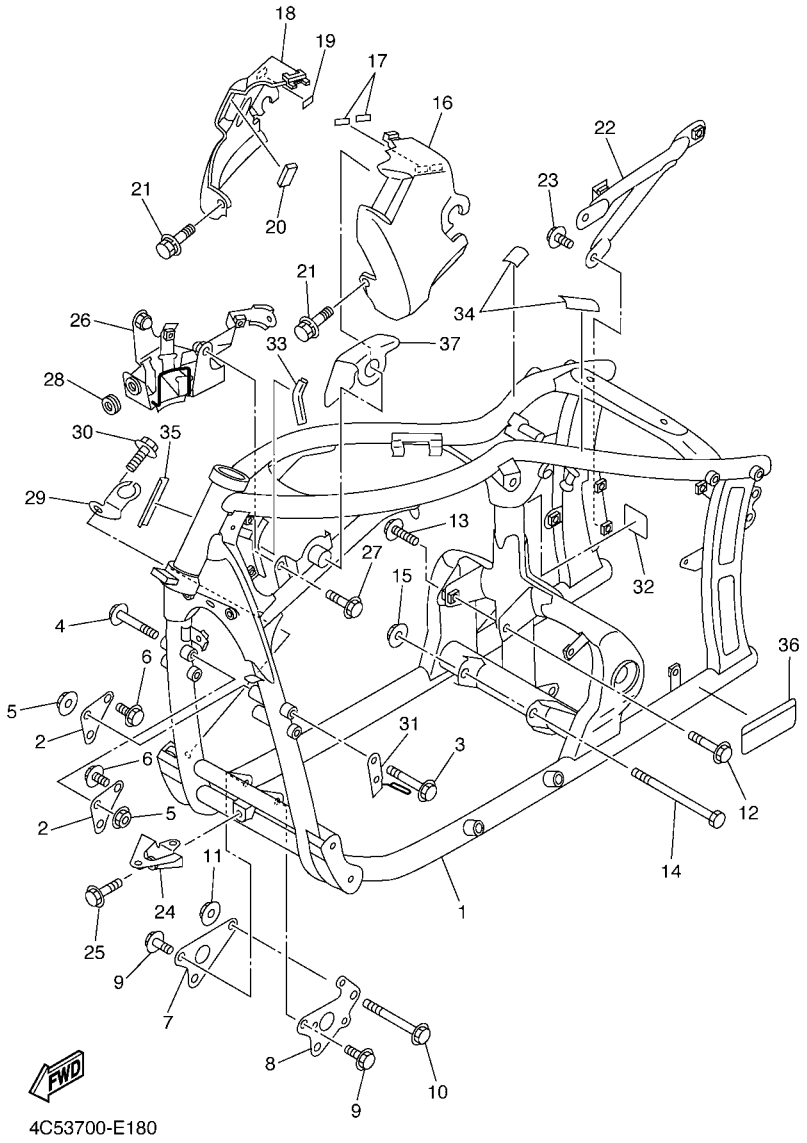


4C53700-E180

FIG. 18 FRAME

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	90480–12320	GROMMET	1					
29	4TR–2144G–01	STAY, STOP SWITCH	1					
30	95807–06012	BOLT, FLANGE	1					
31	4VR–21161–00	HOLDER, CABLE	1					
32	3FY–21575–01	SEAL 1	1					
33	4GY–2214F–00	DAMPER 1	1					
34	3SP–21732–00	SEAL 1	2					
35	3HA–24141–00	PROTECTOR, FUEL TANK	1					
36	5BN–21668–00	LABEL, TIRE	1					
37	5KP–21266–00	SHEET 1	1					

FIG. 19 FENDER

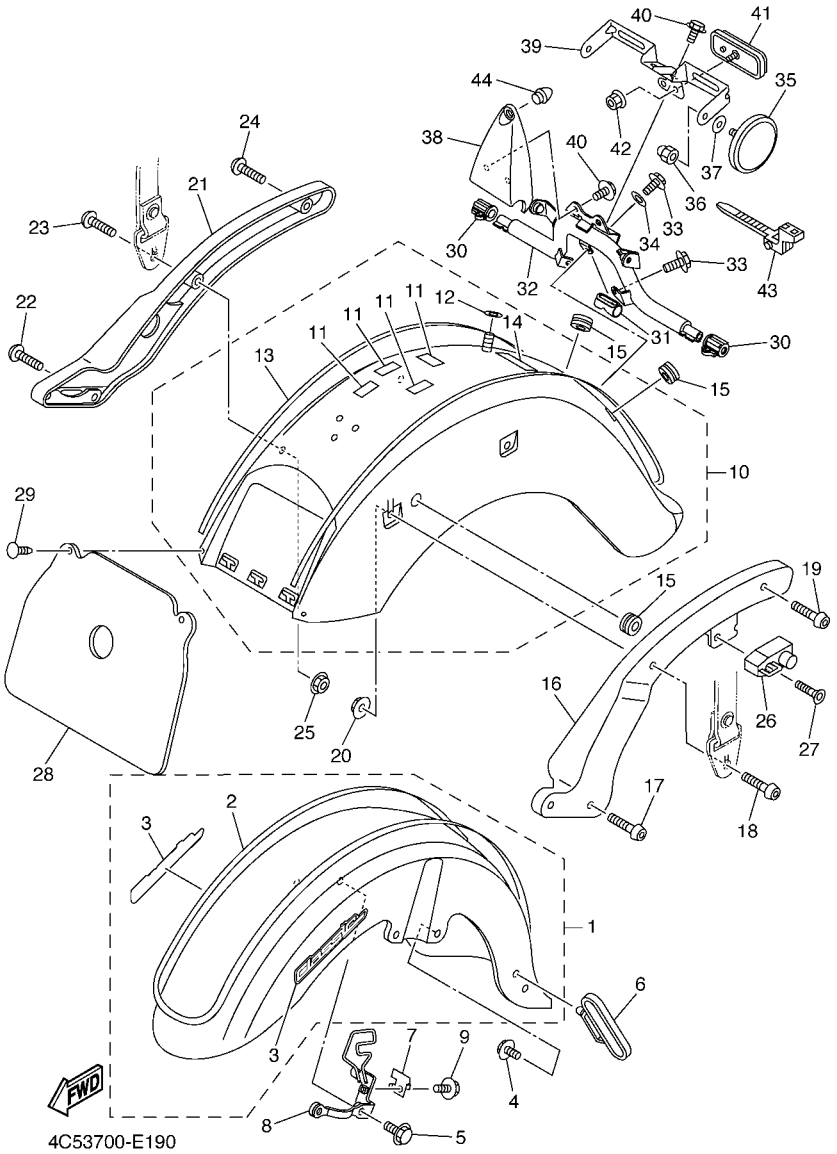

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–Y2151–2A–XJ	FRONT FENDER ASSY	1					UR BS4/S3 FOR BS4
	5BN–Y2151–2B–P3	FRONT FENDER ASSY	1					UR FOR BWC1
2	5SC–21570–90	.GRAPHIC SET, FRONT FENDER	1					UR FOR BS4
	5SC–21570–A0	.GRAPHIC SET, FRONT FENDER	1					UR FOR BWC1
3	5BN–21578–J0	.EMBLEM	2					
	5BN–21578–P0	.EMBLEM	2					
4	95817–08016	BOLT, FLANGE	2					
5	95814–08020	BOLT, FLANGE	2					
6	5BN–21518–01	HOLDER, CABLE	1					
7	5BN–21598–00	HOLDER, WIRE 2	1					
8	5BN–21587–01	STAY 1	1					
9	95807–06010	BOLT, FLANGE	1					
10	5BN–W216R–X0–XN	REAR FENDER ASSY	1					UR BS4/S3 FOR BS4
	5BN–W216R–Y0–P3	REAR FENDER ASSY	1					UR FOR BWC1
11	3SP–21732–00	.SEAL 1	4					
12	4NK–21735–00	.SEAL 2	1					
13	5SC–2165A–80	.GRAPHIC SET,REAR FENDER	1					UR FOR BS4
	5SC–2165A–90	.GRAPHIC SET,REAR FENDER	1					UR FOR BWC1
14	1D6–2153E–00	.EMBLEM, YAMAHA	1					
15	90480–15061	GROMMET	3					
16	5BN–21613–10	STAY, FENDER 1	1					
17	90157–10043	SCREW, PAN HEAD	2					
18	92014–08040	BOLT, BUTTON HEAD	1					
19	92014–08035	BOLT, BUTTON HEAD	1					
20	90179–08491	NUT	2					
21	5BN–21614–10	STAY, FENDER 2	1					
22	90157–10043	SCREW, PAN HEAD	2					


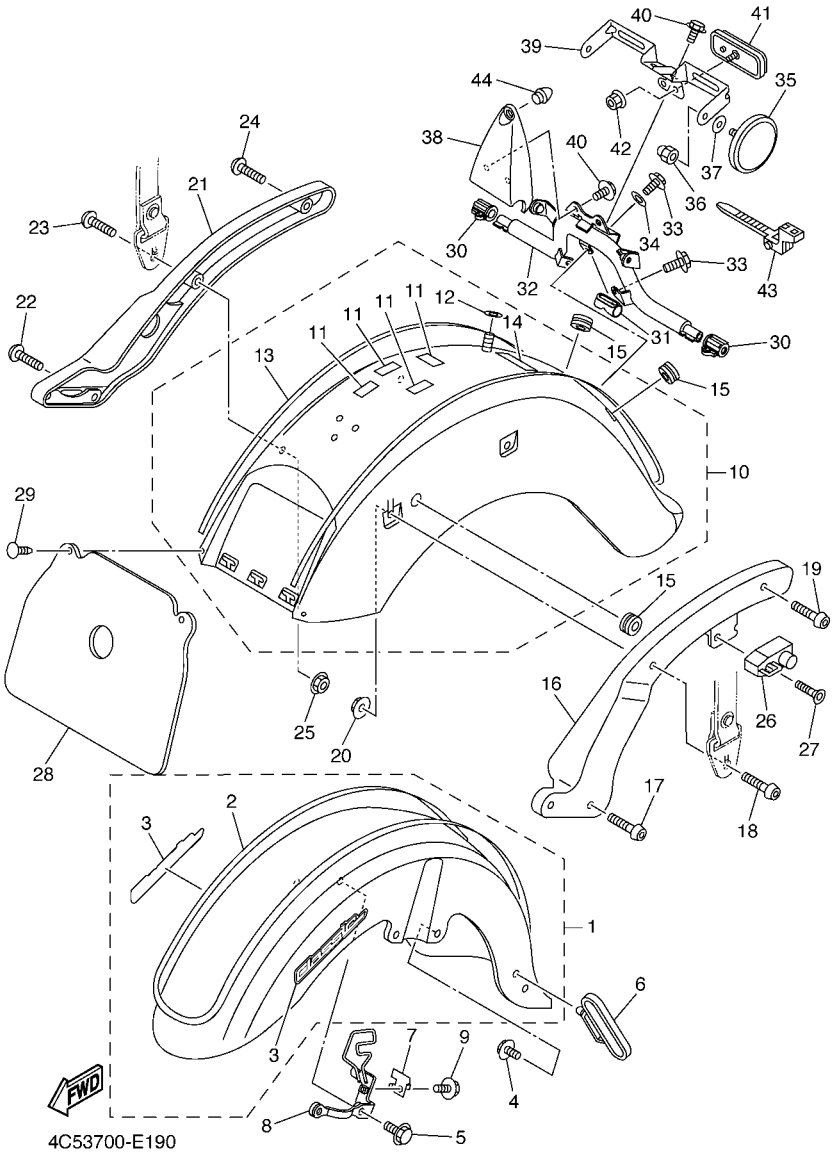


FIG. 19 FENDER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
23	92014–08040	BOLT, BUTTON HEAD	1					
24	92014–08035	BOLT, BUTTON HEAD	1					
25	90179–08491	NUT	2					
26	4R8–21308–01	HELMET HANGER ASSY	1					
27	90149–06154	SCREW	1					
28	4TR–21629–00	GUARD, MUD	1					
29	90269–05039	RIVET	2					
30	5VN–83321–00	DAMPER, FLASHER 1	2					
31	4NK–83345–00	PLUG, BLIND	1					
32	5BN–2317W–30	STAY, 9	1					
33	95024–06012	BOLT, FLANGE	3					
34	90201–06043	WASHER, PLATE	1					
35	4AG–85111–00	REFLECTOR, 1	2					
36	90176–06003	NUT, CROWN	2					
37	90201–06057	WASHER, PLATE	2					
38	5BN–84703–10	BRACKET	1					
39	5BN–84751–30	BRACKET, LICENSE	1					
40	95027–06010	BOLT, FLANGE	4					
41	3Y6–85130–02	REAR REFLECTOR ASSY	1					
42	95707–05500	NUT, FLANGE	1					
43	90464–25002	CLAMP	1					
44	42U–21639–00	DAMPER 2	1					

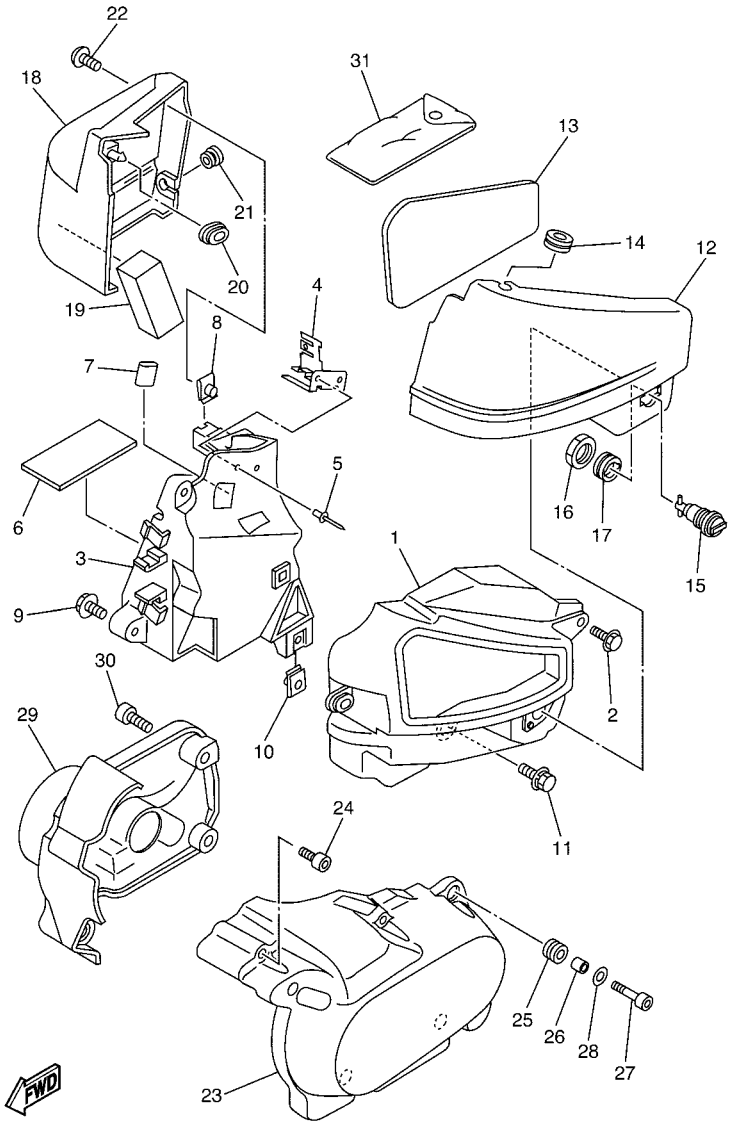

4C5C700-F200

FIG. 20 SIDE COVER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–2160A–00	BOX COMP.	1					
2	90119–06118	BOLT, WITH WASHER	1					
3	4TR–2177G–10	BOX, BATTERY	1					
4	5SC–2172K–00	BRACKET 1	1					
5	90267–32018	RIVET, BLIND	2					
6	5Y1–82122–00	SEAT, BATTERY	1					
7	90446–14359	HOSE	1					
8	90183–06053	NUT, SPRING	1					
9	90119–06118	BOLT, WITH WASHER	3					
10	90183–06023	NUT, SPRING	1					
11	90119–06097	BOLT, WITH WASHER	1					
12	5BN–21711–00–P8	COVER, SIDE 1	1					UR FOR BWC1
	5BN–21711–00–PE	COVER, SIDE 1	1					UR S3 FOR BS4
13	4TR–21717–00	DAMPER	1					
14	90480–12320	GROMMET	1					
15	55K–21708–00	LOCK ASSY 2	1					
16	90170–22187	NUT	1					
17	90480–24186	GROMMET	1					
18	5BN–21721–00–P8	COVER, SIDE 2	1					UR FOR BWC1
	5BN–21721–00–PF	COVER, SIDE 2	1					UR S3 FOR BS4
19	84M–77555–00	PROTECTOR 5	1					
20	90480–01559	GROMMET	1					
21	90480–12320	GROMMET	1					
22	90149–06302	SCREW	1					
23	5BN–21731–00	COVER, SIDE 3	1					
24	90110–06254	BOLT, HEXAGON SOCKET HEAD	2					
25	90480–10289	GROMMET	4					

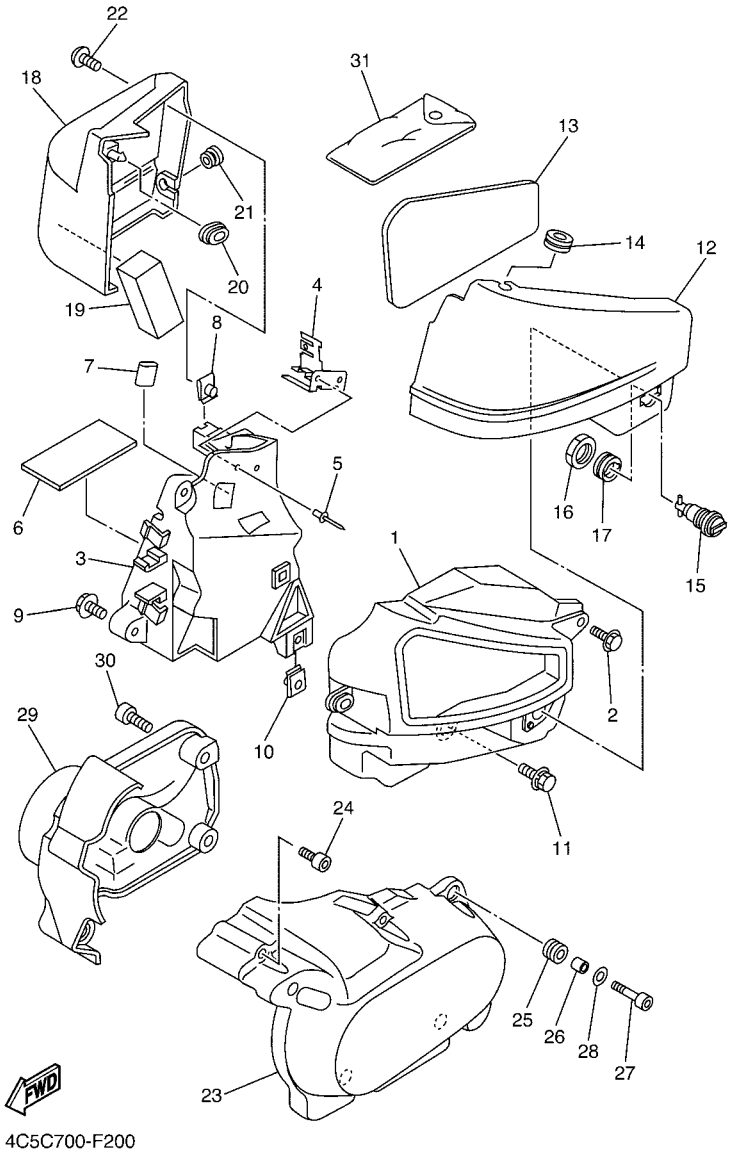

4C5C700-F200

FIG. 20 SIDE COVER

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
26	90387–0600V	COLLAR	4					
27	91314–06020	BOLT, HEXAGON SOCKET HEAD	4					
28	90201–06062	WASHER, PLATE	4					
29	4VR–21741–00	COVER, SIDE 4	1					
30	90110–06200	BOLT, HEXAGON SOCKET HEAD	4					
31	4TR–28100–00	TOOL KIT	1					

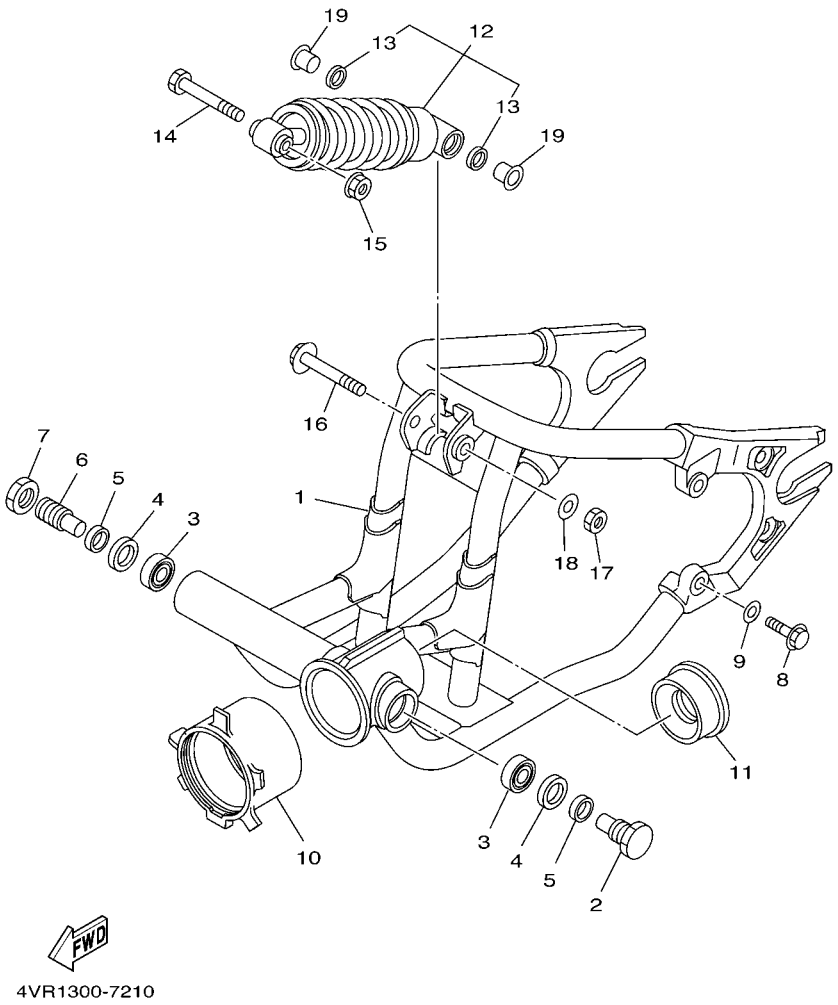

4VR1300-7210

FIG. 21 REAR ARM & SUSPENSION

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–22110–01	REAR ARM COMP.	1					
2	4KM–22141–00	SHAFT, PIVOT	1					
3	93332–00010	BEARING	2					
4	93102–25017	OIL SEAL	2					
5	90387–17543	COLLAR	2					
6	1J7–22141–00	SHAFT, PIVOT	1					
7	1J7–22143–00	NUT	1					
8	90105–101A9	BOLT, FLANGE	4					
9	90201–112U0	WASHER, PLATE	4					
10	4TR–22189–00	BOOT, RUBBER	1					
11	4VR–22184–00	BUSH	1					
12	5BN–22210–60	SHOCK ABSORBER ASSY, REAR	1					
13	93109–18020	.OIL SEAL	2					
14	90109–125F1	BOLT	1					
15	95607–12200	NUT, SELF-LOCKING	1					
16	90109–125F1	BOLT	1					
17	95607–12100	NUT, U	1					
18	90201–124G9	WASHER, PLATE	1					
19	90387–123X6	COLLAR	2					

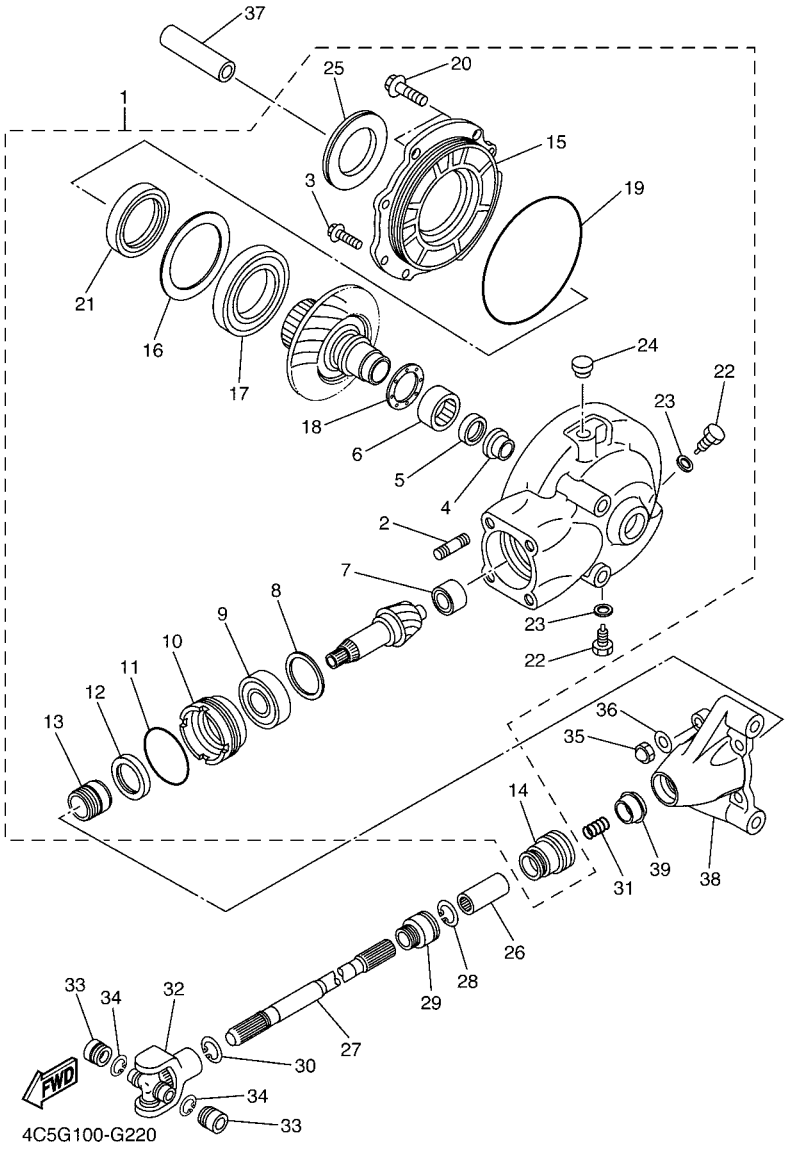


FIG. 22 DRIVE SHAFT

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5FB–46101–00	REAR AXLE GEAR CASE ASSY	1					
2	90116–10593	.BOLT, STUD	4					
3	90119–08126	.BOLT, WITH WASHER	6					
4	22U–46153–00	.COLLAR, GUIDE	1					
5	93101–30084	.OIL SEAL	1					
6	93311–43729	.BEARING	1					
7	2H7–46102–00	.BEARING ASSY	1					
8	1J7–17537–Y0–30	.SHIM, THRUST (0.30T)	1					UR
	1J7–17537–Y0–40	.SHIM, THRUST (0.40T)	1					UR
	1J7–17537–Y0–50	.SHIM, THRUST (0.50T)	1					UR
9	93306–30539	.BEARING	1					
10	4H7–46125–00	.RETAINER, BEARING	1					
11	93210–60426	.O-RING	1					
12	93101–38098	.OIL SEAL	1					
13	90387–25017	.COLLAR	1					
14	5FB–46136–00	.SEAL 1	1					
15	22U–46152–00	.HOUSING, BEARING	1					
16	22U–46117–00–25	.SHIM, RING GEAR (0.25T)	1					UR
	22U–46117–00–30	.SHIM, RING GEAR (0.30T)	1					UR
	22U–46117–00–40	.SHIM, RING GEAR (0.40T)	1					UR
17	93316–01301	.BEARING	1					
18	22U–46118–00–12	.SHIM, THRUST (1.2T)	1					UR
	22U–46118–00–14	.SHIM, THRUST (1.4T)	1					UR
	22U–46118–00–16	.SHIM, THRUST (1.6T)	1					UR
	22U–46118–00–18	.SHIM, THRUST (1.8T)	1					UR
	22U–46118–00–20	.SHIM, THRUST (2.0T)	1					UR
19	93211–39569	.O-RING	1					


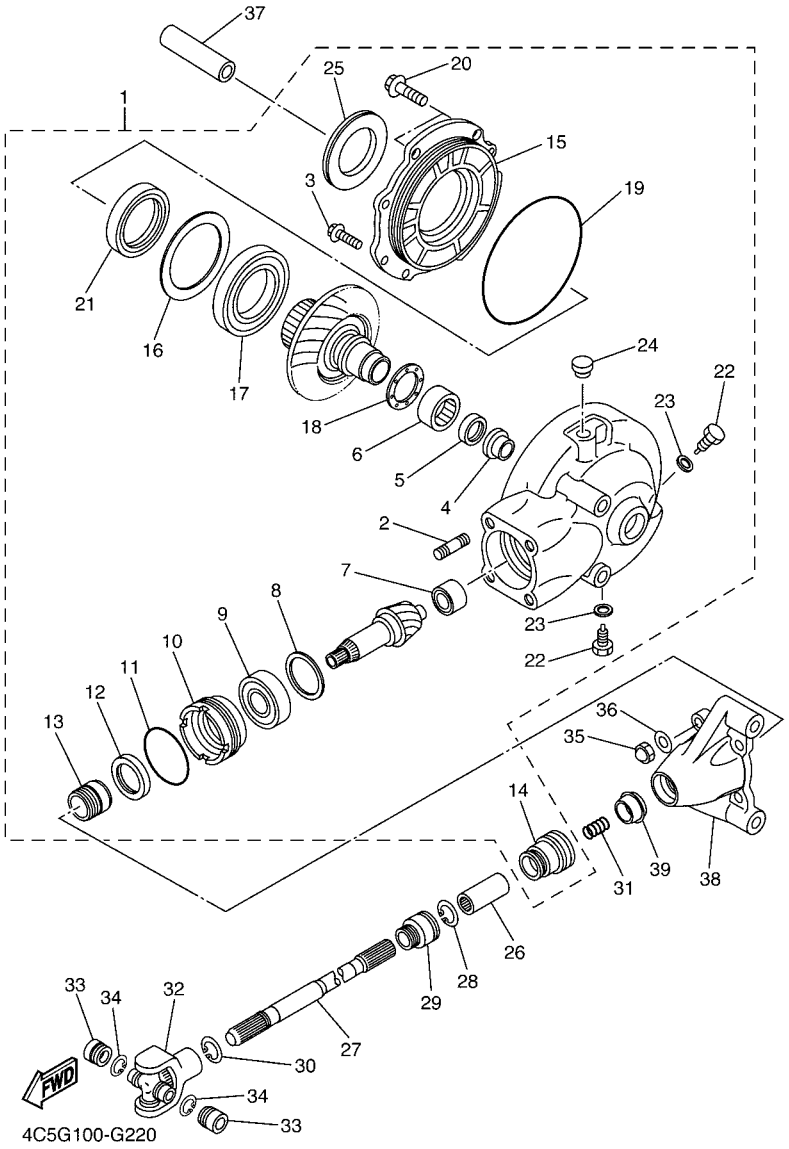


FIG. 22 DRIVE SHAFT

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
20	90105–10285	.BOLT, FLANGE	2					
21	93102–65277	.OIL SEAL	1					
22	90340–14132	.PLUG, STRAIGHT SCREW	2					
23	214–11198–01	.GASKET	2					
24	56W–17590–00	.BREATHER COMP.	1					
25	1J7–25319–02	.SEAL, HUB DUST	1					
26	22U–46123–00	COUPLING, GEAR	1					
27	5FB–46171–00	SHAFT DRIVE ASSY	1					
28	99009–18400	CIRCLIP	1					
29	5FB–46137–00	SEAL 2	1					
30	93410–22039	CIRCLIP	1					
31	90501–15722	SPRING, COMPRESSION	1					
32	4X7–46180–00	CROSS JOINT COMP.	1					
33	93311–21044	BEARING	2					
34	93440–20088	CIRCLIP	2					
35	90176–10075	NUT, CROWN	4					
36	92990–10600	WASHER, PLATE	4					
37	90387–1510D	COLLAR	1					
38	4TR–46154–00	COVER, HOUSING	1					
39	4TR–46297–00	COVER, DUST	1					


FIG. 23 STEERING

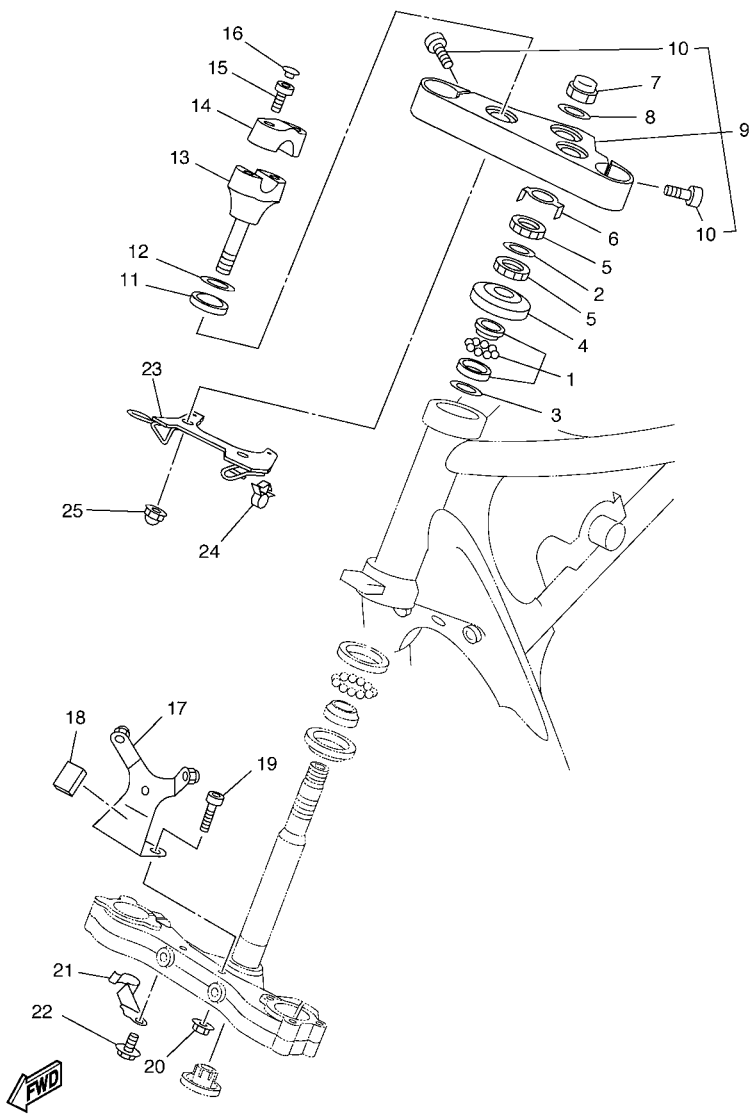

5SCE300-C230


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	93399–99931	BEARING	1					
2	90202–26142	WASHER, PLATE	1					
3	90202–24190	WASHER, PLATE	1					
4	1W1–23416–00	COVER, BALL RACE 2	1					
5	90179–25033	NUT	2					
6	26H–23418–01	WASHER, SPECIAL	1					
7	90176–22081	NUT, CROWN	1					
8	90201–220T0	WASHER, PLATE	1					
9	4VR–Y2343–70	CROWN, HANDLE	1					
10	91314–08030	.BOLT, HEXAGON SOCKET HEAD	2					
11	3DM–23445–00	DAMPER	2					
12	90201–14220	WASHER, PLATE	2					
13	5MB–23442–00	HOLDER, HANDLE LOWER	2					
14	5MB–23441–00	HOLDER, HANDLE UPPER	2					
15	91314–08025	BOLT, HEXAGON SOCKET HEAD	4					
16	90338–08163	PLUG	4					
17	5BN–23174–01	STAY, HEADLIGHT	1					
18	5BN–2317J–00	DAMPER 1	1					
19	92014–08040	BOLT, BUTTON HEAD	2					
20	95707–08500	NUT, FLANGE	2					
21	5BN–25886–00	HOLDER, BRAKE HOSE	1					
22	95027–06010	BOLT, FLANGE	1					
23	5BN–23389–10	GUIDE, CABLE	1					
24	90464–18246	CLAMP	2					
25	90176–12052	NUT, CROWN	2					

FIG. 24 FRONT FORK

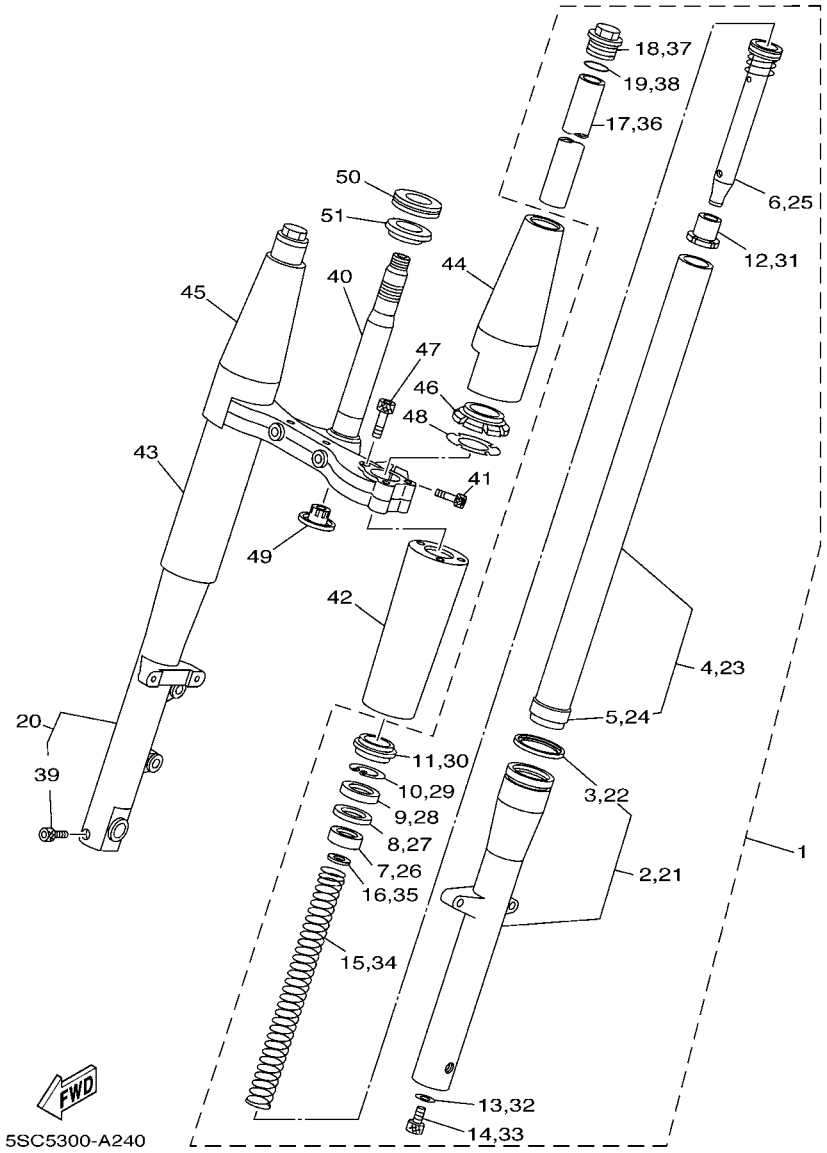


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–23102–12	FRONT FORK ASSY (L.H)	1					
2	5BN–23126–11	.TUBE, OUTER (LEFT)	1					
3	5BN–23193–00	..GUIDE, BOOT	1					
4	5BN–23110–01	.INNER TUBE COMP.1	1					
5	5BN–23171–00	..PISTON, FRONT FORK	1					
6	5BN–23170–00	.CYLINDER COMP., FRONT FORK	1					
7	4FM–23125–40	.METAL, SLIDE 1	1					
8	36Y–23146–10	.WASHER, OIL SEAL	1					
9	4EB–23145–01	.OIL SEAL	1					
10	26H–23156–00	.RING, SNAP	1					
11	4EB–23144–00	.SEAL, DUST	1					
12	4YR–23173–00	.SPINDLE, TAPER	1					
13	509–23158–L0	.GASKET	1					
14	278–23181–50	.BOLT, HEXAGON SOCKET HEAD	1					
15	5BN–23141–00	.SPRING, FRONT FORK	1					
16	4DW–23149–40	.WASHER, SPRING UPPER	1					
17	4TR–23118–00	.SPACER	1					
18	1D0–23111–00	.BOLT, CAP	1					
19	43F–23188–10	.O-RING	1					
20	5BN–23103–12	FRONT FORK ASSY (R.H)	1					
21	5BN–23136–11	.TUBE, OUTER (RIGHT)	1					
22	5BN–23193–00	..GUIDE, BOOT	1					
23	5BN–23110–01	.INNER TUBE COMP.1	1					
24	5BN–23171–00	..PISTON, FRONT FORK	1					
25	5BN–23170–00	.CYLINDER COMP., FRONT FORK	1					
26	4FM–23125–40	.METAL, SLIDE 1	1					
27	36Y–23146–10	.WASHER, OIL SEAL	1					

FIG. 24 FRONT FORK

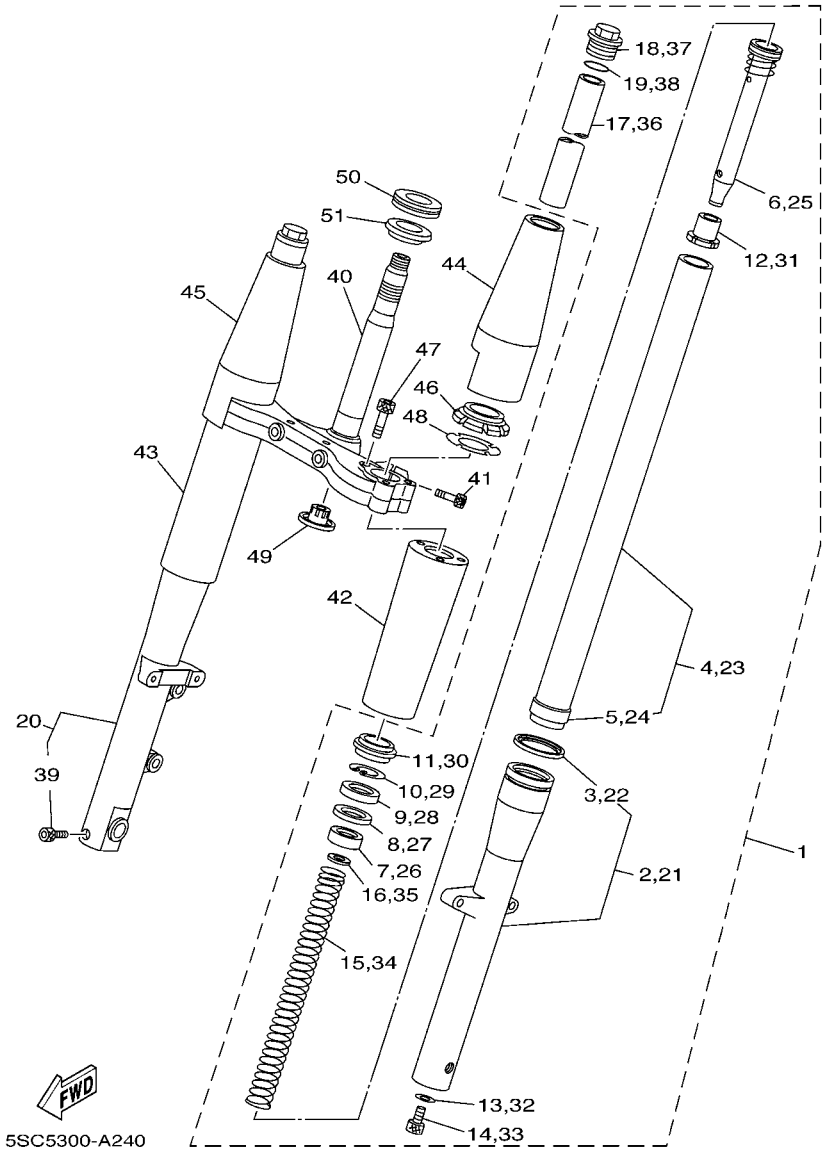


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	4EB–23145–01	.OIL SEAL	1					
29	26H–23156–00	.RING, SNAP	1					
30	4EB–23144–00	.SEAL, DUST	1					
31	4YR–23173–00	.SPINDLE, TAPER	1					
32	509–23158–L0	.GASKET	1					
33	278–23181–50	.BOLT, HEXAGON SOCKET HEAD	1					
34	5BN–23141–00	.SPRING, FRONT FORK	1					
35	4DW–23149–40	.WASHER, SPRING UPPER	1					
36	4TR–23118–00	.SPACER	1					
37	1D0–23111–00	.BOLT, CAP	1					
38	43F–23188–10	.O-RING	1					
39	91314–08040	.BOLT, HEXAGON SOCKET HEAD	1					
40	5KS–23340–10	UNDER BRACKET COMP.	1					
41	91314–08020	BOLT, HEXAGON SOCKET HEAD	4					
42	5BN–23123–10	COVER, UNDER 1	1					
43	5BN–23133–10	COVER, LOWER 2	1					
44	5KS–23121–20	COVER, UPPER 1	1					
45	5KS–23131–20	COVER, UPPER 2	1					
46	5BN–23163–00	GASKET	2					
47	5BN–23394–01	BOLT, SPECIAL	6					
48	5KS–23165–10	WASHER, FELT	2					
49	4KM–23123–01	COVER, UNDER 1	1					
50	93399–99932	BEARING	1					
51	3FV–23462–00	SEAL, STEERING	1					

FIG. 25 FUEL TANK

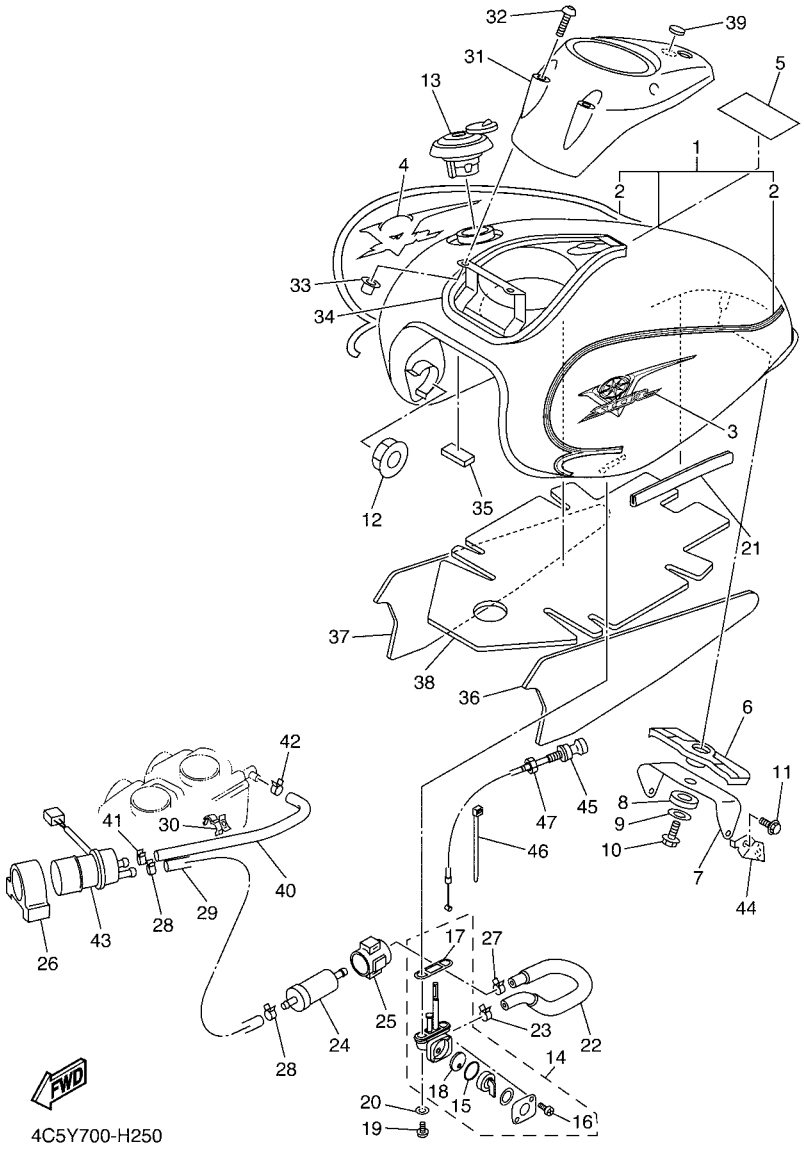


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–Y2410–M0–03	FUEL TANK COMP.	1					UR FOR BS4
	4TR–Y2410–V1–X2	FUEL TANK COMP.	1					UR FOR BWC1
2	5FB–24240–P0	.GRAPHIC SET	1					UR FOR BS4
	5FB–24240–R0	.GRAPHIC SET	1					UR FOR BWC1
3	5FB–2416B–00	EMBLEM	1					
4	5FB–2417B–00	EMBLEM	1					
5	5RU–21568–01	LABEL, WARNING	1					
6	4TR–24182–00	DAMPER, LOCATING 2	1					
7	4TR–2413Y–00	BRACKET, TANK FITTING	1					
8	4TR–24183–00	DAMPER, LOCATING 3	1					
9	90209–06011	WASHER	1					
10	92017–06012	BOLT, BUTTON HEAD	1					
11	95817–08016	BOLT, FLANGE	2					
12	4H7–24181–00	DAMPER, LOCATING 1	2					
13	5BN–24602–02	CAP ASSY	1					
14	21V–24500–11	FUEL COCK ASSY 1	1					
15	3AJ–24534–01	.SEAL, COCK	1					
16	98507–03008	.SCREW, PAN HEAD	2					
17	4X8–24512–00	.O-RING	1					
18	3AC–24523–00	.VALVE PACKING	1					
19	90149–06011	SCREW	2					
20	90202–05193	WASHER, PLATE	2					
21	1FK–2171L–00	MOLE, SIDE COVER 1	1					
22	4TR–24313–10	PIPE 3	1					
23	90467–10038	CLIP	1					
24	1FK–24560–10	FILTER ASSY	1					
25	1FK–24566–00	BRACKET, FILTER	1					

FIG. 25 FUEL TANK

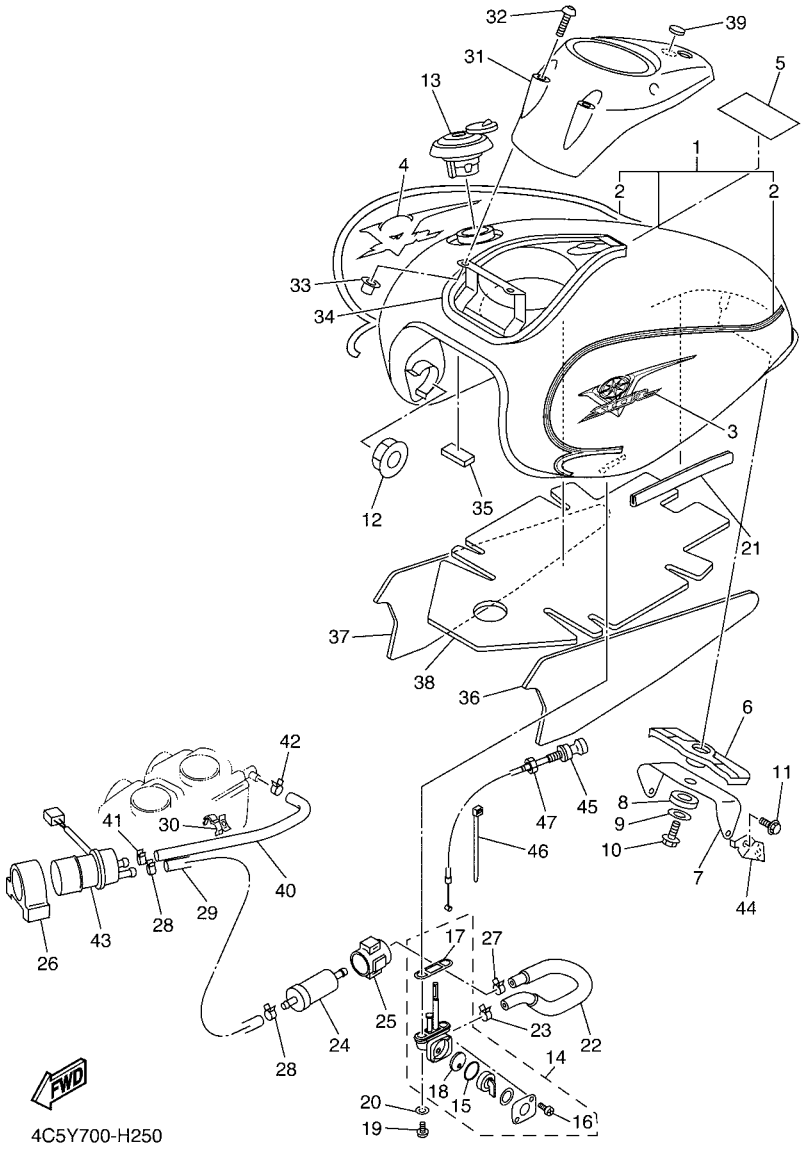

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
26	4EB–24398–00	BAND 1	1					
27	90467–11032	CLIP	1					
28	90467–12053	CLIP	2					
29	4TR–24311–10	PIPE, FUEL 1	1					
30	90464–15192	CLAMP	1					
31	4TR–2171A–00	COVER, TOP	1					
32	90149–05299	SCREW	3					
33	90179–05523	NUT	3					
34	4TR–2414G–00	SEAL	2					
35	3XV–21717–00	DAMPER	1					
36	5SC–2414H–00	DAMPER, PLATE 1	1					
37	5SC–2414J–00	DAMPER, PLATE 2	1					
38	5SC–2414K–00	DAMPER, PLATE 3	1					
39	4TR–2413B–00	EMBLEM	1					
40	4TR–14294–10	HOSE	1					
41	90467–12053	CLIP	1					
42	90467–12124	CLIP	1					
43	5KS–13907–00	FUEL PUMP COMP.	1					
44	4TR–2637G–00	HOLDER, WIRE	1					
45	4TR–26331–00	CABLE, STARTER 1	1					
46	1UA–82591–00	BAND	1					
47	1VJ–26333–00	NUT	1					


FIG. 26 SEAT

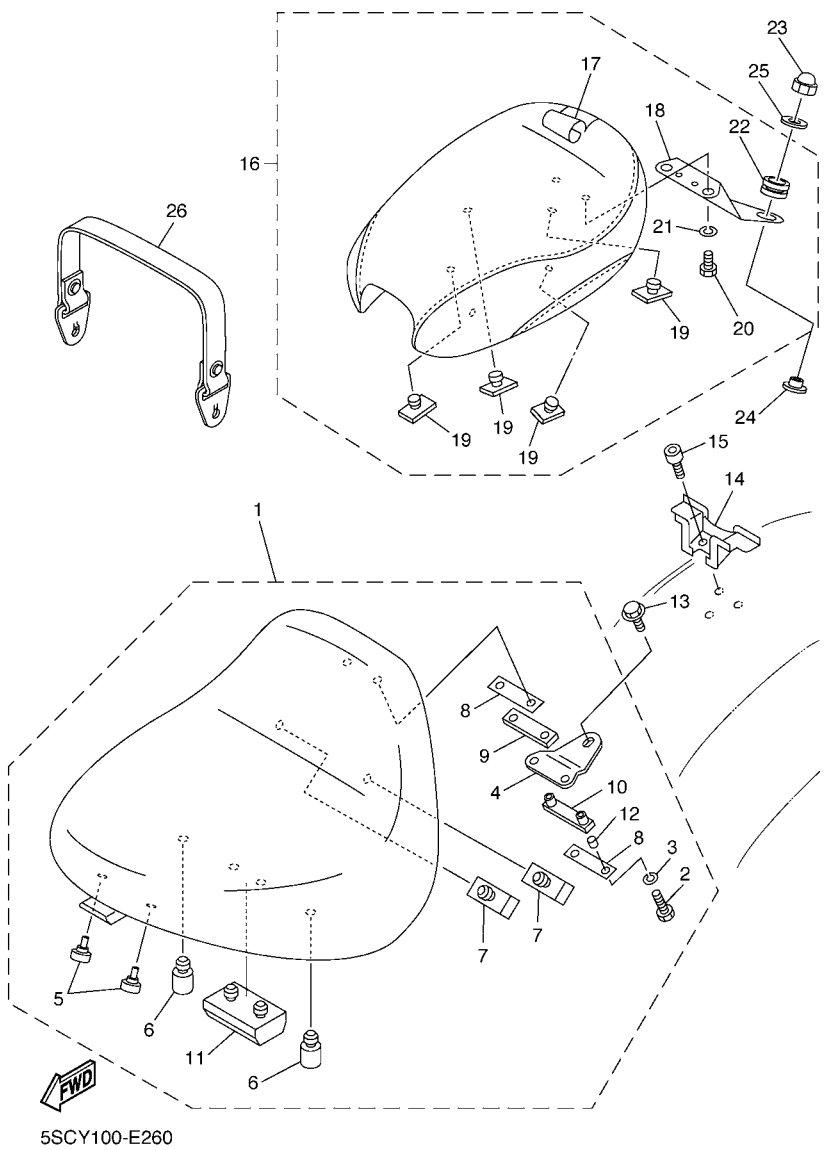

5SCY100-E260

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–24710–10	SINGLE SEAT ASSY	1					
2	97007–06025	.BOLT	2					
3	92907–06100	.WASHER, SPRING	2					
4	5BN–2475H–00	.BRACKET, SEAT LEVER 1	1					
5	35T–24724–00	.DAMPER, SEAT	2					
6	5BN–24723–00	.DAMPER, SEAT	2					
7	5BN–24741–00	.PAD, SEAT	2					
8	5BN–24736–00	.WASHER	2					
9	5BN–24737–00	.DAMPER, SEAT	1					
10	5BN–24747–00	.DAMPER, SEAT	1					
11	5BN–24724–00	.DAMPER, SEAT	1					
12	5BN–2475Y–00	.COLLAR	2					
13	95024–08012	BOLT, FLANGE	1					
14	5BN–2475K–00	BRACKET 3	1					
15	91317–06012	BOLT	2					
16	5BN–24750–10	TANDEM SEAT ASSY	1					
17	5BN–24751–00	.COVER, TANDEM SEAT	1					
18	5YS–2475J–00	.BRACKET, SEAT LEVER 2	1					
19	509–24724–00	.DAMPER, SEAT	4					
20	97007–06016	.BOLT	2					
21	92907–06100	.WASHER, SPRING	2					
22	5YS–24742–00	.GROMMET	1					
23	90176–08001	NUT, CROWN	1					
24	5YS–2471N–00	COLLAR 1	1					
25	90201–08042	WASHER, PLATE	1					
26	5BN–24720–00	SEAT BAND ASSY	1					

FIG. 27 FRONT WHEEL

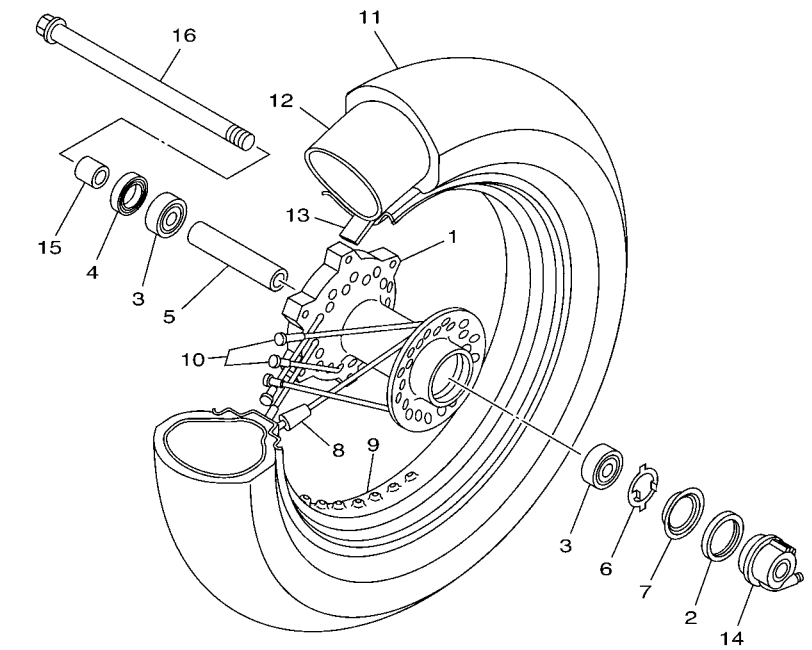

5BN1100-8270

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4TR–25111–00	HUB, FRONT	1					
2	93105–45017	OIL SEAL	1					
3	93306–30317	BEARING	2					
4	93102–28022	OIL SEAL	1					
5	90387–173M5	COLLAR	1					
6	341–25149–00	CLUTCH, METER	1					
7	341–25846–00	RETAINER, CLUTCH	1					
8	3HT–25398–00	BALANCER, WHEEL (15G)	1					UN
9	94430–16005	RIM (MT3.00-16M/C)	1					
10	5BN–25104–01	SPOKE SET, FRONT	1					
11	94113–1613E	TIRE (130/90-16 M/C 67S D404F)	1					DUNLOP
12	94213–16305	TUBE (130/90-16 M/C TR4)	1					DUNLOP
13	94313–16175	BAND,RIM (25-16)	1					DUNLOP
14	1FK–25190–02	GEAR UNIT ASSY	1					
15	90387–173R6	COLLAR	1					
16	5KS–25181–00	AXLE, WHEEL	1					


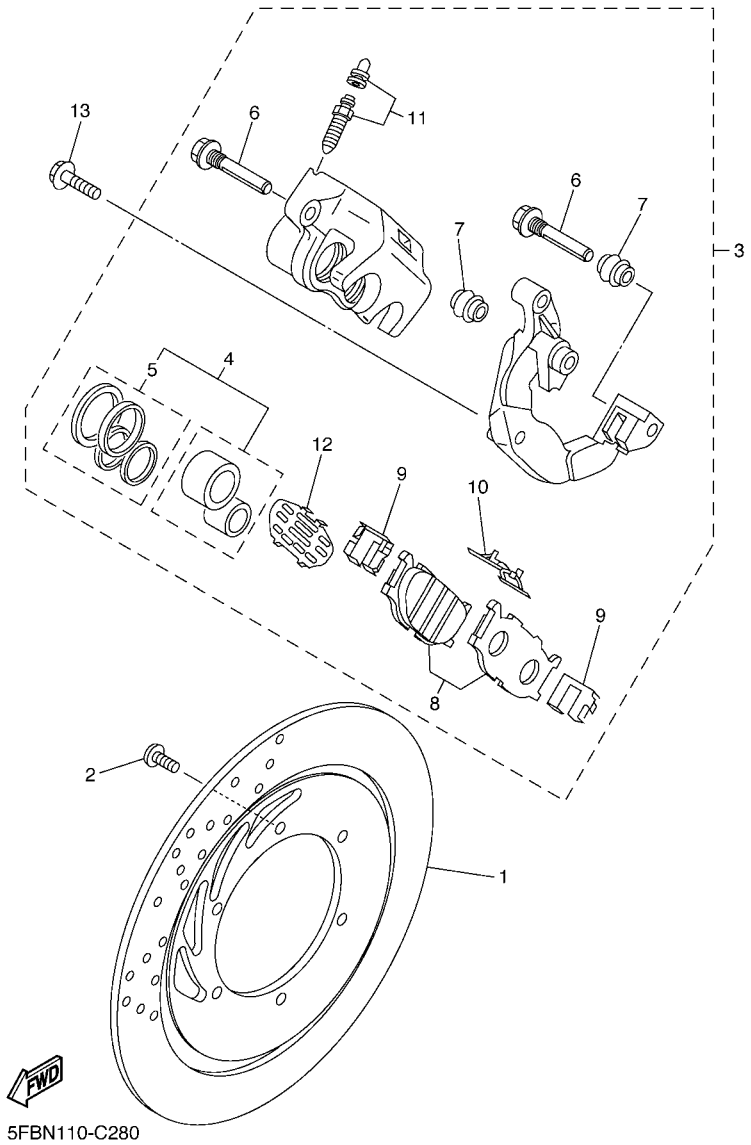


FIG. 28 FRONT BRAKE CALIPER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–2582U–00	DISK, BRAKE (RIGHT)	1					
2	90109–083G4	BOLT	6					
3	4WM–2580U–01	CALIPER ASSY (RIGHT)	1					
4	3JB–W0057–00	.PISTON ASSY, CALIPER	1					
5	3JB–W0047–00	..CALIPER SEAL KIT	1					
6	5JW–25914–10	.PIN, SLIDE	2					
7	4TT–25937–00	.BOOT 2	2					
8	4WM–W0045–00	.BRAKE PAD KIT	1					
9	4BP–25919–00	.SUPPORT, PAD	2					
10	3YX–25929–00	.SPRING, ANTI RATTLE	1					
11	51L–W0048–00	.BLEED SCREW KIT	1					
12	5BN–25827–00	.SHIM, CALIPER	1					
13	90109–100G0	BOLT	2					

FIG. 29 REAR WHEEL

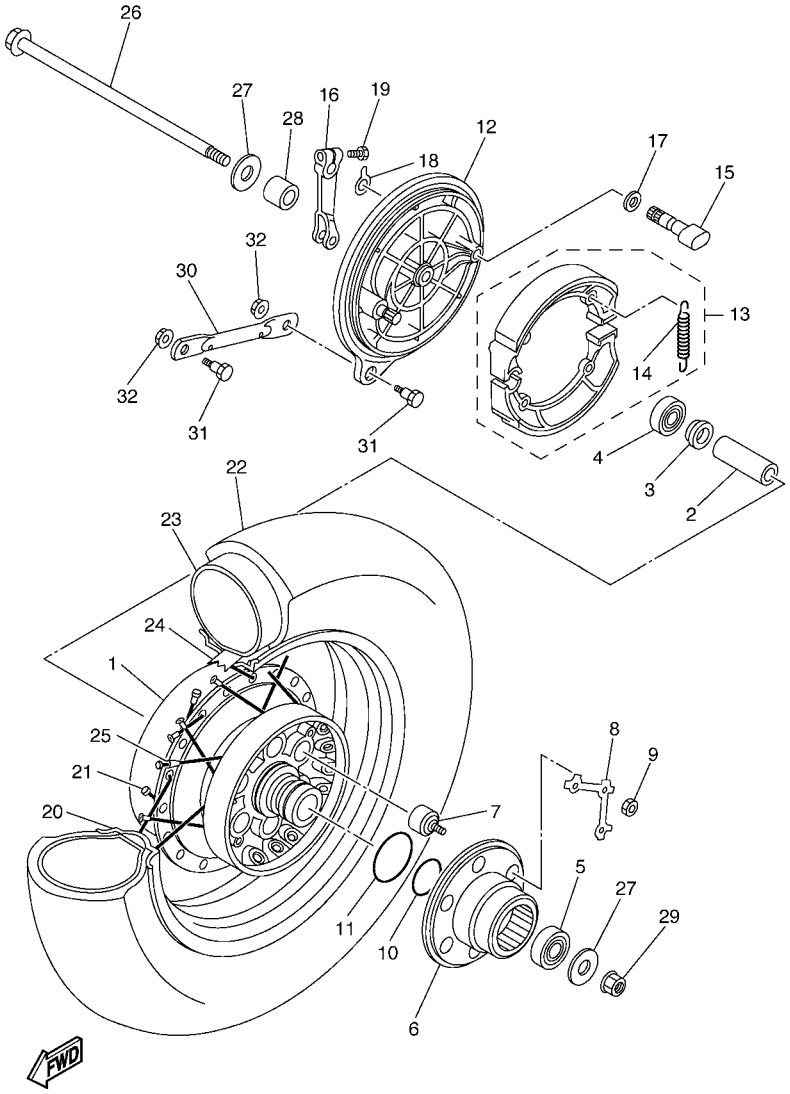

5SCN100-D290

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	3JB–25311–00–35	HUB, REAR	1					SL
2	2GV–25317–00	SPACER, BEARING	1					
3	2GV–25315–00	FLANGE, SPACER	1					
4	93306–30213	BEARING	1					
5	93306–30212	BEARING	1					
6	4TR–25366–00	CLUTCH, HUB	1					
7	4TR–25364–00	DAMPER	6					
8	16G–25412–00	WASHER	2					
9	90170–10011	NUT	6					
10	93210–48530	O-RING	1					
11	93210–61750	O-RING	1					
12	4TR–25321–00	PLATE, BRAKE SHOE	1					
13	3DR–W253E–00	BRAKE SHOE KIT	1					
14	90507–20002	.SPRING, TENSION	2					
15	4H7–25351–00	CAMSHAFT	1					
16	214–25355–00	LEVER, CAMSHAFT	1					
17	90201–14577	WASHER, PLATE	1					
18	4H7–2533A–02	PLATE, INDICATOR	1					
19	90101–06764	BOLT	1					
20	94435–15002	RIM (15M/C X MT3.50)	1					
21	4VR–25304–02	SPOKE SET, REAR	1					
22	94117–15009	TIRE (170/80-15 M/C 77S D404)	1					DUNLOP
23	94217–15299	TUBE (170/80-15 M/C PV78)	1					DUNLOP
24	94317–15173	BAND,RIM (45-15)	1					DUNLOP
25	3HT–25398–00	BALANCER, WHEEL (15G)	1					UN
26	4TR–25381–00	AXLE, WHEEL	1					
27	90201–152L7	WASHER, PLATE	2					

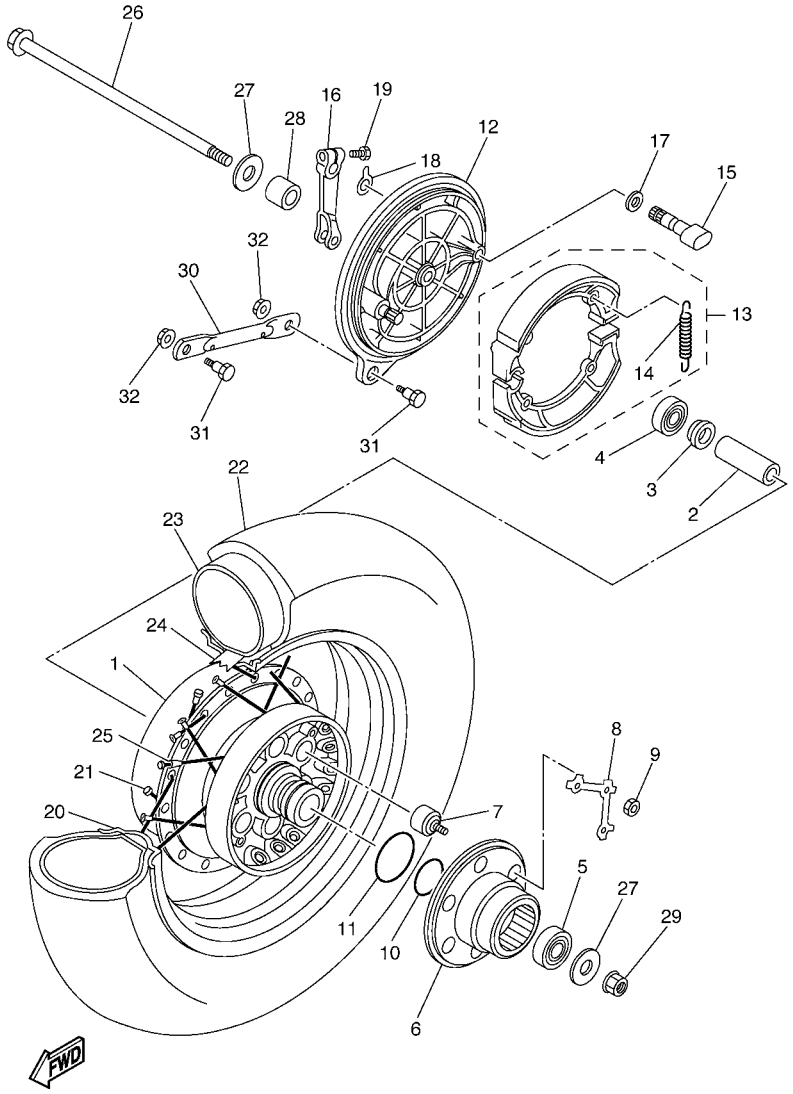


5SCN100-D290

FIG. 29 REAR WHEEL


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	90387–151R1	COLLAR	1					
29	95604–14200	NUT, SELF-LOCKING	1					
30	4TR–25371–00	BAR, TENSION	1					
31	90109–085G1	BOLT	2					
32	95604–08200	NUT, U FLANGE	2					

FIG. 30 STEERING HANDLE & CABLE

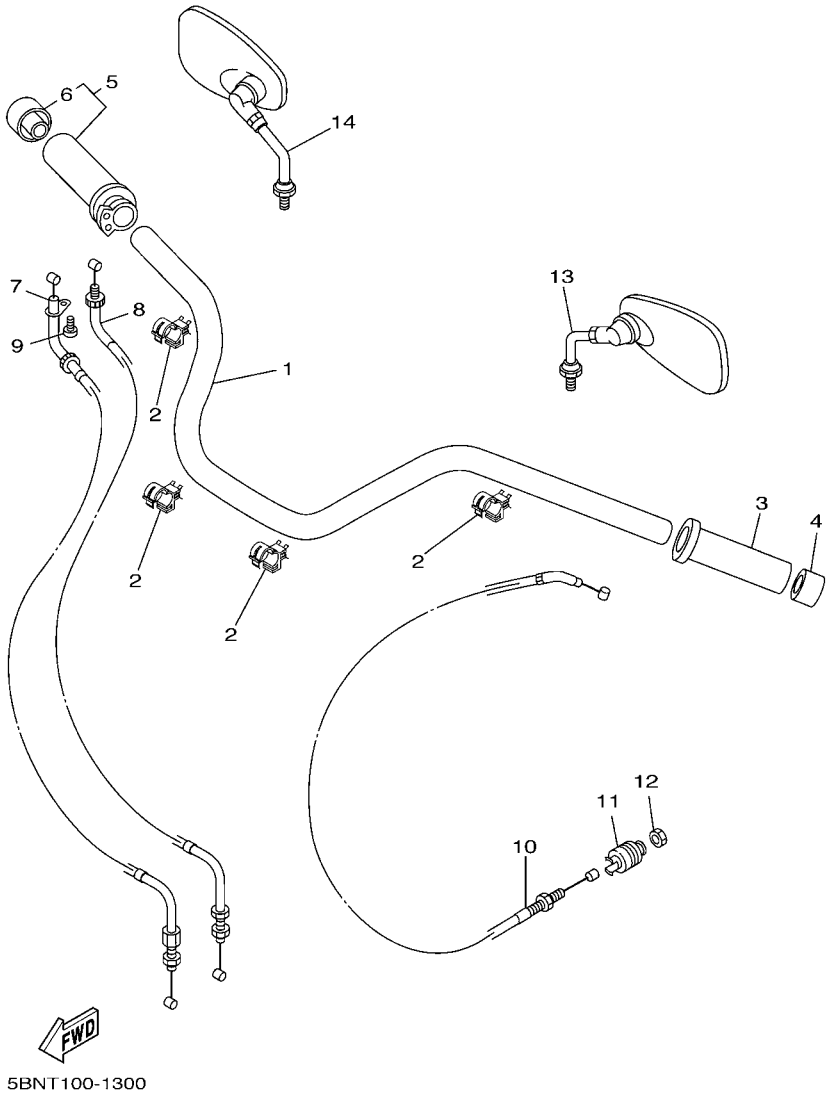

5BNT100-1300


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–26111–11	HANDLEBAR	1					
2	90464–15192	CLAMP	4					
3	4NK–26241–00	GRIP(LEFT)	1					
4	4NK–2628J–00	CAP, GRIP	1					
5	4NK–26240–00	GRIP ASSY	1					
6	4NK–2635J–00	.CAP 2	1					
7	5BN–26311–20	CABLE, THROTTLE 1	1					
8	5BN–26312–20	CABLE, THROTTLE 2	1					
9	98507–05008	SCREW, PAN HEAD	1					
10	5BN–26335–10	CABLE, CLUTCH	1					
11	1E6–26342–00	BOOT, CABLE	1					
12	95304–08700	NUT	1					
13	4NK–26280–10	REAR VIEW MIRROR ASSY (LEFT)	1					
14	5BN–26290–20	REAR VIEW MIRROR ASSY (RIGHT)	1					

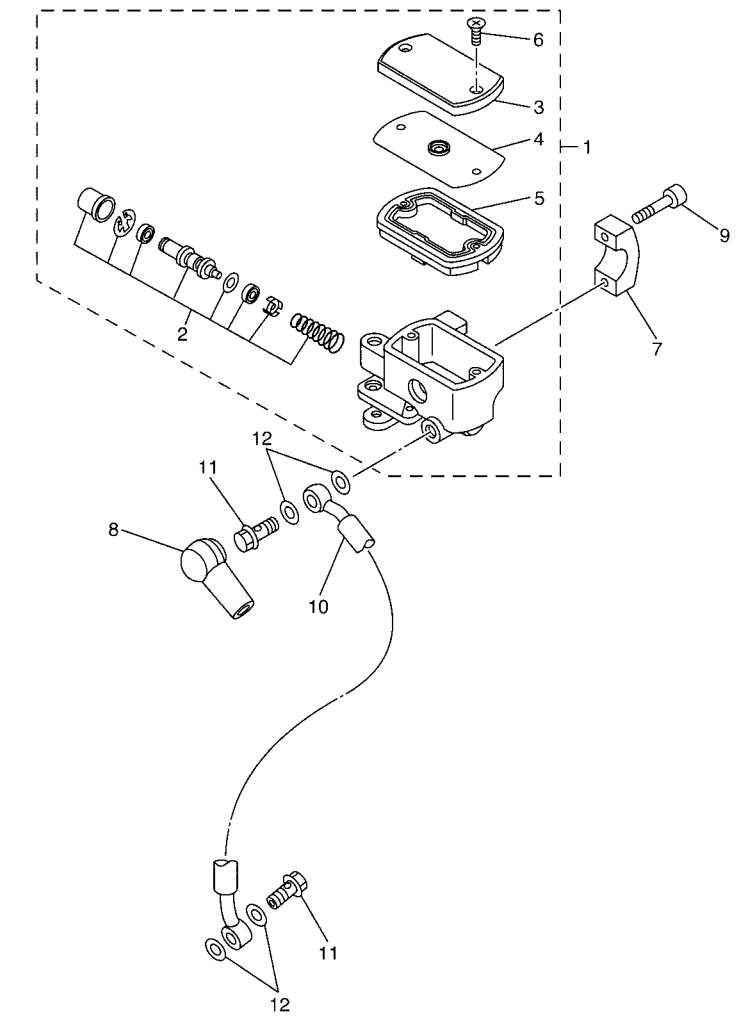

4C5G100-G310

FIG. 31 FRONT MASTER CYLINDER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	3D8–W2587–10	MASTER CYLINDER SUB ASSY	1					
2	2KR–W0041–00	.CYLINDER KIT, MASTER	1					
3	3D8–25852–10	.CAP, RESERVOIR	1					
4	3D8–25855–00	.BUSH,DIAPHRAGM	1					
5	3D8–25854–00	.GASKET, DIAPHRAGM	1					
6	3D8–2589H–10	.SCREW	2					
7	4TR–25867–00	HOLDER	1					
8	4L0–25862–01	BOOT, MASTER CYLINDER	1					
9	91314–06025	BOLT, HEXAGON SOCKET HEAD	2					
10	5BN–25872–20	HOSE, BRAKE 1	1					
11	90401–10020	BOLT, UNION	2					
12	90430–10005	GASKET	4					

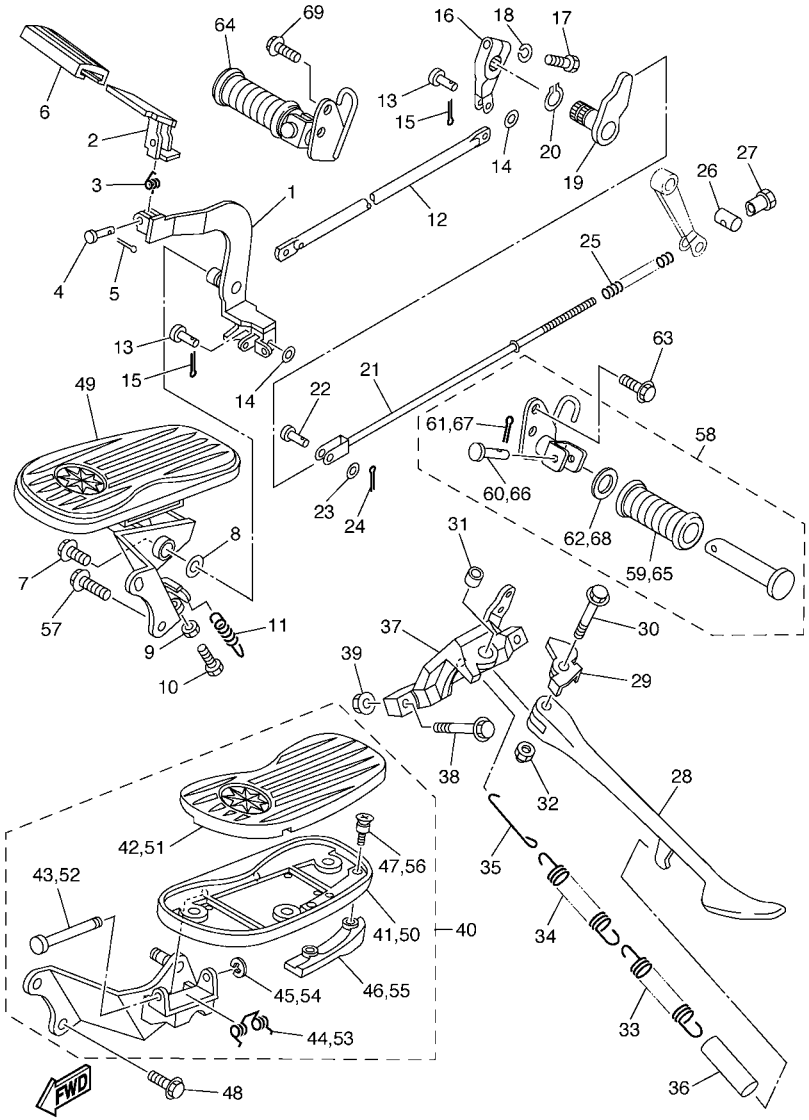

5SCF100-C320

FIG. 32 STAND & FOOTREST


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–27211–00	PEDAL, BRAKE	1					
2	4NK–27242–00	PEDAL, BRAKE	1					
3	90508–18023	SPRING, TORSION	1					
4	91702–06022	PIN, CLEVIS	1					
5	91402–20012	PIN, COTTER	1					
6	4NK–27285–00	CAP	1					
7	90110–06249	BOLT, HEXAGON SOCKET HEAD	1					
8	90206–14086	WASHER, WAVE	1					
9	95307–06700	NUT	1					
10	90101–06534	BOLT	1					
11	90506–20369	SPRING, TENSION	1					
12	4TR–27247–00	ROD 1	1					
13	90240–06108	PIN, CLEVIS	2					
14	90201–062P7	WASHER, PLATE	2					
15	91401–20012	PIN, COTTER	2					
16	4TR–27243–00	BOSS, BRAKE PEDAL	1					
17	90109–06468	BOLT	1					
18	92907–06100	WASHER, SPRING	1					
19	4TR–27212–00	SHAFT, BRAKE PEDAL	1					
20	99009–19400	CIRCLIP	1					
21	4TR–27231–00	ROD, BRAKE	1					
22	90240–06108	PIN, CLEVIS	1					
23	90201–062P7	WASHER, PLATE	1					
24	91401–20012	PIN, COTTER	1					
25	90501–10245	SPRING, COMPRESSION	1					
26	90249–12008	PIN	1					
27	90179–06411	NUT	1					

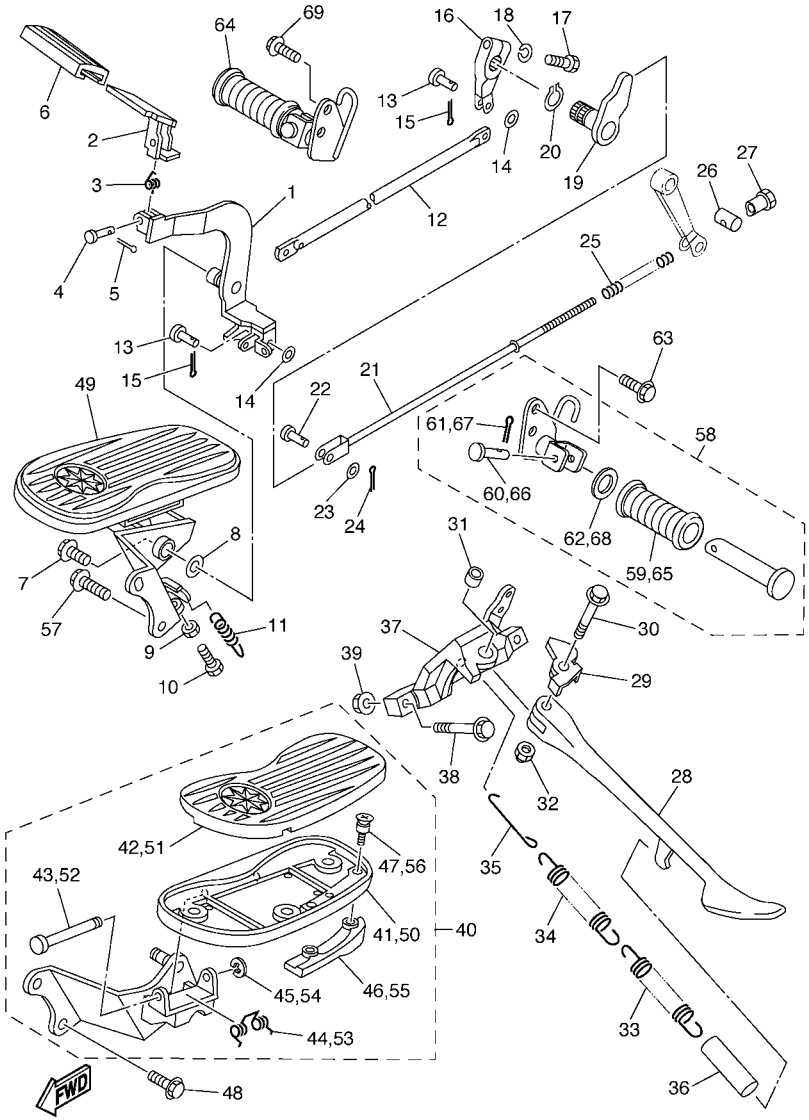

5SCF100-C320

FIG. 32 STAND & FOOTREST


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	4KU–27311–13	STAND, SIDE	1					
29	5EL–27322–01	WASHER	1					
30	90105–10012	BOLT, FLANGE	1					
31	90387–1003G	COLLAR	1					
32	95607–10200	NUT, U FLANGE	1					
33	90506–23490	SPRING, TENSION	1					
34	90506–29507	SPRING, TENSION	1					
35	5EL–27315–00	LINK, SIDE STAND	1					
36	90445–16641	HOSE (L60)	1					
37	5BN–27321–01	BRACKET, SIDE STAND	1					
38	90105–10727	BOLT, FLANGE	2					
39	95607–10200	NUT, U FLANGE	2					
40	5BN–27410–01	FRONT FOOTREST ASSY (LEFT)	1					
41	5BN–27451–00	.FOOTREST	1					
42	5BN–27413–00	.COVER, FOOTREST	1					
43	3D8–27427–00	.SHAFT	1					
44	4NK–27426–00	.SPRING, RETURN	1					
45	99001–06600	.CIRCLIP	1					
46	4WM–27496–00	.MOLE 1	1					
47	90152–05008	.SCREW, COUNTERSUNK	2					
48	90105–102A3	BOLT, FLANGE	2					
49	5BN–27420–00	FRONT FOOTREST ASSY (RIGHT)	1					
50	5BN–27461–00	.FOOTREST	1					
51	5BN–27423–00	.COVER, FOOTREST	1					
52	3D8–27427–00	.SHAFT	1					
53	4NK–27426–00	.SPRING, RETURN	1					
54	99001–06600	.CIRCLIP	1					

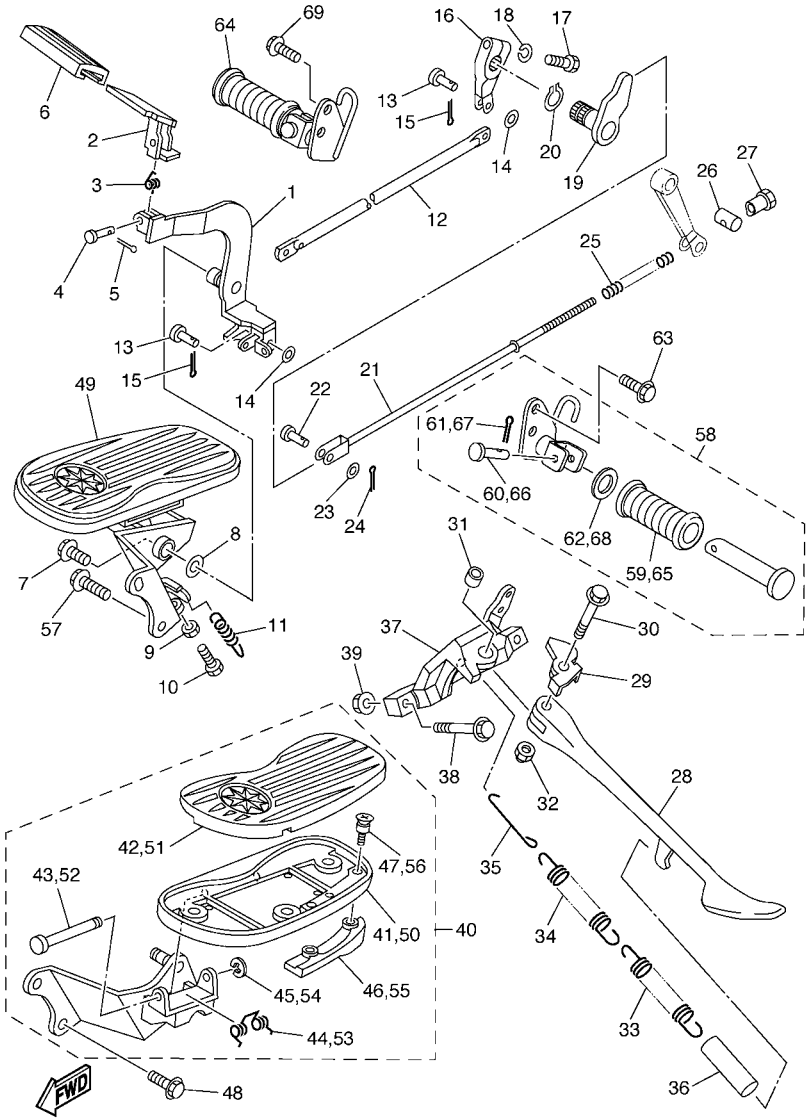

5SCF100-C320

FIG. 32 STAND & FOOTREST


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
55	4WM–27497–00	.MOLE 2	1					
56	90152–05008	.SCREW, COUNTERSUNK	2					
57	90105–102A3	BOLT, FLANGE	2					
58	4TR–27430–10	REAR FOOTREST ASSY 1	1					
59	120–27433–00	.COVER, REAR FOOTREST	1					
60	91701–06032	.PIN	1					
61	91401–20015	.PIN, COTTER	1					
62	90201–20279	.WASHER, PLATE	1					
63	90105–082A5	BOLT, FLANGE	2					
64	4TR–27440–10	REAR FOOTREST ASSY 2	1					
65	120–27433–00	.COVER, REAR FOOTREST	1					
66	91701–06032	.PIN	1					
67	91401–20015	.PIN, COTTER	1					
68	90201–20279	.WASHER, PLATE	1					
69	90105–082A5	BOLT, FLANGE	2					

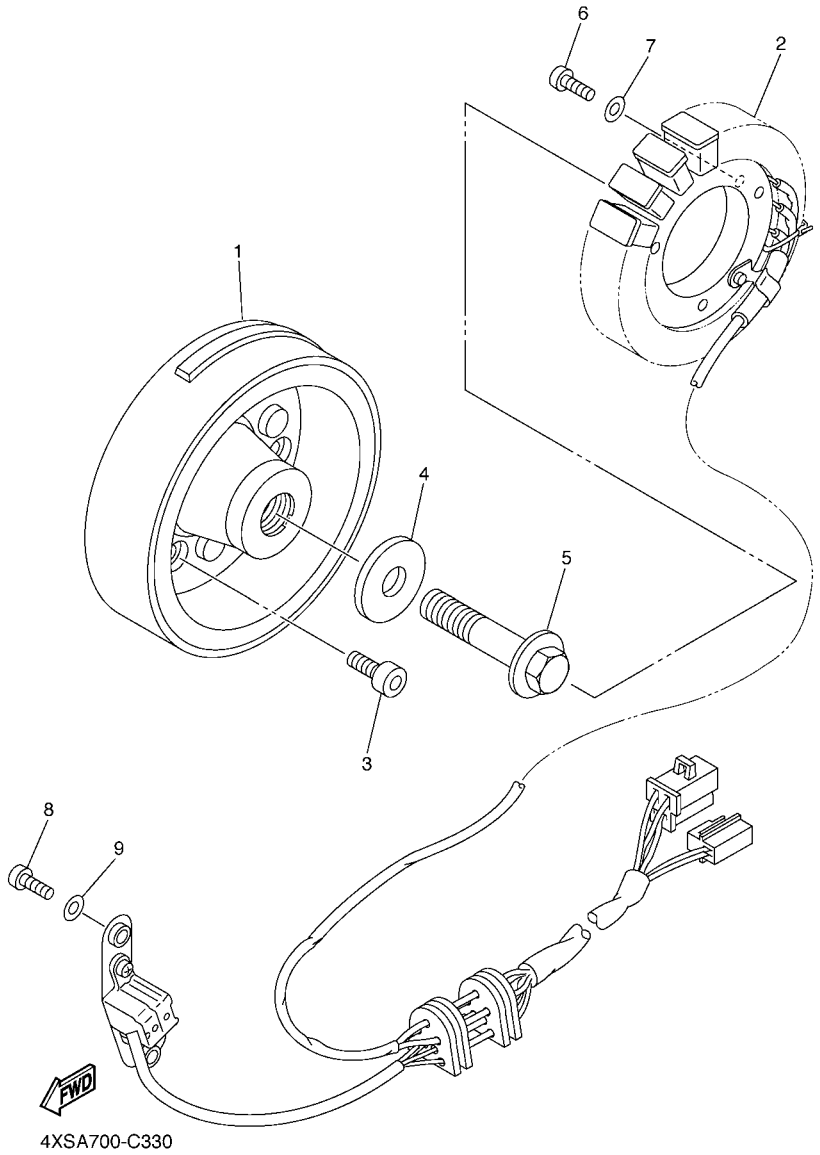

4XSA700-C330

FIG. 33 GENERATOR


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–81450–01	ROTOR ASSY	1					
2	5SC–81410–01	STATOR ASSY	1					
3	90110–08212	BOLT, HEXAGON SOCKET HEAD	6					
4	90201–107E9	WASHER, PLATE	1					
5	90105–10152	BOLT, FLANGE	1					
6	98507–06030	SCREW, PAN HEAD	3					
7	92907–06600	WASHER, PLATE	3					
8	98507–06020	SCREW, PAN HEAD	3					
9	92907–06600	WASHER, PLATE	3					

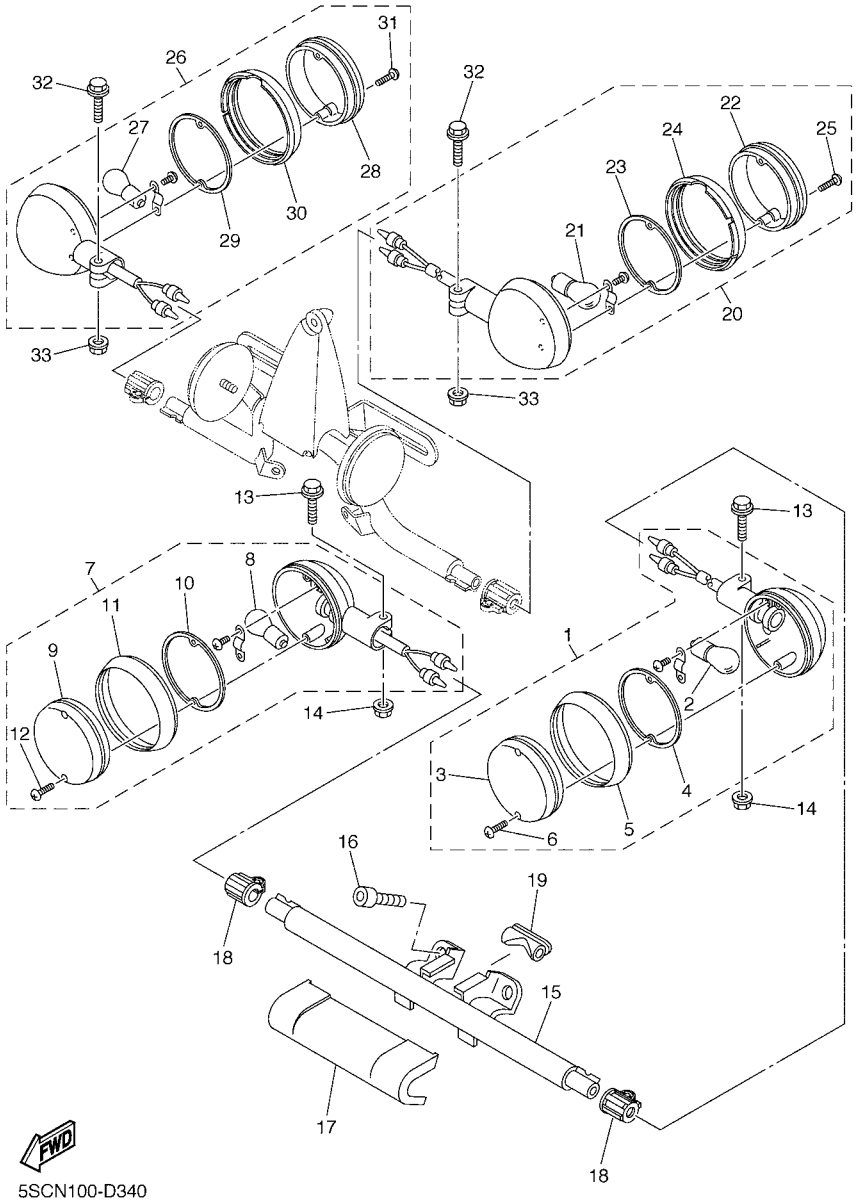

5SCN100-D340

FIG. 34 FLASHER LIGHT


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5YS–83310–10	FRONT FLASHER LIGHT ASSY 1	1					
2	5VN–83331–00	.BULB, FLASHER (12V-21W)	1					
3	1D6–83312–10	.LENS, FLASHER	1					
4	1D6–83313–00	.GASKET, FLASHER LENS	1					
5	1D6–83363–00	.LENS, RIM	1					
6	57M–83358–00	.SCREW, SPECIAL	2					
7	5YS–83320–10	FRONT FLASHER LIGHT ASSY 2	1					
8	5VN–83331–00	.BULB, FLASHER (12V-21W)	1					
9	1D6–83312–20	.LENS, FLASHER	1					
10	1D6–83313–00	.GASKET, FLASHER LENS	1					
11	1D6–83363–10	.LENS, RIM	1					
12	57M–83358–00	.SCREW, SPECIAL	2					
13	95024–06030	BOLT, FLANGE	2					
14	95704–06500	NUT, FLANGE	2					
15	5BN–2317V–00	STAY 8	1					
16	91314–08016	BOLT, HEXAGON SOCKET HEAD	2					
17	4NK–23122–01	COVER, OUTER 1	1					
18	5VN–83321–00	DAMPER, FLASHER 1	2					
19	4NK–83345–00	PLUG, BLIND	1					
20	1D6–83330–00	REAR FLASHER LIGHT ASSY 1	1					
21	5VN–83311–10	.BULB, FLASHER (12V-21W)	1					
22	1D6–83312–20	.LENS, FLASHER	1					
23	1D6–83313–00	.GASKET, FLASHER LENS	1					
24	1D6–83363–10	.LENS, RIM	1					
25	57M–83358–00	.SCREW, SPECIAL	2					
26	1D6–83340–00	REAR FLASHER LIGHT ASSY 2	1					
27	5VN–83311–10	.BULB, FLASHER (12V-21W)	1					

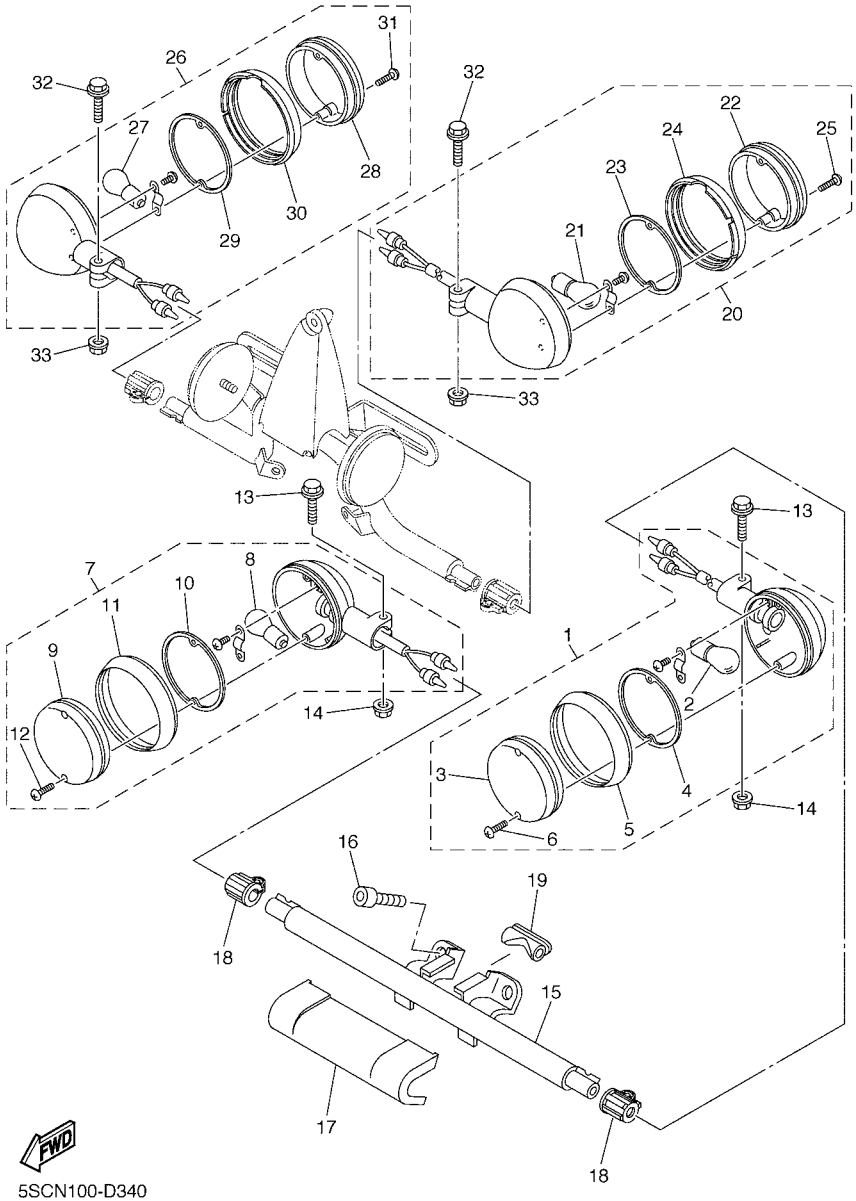

5SCN100-D340

FIG. 34 FLASHER LIGHT

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	1D6–83312–10	.LENS, FLASHER	1					
29	1D6–83313–00	.GASKET, FLASHER LENS	1					
30	1D6–83363–00	.LENS, RIM	1					
31	57M–83358–00	.SCREW, SPECIAL	2					
32	95024–06030	BOLT, FLANGE	2					
33	95704–06500	NUT, FLANGE	2					

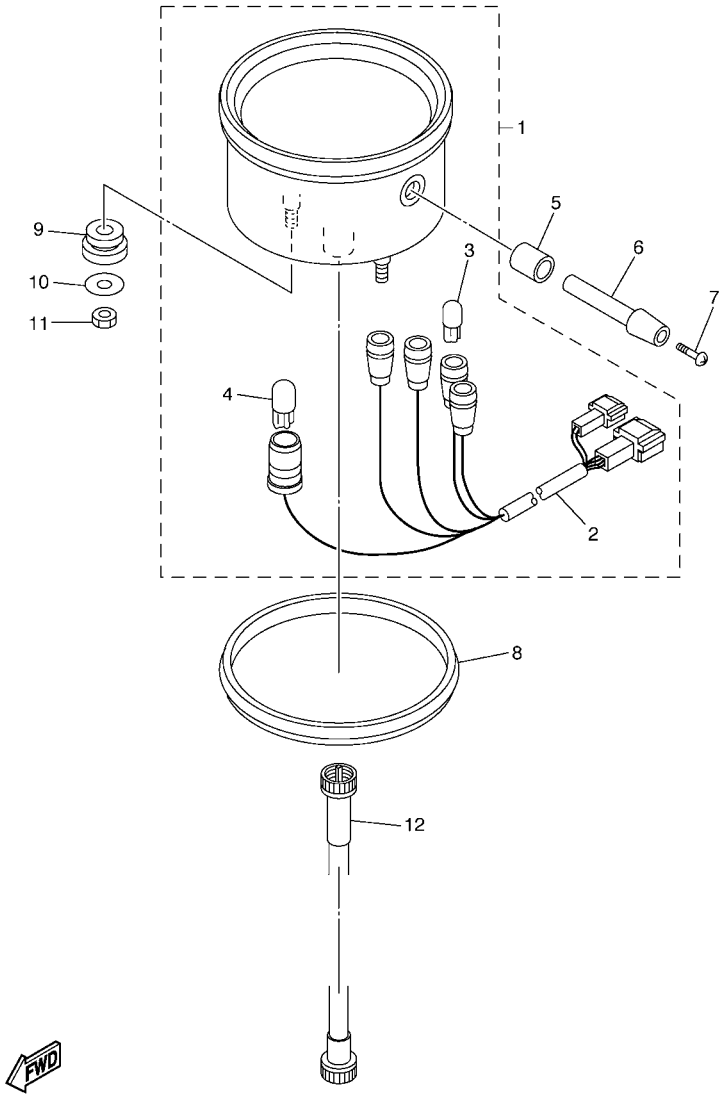


5SCF100-C350

FIG. 35 METER


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5SC–83580–70	SPEEDOMETER ASSY (KM/H)	1					
2	5SC–83520–00	.SOCKET CORD ASSY	1					
3	2GV–83517–00	.BULB (12V-1.7W T6.5)	4					
4	1YT–83517–00	.BULB (12V-1.7W T10)	1					
5	4TR–83535–00	TUBE	1					
6	1JK–83578–00	KNOB, TRIP METER	1					
7	90157–02031	SCREW, PAN HEAD	1					
8	4TR–83513–00	DAMPER	1					
9	4TR–83526–00	DAMPER 2	2					
10	90201–05033	WASHER, PLATE	2					
11	95307–05700	NUT	2					
12	5BN–83550–02	SPEEDOMETER CABLE ASSY	1					

FIG. 36 HEADLIGHT

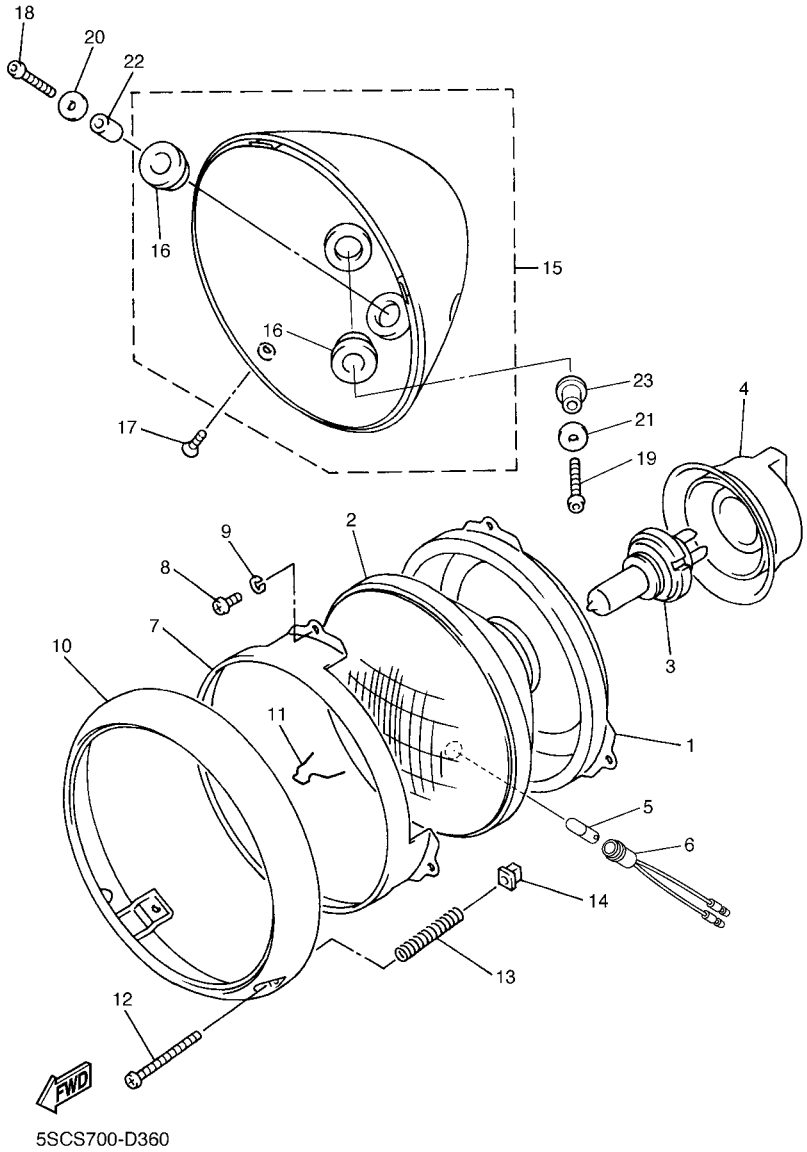

5SCS700-D360


REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4NK–84394–00	RING, MOUNTING	1					
2	5KS–84320–00	LENS ASSY	1					
3	2F9–84314–00	BULB (12V-60/55W)	1					(H4)HALOGEN
4	3SX–84397–00	COVER, SOCKET	1					
5	4E2–84347–00	BULB (12V-4W)	1					
6	306–84346–30	SOCKET, PILOT LIGHT	1					
7	2F9–84395–00	RING, RETAINING	1					
8	98502–04008	SCREW, PAN HEAD	3					
9	92902–04100	WASHER, SPRING	3					
10	4NK–84315–00	RIM, HEADLIGHT	1					
11	290–84124–21	SPRING, SET	1					
12	341–84331–60	SCREW, RIM ADJUSTING	2					
13	5G2–84332–60	SPRING, SCREW	2					
14	198–84334–60	NUT, ADJUSTING	2					
15	5BN–84330–00	BODY ASSY	1					
16	42X–84366–00	.DAMPER, HEADLIGHT 1	3					
17	98704–05012	SCREW, FLAT HEAD	2					
18	92017–06025	BOLT, BUTTON HEAD	1					
19	92017–06030	BOLT, BUTTON HEAD	2					
20	90201–060A3	WASHER, PLATE	1					
21	90201–065K5	WASHER, PLATE	2					
22	90387–0610J	COLLAR	1					
23	90387–06093	COLLAR	2					

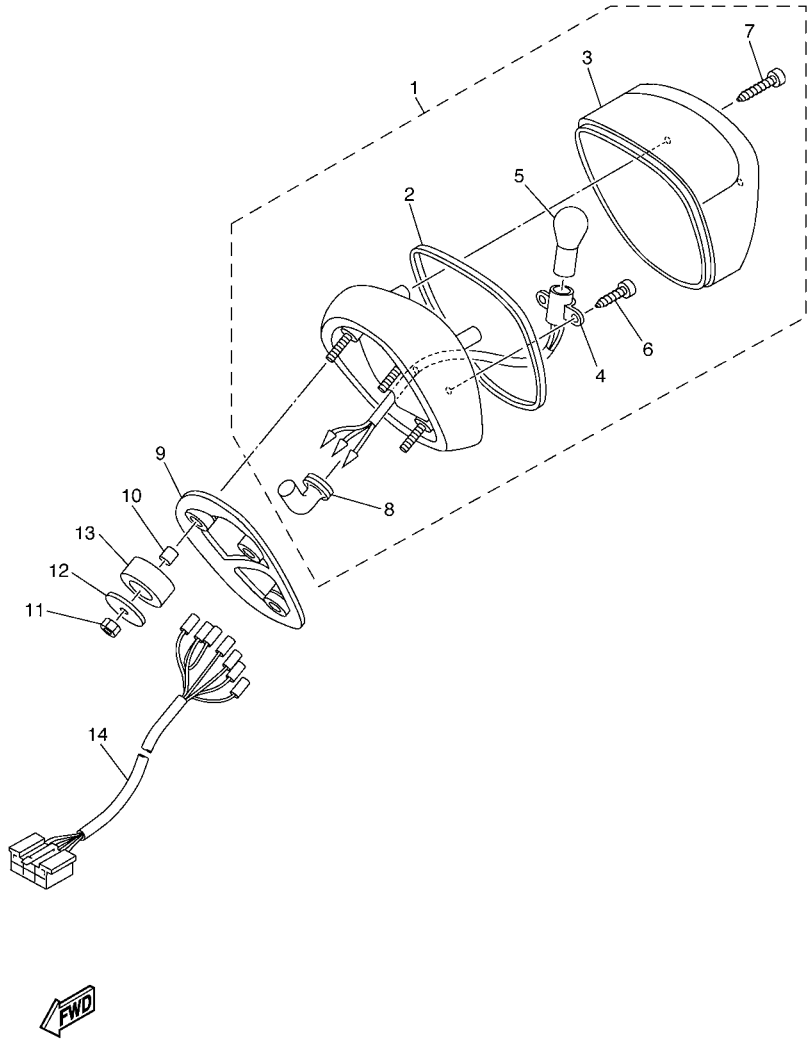

5SCF100-C370

FIG. 37 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–84700–11	TAILLIGHT ASSY	1					
2	4NK–84702–00	.GASKET,TAILLENS	1					
3	4YP–84721–00	.LENS, TAILLIGHT	1					
4	5BN–84735–00	.CORD ASSY	1					
5	31L–84714–00	.BULB (12V-21/5W)	1					
6	97707–40516	.SCREW, TAPPING	2					
7	97780–40525	.SCREW, TAPPING	3					
8	5BN–84154–00	.GROMMET	1					
9	4NK–84527–01	DAMPER	1					
10	90387–07038	COLLAR	3					
11	95307–06600	NUT	3					
12	90201–065G8	WASHER, PLATE	3					
13	5BN–84553–00	DAMPER	3					
14	5BN–84717–10	CORD, TAILLIGHT	1					

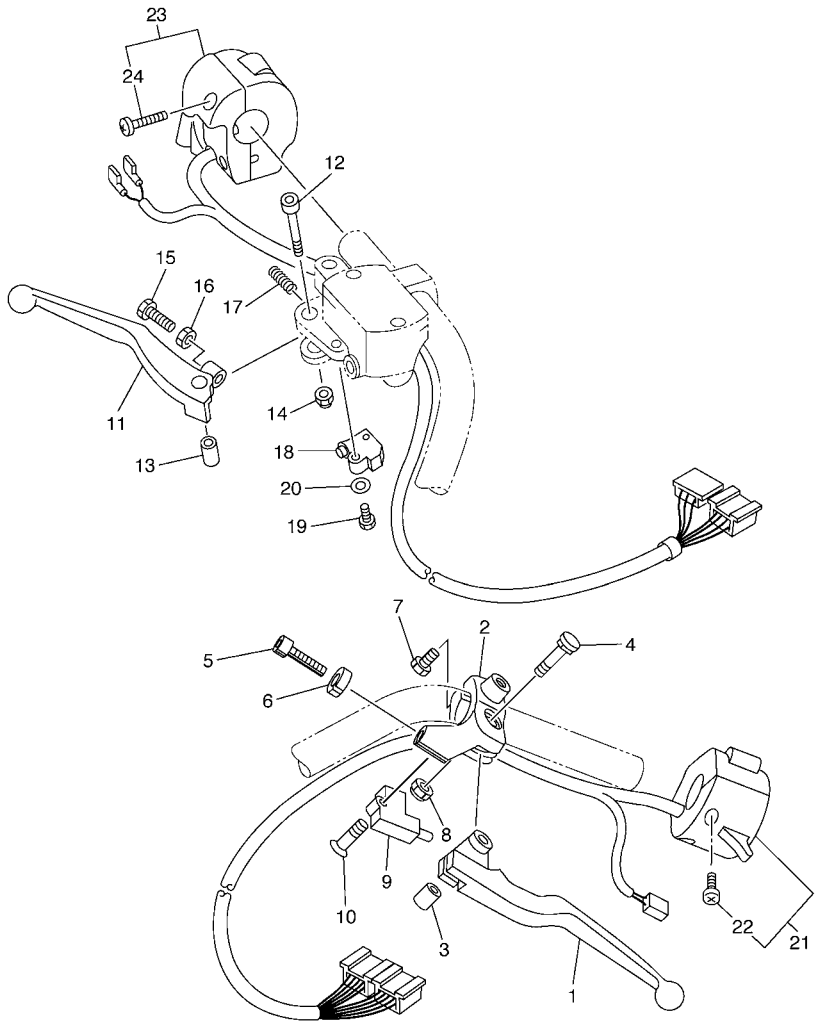

5SCS700-D380

FIG. 38 HANDLE SWITCH & LEVER

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5BN–83912–00	LEVER 1	1					
2	5BN–82911–00	HOLDER, LEVER 1	1					
3	4TR–83913–00	COLLAR, LEVER 1	1					
4	4TR–83945–00	BOLT, LEVER	1					
5	90123–08046	BOLT	1					
6	90179–08148	NUT	1					
7	97004–06020	BOLT	1					
8	95604–06100	NUT, U	1					
9	3YX–82917–01	SWITCH	1					
10	98707–03020	SCREW, FLAT HEAD	1					
11	5BN–83922–00	LEVER 2	1					
12	90110–06074	BOLT, HEXAGON SOCKET HEAD	1					
13	36Y–83913–01	COLLAR, LEVER 1	1					
14	95607–06100	NUT, U	1					
15	90149–06131	SCREW	1					
16	90170–06010	NUT	1					
17	90501–10312	SPRING, COMPRESSION	1					
18	36Y–83980–01	FRONT STOP SWITCH ASSY	1					
19	98507–04016	SCREW, PAN HEAD	1					
20	92907–04600	WASHER	1					
21	5KP–83972–20	SWITCH, HANDLE 4	1					
22	98580–05025	.SCREW, PAN HEAD	2					
23	5KS–83963–20	SWITCH, HANDLE 3 (RIGHT)	1					
24	98507–05025	.SCREW, PAN HEAD	2					

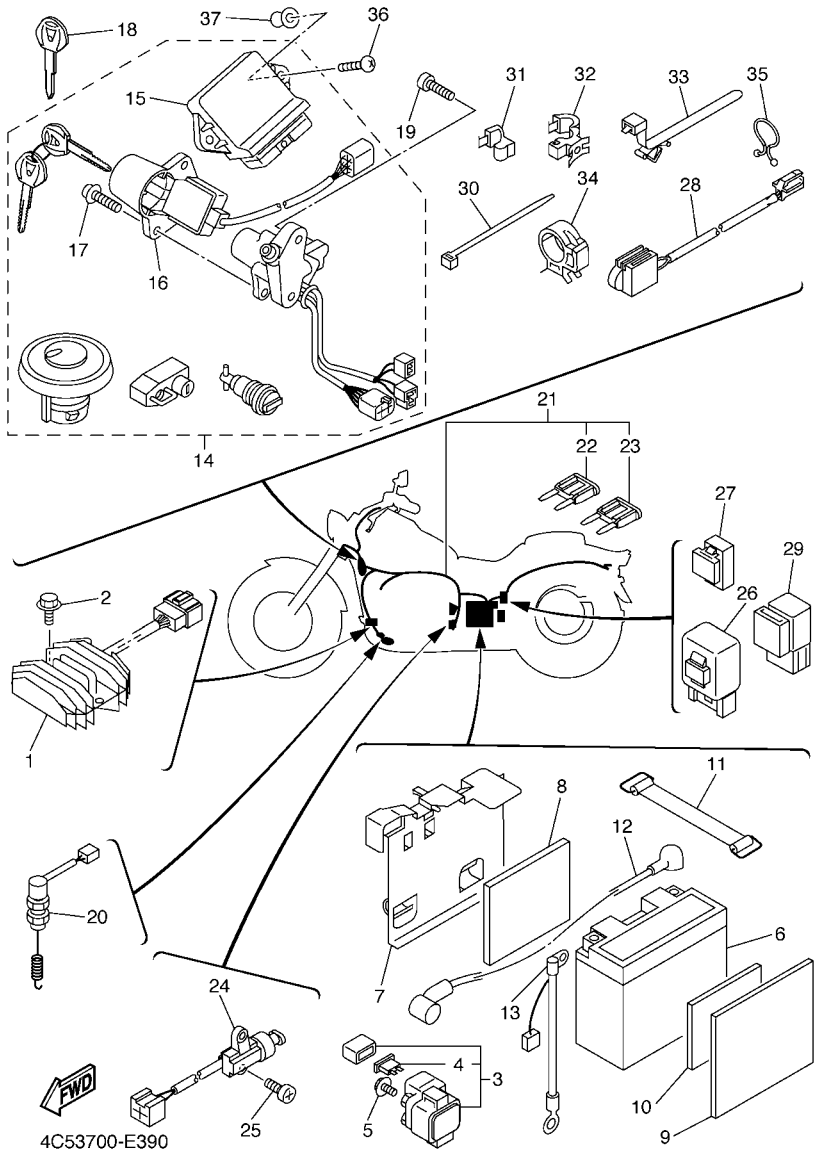


FIG. 39 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	5KP–81960–00	RECTIFIER & REGULATOR ASSY	1					
2	95804–06020	BOLT, FLANGE	2					
3	4BH–81940–02	STARTER RELAY ASSY	1					
4	1AE–82151–00	.FUSE (30A-BL)	2					
5	95027–06008	BOLT, FLANGE	2					
6	4TX–82100–02	BATTERY ASSY (GS GT12B-4)	1					
7	5BN–82129–00	COVER, BATTERY	1					
8	29N–14425–00	DAMPER 1	1					
9	4VR–2176E–00	PLATE	1					
10	29N–14425–00	DAMPER 1	1					
11	133–82131–00	BAND, BATTERY	1					
12	5BN–82115–00	WIRE, PLUS LEAD	1					
13	5BN–82116–00	WIRE, MINUS LEAD	1					
14	5SC–W8250–21	MAIN SW. IMMOBILIZER KIT	1					
15	5SC–82305–20	.IGNITOR UNIT ASSY	1					
16	5KS–8255P–00	.IMMOBILIZER. UNIT COMP.	1					
17	90159–05183	.SCREW, WITH WASHER	2					
18	5SL–82511–08	BLANK KEY	1					AP
19	90149–08002	SCREW	2					
20	3HN–82530–11	STOP SWITCH ASSY	1					
21	5SC–82590–40	WIRE HARNESS ASSY	1					
22	5JJ–82151–30	.FUSE (10A-BL)	5					
23	5JJ–82151–10	.FUSE (15A-BL)	3					
24	5RT–82566–B0	SWITCH, SIDE STAND	1					
25	90157–05079	SCREW, PAN HEAD	2					
26	5VK–81950–30	RELAY ASSY	1					
27	1UY–81950–92	RELAY ASSY	1					


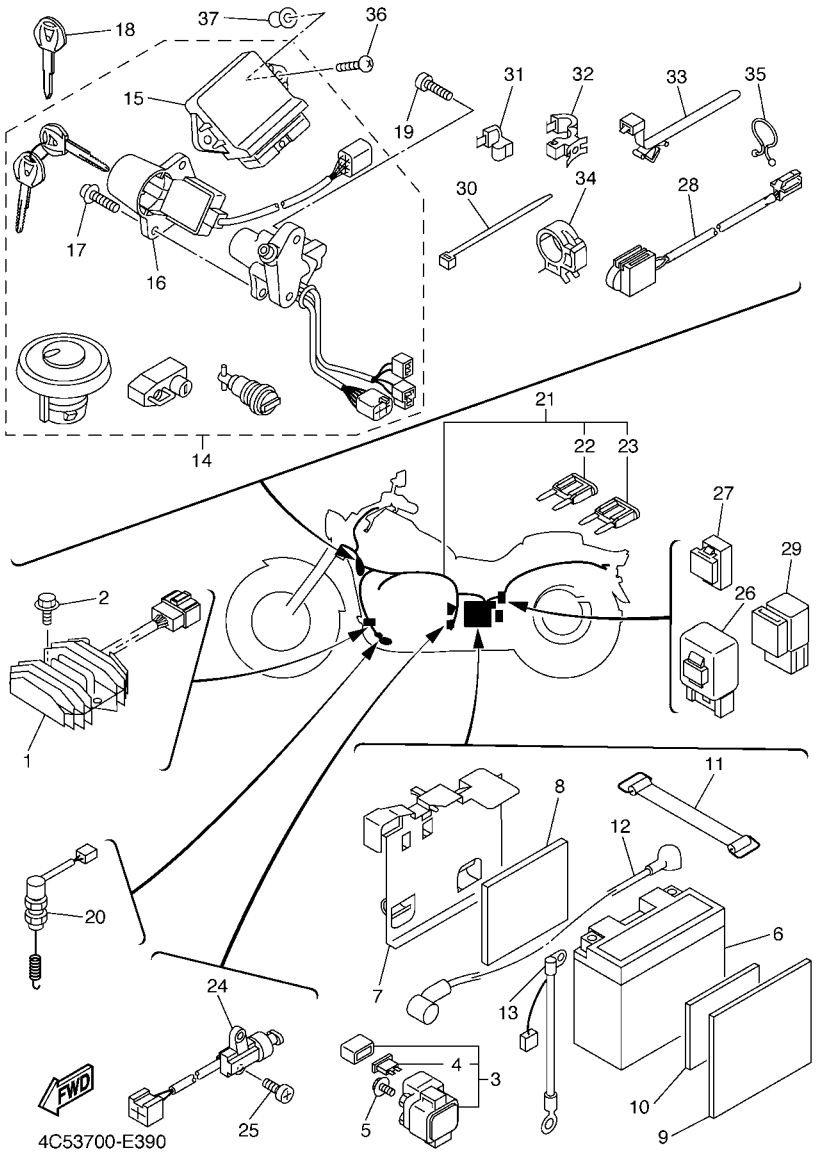


FIG. 39 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
28	5FU–82560–50	THERMO SWITCH ASSY	1					
29	29U–81950–93	RELAY ASSY	1					
30	1UA–82591–00	BAND	14					
31	90464–05188	CLAMP	5					
32	90464–20191	CLAMP	1					
33	90464–20213	CLAMP	1					
34	90464–10190	CLAMP	1					
35	90464–23041	CLAMP	1					
36	97707–60020	SCREW, TAPPING	2					
37	90338–08226	PLUG	2					

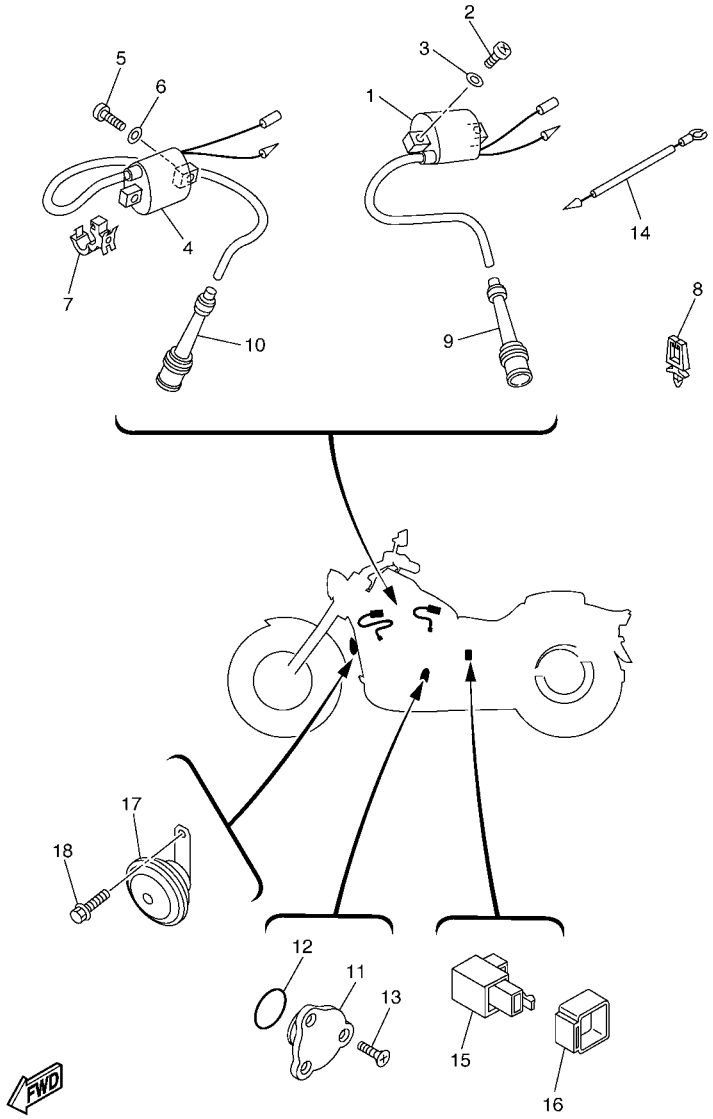

5SCE300-C400

FIG. 40 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	4C5Y					REMARKS
1	4VR–82310–00	IGNITION COIL ASSY	1					
2	98507–05020	SCREW, PAN HEAD	2					
3	92907–05600	WASHER, PLATE	2					
4	4VR–82320–00	IGNITION COIL ASSY	1					
5	98507–05020	SCREW, PAN HEAD	2					
6	92907–05600	WASHER, PLATE	2					
7	90464–10190	CLAMP	1					
8	90464–05141	CLAMP	1					
9	1FK–82370–00	PLUG CAP ASSY	1					
10	4TR–82370–00	PLUG CAP ASSY	1					
11	1L9–82540–00	NEUTRAL SWITCH ASSY	1					
12	93210–29196	O-RING	1					
13	90149–05321	SCREW	3					
14	4TR–82509–00	WIRE, SUB LEAD	1					
15	4VR–83350–00	FLASHER RELAY ASSY	1					
16	4VR–8338V–00	DAMPER	1					
17	5YS–83371–00	HORN	1					
18	90105–082A5	BOLT, FLANGE	1					

PART NO.	REF. NO.
4XP–11101–20	1 – 4
5BN–11101–20	1 – 1
4TR–1111F–00	1 – 14
22U–1111F–01	1 – 38
4VR–1111N–00	2 – 10
4TR–1112F–00	1 – 15
4H7–11133–11	1 – 2
	1 – 5
4TR–11142–00	1 – 12
22U–11145–00	5 – 3
4TR–11152–00	1 – 13
22U–11165–00	1 – 23
4TR–11166–00	1 – 25
4VR–11181–10	1 – 8
22U–11186–01	1 – 29
4TR–11186–20	1 – 22
22U–11187–01	1 – 30
4TR–11187–20	1 – 21
4VR–11190–10	2 – 9
4VR–11191–00	2 – 7
4VR–11192–00	2 – 8
214–11198–01	10 – 28
	22 – 23
4VR–11310–20	2 – 1
4VR–11320–20	2 – 2
4VR–11351–01	2 – 6
4TR–1135A–00	1 – 16
4VR–11411–00	3 – 1
22U–11416–80	10 – 3
22U–11416–90	10 – 3
4VR–11603–00	3 – 3
4VR–11605–00	3 – 3
4VR–11607–00	3 – 3
4VR–11631–01–A0	3 – 2
3LD–11633–00	3 – 4
4VR–11636–00	3 – 2
4VR–11638–00	3 – 2
4VR–11650–00	3 – 6
22U–11654–00	3 – 7
3LD–11656–00	3 – 9
3LD–11656–10	3 – 9
3LD–11656–20	3 – 9
3LD–11656–30	3 – 9
4VR–12111–01	4 – 1
3Y1–12114–01	4 – 4
3Y1–12116–00	4 – 3
3Y1–12117–01	4 – 6
1J7–12118–00	4 – 7
1J7–12119–01	4 – 5
4VR–12121–01	4 – 2
22U–12151–00	4 – 8
22U–12156–01	4 – 9
22U–12159–00	4 – 10
4VR–12171–00	5 – 1
22U–12176–01	5 – 9
4VR–12181–00	5 – 2
11H–12210–02	5 – 10
3BT–12213–00	5 – 11
4VR–12231–00	5 – 13
22U–12241–00	5 – 14
4TR–12682–01	7 – 36
4VR–13300–00	6 – 1
22U–13324–00	6 – 6
4VR–13325–01	6 – 4
4TR–13410–00	6 – 7
22U–13415–00	6 – 9
4VR–13417–00	6 – 8
4X7–13440–01	11 – 40
4TR–13447–00	11 – 41
4TR–13474–01	7 – 7
5BN–13542–00	9 – 45
5BN–13544–00	9 – 46
16G–13569–00	7 – 3
4TR–13575–00	7 – 27
4MM–13582–00	9 – 47
4TR–13586–01	7 – 1
4VR–13594–00	7 – 28
4TR–13596–01	7 – 2
5KS–13907–00	25 – 43
4TR–14103–00	8 – 4
4TR–14105–00	8 – 5
3CF–14107–10	8 – 8
4DN–1410A–01	8 – 7
3DM–14141–34	8 – 11
4KM–14142–20	8 – 10
1HX–14147–00	8 – 18
36Y–14147–00	8 – 40
137–14153–00	8 – 23
353–14186–00	8 – 35
12R–14191–00	8 – 32
1AE–14227–00	8 – 19
620–14231–18	8 – 12
1HX–14231–20	8 – 9
1AE–14237–00	8 – 21
4HM–14239–00	8 – 37
1WG–14251–00	8 – 41
1AE–14261–00	8 – 20
26H–14275–00	8 – 28
4TR–14294–10	25 – 40
4TR–14348–00	8 – 29
4TR–1440F–00	7 – 26
4TR–1440G–00	7 – 18
4TR–14411–00	7 – 8
4TR–14413–00	7 – 22
4TR–14417–01	7 – 9
4TR–14421–00	7 – 15
29N–14425–00	39 – 8
	39 – 10
4VR–14431–01	7 – 23
4TR–14437–00	7 – 11
4TR–14451–00	7 – 12
4TR–14452–00	7 – 17
4TR–14453–00	7 – 24
4TR–14455–00	7 – 30
4TR–14456–00	7 – 14
4TR–14463–00	7 – 13
3KW–14486–00	8 – 26
4TR–14499–00	7 – 31
1FN–14565–00	8 – 34
1HX–14565–00	8 – 22
1UY–14565–00	8 – 25
5BN–14603–00	9 – 22
5BN–14604–00	9 – 19
4BR–14613–00	9 – 4
4TR–14613–00	9 – 1
4TR–14615–02	9 – 2
5BN–14620–02	9 – 5
4VR–14703–05	9 – 9
4VR–14704–06	9 – 12
4BH–14714–00	9 – 10
	9 – 15
4KM–14714–01	9 – 37
5BN–14808–00	9 – 30
5BN–14840–00	9 – 26
5BN–14857–01	9 – 38
5BN–14858–00	9 – 39
5BN–14871–00	9 – 34
5BN–14872–00	9 – 35
5BN–14875–00	9 – 51
5BN–14881–00	9 – 49
5BN–14881–10	9 – 50
5BN–14882–00	9 – 25
5BN–14883–00	9 – 28
5BN–14884–00	9 – 33
5BN–14885–00	9 – 44
5BN–14900–50	8 – 1
5BN–14901–50	8 – 2
5BN–14902–50	8 – 3
4XP–1490J–00	8 – 6
3KW–1490K–00	8 – 39
4TR–1490L–00	8 – 38
4VR–14933–00	8 – 13
4TR–14937–00	8 – 33
22V–14940–00	8 – 27
4TR–14940–00	8 – 24
1HX–14985–00	8 – 36
4TR–14987–00	8 – 42
4TR–15100–20	10 – 1
2H7–15361–00	11 – 4
3F9–15362–00	11 – 5
11H–15383–02	10 – 23
4TR–15411–00	11 – 1
5KP–15415–10	11 – 18
5KP–1541A–10	11 – 21
4TR–15421–00	11 – 24
4VR–15423–00	11 – 36
4TR–15424–00	11 – 19
22U–15441–01	10 – 26
4VR–15451–00	11 – 3
4VR–15461–00	11 – 25
3BT–15484–00	11 – 17
22U–15512–00	12 – 1
4VR–15517–01	12 – 4
5H0–15521–00	12 – 2
4TR–15590–00	12 – 3
4VR–16111–00	13 – 1
5BN–16150–00	13 – 6
22U–16154–00	13 – 7
22U–16321–00	13 – 10
4X7–16324–00	13 – 9
4X7–16325–00	13 – 11
22U–16351–00	13 – 12
4VR–16356–00	13 – 16
22U–16357–00	13 – 29
1W1–16358–01	13 – 15
4VR–16371–00	13 – 8
22U–16380–00	13 – 24
4KU–17121–00	14 – 7
4VR–17131–00	14 – 5
3JB–17141–00	14 – 2
4VR–17151–01	14 – 6
22U–17211–00	14 – 19
4KU–17221–00	14 – 11
4VR–17231–00	14 – 15
4TR–17241–00	14 – 18
4VR–17251–01	14 – 14
22U–17402–00	14 – 10
4VR–17411–00	14 – 1
22U–17524–00	15 – 14
4VR–17527–00	15 – 12
3H5–17529–00	15 – 15
3JB–17531–00	15 – 18
3JB–17531–10	15 – 18
3JB–17531–20	15 – 18
3JB–17531–30	15 – 18
3JB–17531–40	15 – 18
3JB–17531–50	15 – 18
4H7–17537–00–20	15 – 3
4H7–17537–00–30	15 – 3
4H7–17537–00–40	15 – 3
1J7–17537–Y0–30	22 – 8
1J7–17537–Y0–40	22 – 8
1J7–17537–Y0–50	22 – 8
4VR–17553–00	15 – 5
22U–17556–00	15 – 9
56W–17590–00	22 – 24
5BN–18110–00	17 – 13
4TR–18112–00	17 – 18
22N–18113–00	17 – 15
4NK–18113–10	17 – 14
5A8–18115–00	17 – 20
4TR–18120–00	17 – 6
4G0–18127–00	17 – 2
4TR–18140–00	17 – 3
2H9–18154–00	17 – 16
	17 – 19
4H7–18185–00	16 – 3
4TR–18511–00	16 – 11
4TR–18512–00	16 – 12
4TR–18513–00	16 – 13
3YF–18531–00	16 – 14
4TR–18535–00	16 – 15
4TR–18540–02	16 – 1
4UN–18542–00	16 – 8
4UN–18566–00	16 – 9
4XS–21110–10	18 – 1
4VR–21161–00	18 – 31
5KP–21266–00	18 – 37
4R8–21308–01	19 – 26
4VR–21315–00	18 – 2
4VR–21317–00	18 – 7
5BN–21317–00	18 – 8
4TR–2144G–01	18 – 29
4TR–21460–01	18 – 22
5BN–21518–01	19 – 6
1D6–2153E–00	19 – 14
5RU–21568–01	25 – 5
5SC–21570–90	19 – 2
5SC–21570–A0	19 – 2
3FY–21575–01	18 – 32
5BN–21578–J0	19 – 3
5BN–21578–P0	19 – 3
5BN–21587–01	19 – 8
5BN–21598–00	19 – 7
4TR–2160A–00	20 – 1
5BN–21613–10	19 – 16
5BN–21614–10	19 – 21
4TR–21629–00	19 – 28
42U–21639–00	19 – 44
5SC–2165A–80	19 – 13
5SC–2165A–90	19 – 13
5BN–21668–00	18 – 36
55K–21708–00	20 – 15
5BN–21711–00–P8	20 – 12
5BN–21711–00–PE	20 – 12
3XV–21717–00	25 – 35
4TR–21717–00	20 – 13
4TR–2171A–00	25 – 31
4TR–2171E–00	18 – 16
1FK–2171L–00	25 – 21
4TR–2171X–40	18 – 18
5BN–21721–00–P8	20 – 18
5BN–21721–00–PF	20 – 18
5SC–2172K–00	20 – 4
5BN–21731–00	20 – 23
3SP–21732–00	18 – 34
	19 – 11
4NK–21735–00	19 – 12
4VR–21741–00	20 – 29
3BN–21747–00	18 – 17
	18 – 19
4VR–2176E–00	39 – 9
4TR–2177G–10	20 – 3
4VR–22110–01	21 – 1
1J7–22141–00	21 – 6
4KM–22141–00	21 – 2
1J7–22143–00	21 – 7
4GY–2214F–00	18 – 33

PART NO.	REF. NO.
4VR–22184–00	21 – 11
4TR–22189–00	21 – 10
5BN–22210–60	21 – 12
5BN–23102–12	24 – 1
5BN–23103–12	24 – 20
5BN–23110–01	24 – 4
	24 – 23
1D0–23111–00	24 – 18
	24 – 37
4TR–23118–00	24 – 17
	24 – 36
5KS–23121–20	24 – 44
4NK–23122–01	34 – 17
4KM–23123–01	24 – 49
5BN–23123–10	24 – 42
4FM–23125–40	24 – 7
	24 – 26
5BN–23126–11	24 – 2
5KS–23131–20	24 – 45
5BN–23133–10	24 – 43
5BN–23136–11	24 – 21
5BN–23141–00	24 – 15
	24 – 34
4EB–23144–00	24 – 11
	24 – 30
4EB–23145–01	24 – 9
	24 – 28
36Y–23146–10	24 – 8
	24 – 27
4DW–23149–40	24 – 16
	24 – 35
26H–23156–00	24 – 10
	24 – 29
509–23158–L0	24 – 13
	24 – 32
5BN–23163–00	24 – 46
5KS–23165–10	24 – 48
5BN–23170–00	24 – 6
	24 – 25
5BN–23171–00	24 – 5
	24 – 24
4YR–23173–00	24 – 12
	24 – 31
5BN–23174–01	23 – 17
5BN–2317J–00	23 – 18
5BN–2317V–00	34 – 15
5BN–2317W–30	19 – 32
278–23181–50	24 – 14

PART NO.	REF. NO.
278–23181–50	24 – 33
43F–23188–10	24 – 19
	24 – 38
5BN–23193–00	24 – 3
	24 – 22
5KS–23340–10	24 – 40
5BN–23389–10	23 – 23
5BN–23394–01	24 – 47
1W1–23416–00	23 – 4
26H–23418–01	23 – 6
5MB–23441–00	23 – 14
5MB–23442–00	23 – 13
3DM–23445–00	23 – 11
3FV–23462–00	24 – 51
4TR–2413B–00	25 – 39
4TR–2413Y–00	25 – 7
3HA–24141–00	18 – 35
4TR–2414G–00	25 – 34
5SC–2414H–00	25 – 36
5SC–2414J–00	25 – 37
5SC–2414K–00	25 – 38
5FB–2416B–00	25 – 3
5FB–2417B–00	25 – 4
4H7–24181–00	25 – 12
4TR–24182–00	25 – 6
4TR–24183–00	25 – 8
5FB–24240–P0	25 – 2
5FB–24240–R0	25 – 2
4TR–24311–10	25 – 29
4TR–24313–10	25 – 22
4EB–24398–00	25 – 26
4KM–24453–00	8 – 43
4TR–24491–10	18 – 26
21V–24500–11	25 – 14
4X8–24512–00	25 – 17
3AC–24523–00	25 – 18
3AJ–24534–01	25 – 15
1FK–24560–10	25 – 24
1FK–24566–00	25 – 25
5BN–24602–02	25 – 13
5BN–24710–10	26 – 1
5YS–2471N–00	26 – 24
5BN–24720–00	26 – 26
5BN–24723–00	26 – 6
35T–24724–00	26 – 5
509–24724–00	26 – 19
5BN–24724–00	26 – 11
5BN–24736–00	26 – 8

PART NO.	REF. NO.
5BN–24737–00	26 – 9
5BN–24741–00	26 – 7
5YS–24742–00	26 – 22
5BN–24747–00	26 – 10
5BN–24750–10	26 – 16
5BN–24751–00	26 – 17
5BN–2475H–00	26 – 4
5YS–2475J–00	26 – 18
5BN–2475K–00	26 – 14
5BN–2475Y–00	26 – 12
5BN–25104–01	27 – 10
4TR–25111–00	27 – 1
341–25149–00	27 – 6
5KS–25181–00	27 – 16
1FK–25190–02	27 – 14
4VR–25304–02	29 – 21
3JB–25311–00–35	29 – 1
2GV–25315–00	29 – 3
2GV–25317–00	29 – 2
1J7–25319–02	22 – 25
4TR–25321–00	29 – 12
4H7–2533A–02	29 – 18
4H7–25351–00	29 – 15
214–25355–00	29 – 16
4TR–25364–00	29 – 7
4TR–25366–00	29 – 6
4TR–25371–00	29 – 30
4TR–25381–00	29 – 26
3HT–25398–00	27 – 8
	29 – 25
16G–25412–00	29 – 8
4WM–2580U–01	28 – 3
5BN–25827–00	28 – 12
5BN–2582U–00	28 – 1
341–25846–00	27 – 7
3D8–25852–10	31 – 3
3D8–25854–00	31 – 5
3D8–25855–00	31 – 4
4L0–25862–01	31 – 8
4TR–25867–00	31 – 7
5BN–25872–20	31 – 10
5BN–25886–00	23 – 21
3D8–2589H–10	31 – 6
5JW–25914–10	28 – 6
4BP–25919–00	28 – 9
3YX–25929–00	28 – 10
4TT–25937–00	28 – 7
5BN–26111–11	30 – 1

PART NO.	REF. NO.
4NK–26240–00	30 – 5
4NK–26241–00	30 – 3
4NK–26280–10	30 – 13
4NK–2628J–00	30 – 4
5BN–26290–20	30 – 14
5BN–26311–20	30 – 7
5BN–26312–20	30 – 8
4TR–26331–00	25 – 45
1VJ–26333–00	25 – 47
5BN–26335–10	30 – 10
1E6–26342–00	30 – 11
4NK–2635J–00	30 – 6
4TR–2637G–00	25 – 44
5BN–27211–00	32 – 1
4TR–27212–00	32 – 19
4TR–27231–00	32 – 21
4NK–27242–00	32 – 2
4TR–27243–00	32 – 16
4TR–27247–00	32 – 12
4NK–27285–00	32 – 6
4KU–27311–13	32 – 28
5EL–27315–00	32 – 35
5BN–27321–01	32 – 37
5EL–27322–01	32 – 29
5BN–27410–01	32 – 40
5BN–27413–00	32 – 42
5BN–27420–00	32 – 49
5BN–27423–00	32 – 51
4NK–27426–00	32 – 44
	32 – 53
3D8–27427–00	32 – 43
	32 – 52
4TR–27430–10	32 – 58
120–27433–00	32 – 59
	32 – 65
4TR–27440–10	32 – 64
5BN–27451–00	32 – 41
5BN–27461–00	32 – 50
4WM–27496–00	32 – 46
4WM–27497–00	32 – 55
4TR–28100–00	20 – 31
4VR–28356–01	18 – 24
4SV–28372–00	18 – 20
5FB–46101–00	22 – 1
2H7–46102–00	22 – 7
22U–46117–00–25	22 – 16
22U–46117–00–30	22 – 16
22U–46117–00–40	22 – 16

PART NO.	REF. NO.
22U–46118–00–12	22 – 18
22U–46118–00–14	22 – 18
22U–46118–00–16	22 – 18
22U–46118–00–18	22 – 18
22U–46118–00–20	22 – 18
22U–46123–00	22 – 26
4H7–46125–00	22 – 10
5FB–46136–00	22 – 14
5FB–46137–00	22 – 29
22U–46152–00	22 – 15
22U–46153–00	22 – 4
4TR–46154–00	22 – 38
5FB–46171–00	22 – 27
4X7–46180–00	22 – 32
4TR–46297–00	22 – 39
84M–77555–00	20 – 19
5SC–81410–01	33 – 2
4VR–81450–01	33 – 1
5KP–81517–00	8 – 45
4VR–81815–00	12 – 12
3HE–81826–00	12 – 8
4XV–8182A–00	12 – 10
	12 – 13
3KS–81840–00	12 – 9
11H–81844–00	12 – 11
1FK–81847–00	12 – 7
3JB–81890–00	12 – 6
4BH–81940–02	39 – 3
5VK–81950–30	39 – 26
1UY–81950–92	39 – 27
29U–81950–93	39 – 29
5KP–81960–00	39 – 1
4TX–82100–02	39 – 6
4DH–82103–00	8 – 17
5BN–82115–00	39 – 12
5BN–82116–00	39 – 13
5Y1–82122–00	20 – 6
5BN–82129–00	39 – 7
133–82131–00	39 – 11
1AE–82151–00	39 – 4
5JJ–82151–10	39 – 23
5JJ–82151–30	39 – 22
5SC–82305–20	39 – 15
4VR–82310–00	40 – 1
4VR–82320–00	40 – 4
1FK–82370–00	40 – 9
4TR–82370–00	40 – 10
4TR–82509–00	40 – 14

PART NO.	REF. NO.
5SL–82511–08	39 – 18
3HN–82530–11	39 – 20
1L9–82540–00	40 – 11
5KS–8255P–00	39 – 16
5FU–82560–50	39 – 28
5RT–82566–B0	39 – 24
5SC–82590–40	39 – 21
1UA–82591–00	25 – 46
	39 – 30
5BN–82911–00	38 – 2
3YX–82917–01	38 – 9
5YS–83310–10	34 – 1
5VN–83311–10	34 – 21
	34 – 27
1D6–83312–10	34 – 3
	34 – 28
1D6–83312–20	34 – 9
	34 – 22
1D6–83313–00	34 – 4
	34 – 10
	34 – 23
	34 – 29
5YS–83320–10	34 – 7
5VN–83321–00	19 – 30
	34 – 18
1D6–83330–00	34 – 20
5VN–83331–00	34 – 2
	34 – 8
1D6–83340–00	34 – 26
4NK–83345–00	19 – 31
	34 – 19
4VR–83350–00	40 – 15
57M–83358–00	34 – 6
	34 – 12
	34 – 25
	34 – 31
1D6–83363–00	34 – 5
	34 – 30
1D6–83363–10	34 – 11
	34 – 24
5YS–83371–00	40 – 17
4VR–8338V–00	40 – 16
4TR–83513–00	35 – 8
1YT–83517–00	35 – 4
2GV–83517–00	35 – 3
5SC–83520–00	35 – 2
4TR–83526–00	35 – 9
4TR–83535–00	35 – 5

PART NO.	REF. NO.
5BN–83550–02	35 – 12
1JK–83578–00	35 – 6
5SC–83580–70	35 – 1
5FU–83790–00	8 – 14
5FU–83790–20	8 – 15
5BN–83912–00	38 – 1
4TR–83913–00	38 – 3
36Y–83913–01	38 – 13
5BN–83922–00	38 – 11
4TR–83945–00	38 – 4
5KS–83963–20	38 – 23
5KP–83972–20	38 – 21
36Y–83980–01	38 – 18
290–84124–21	36 – 11
5BN–84154–00	37 – 8
2F9–84314–00	36 – 3
4NK–84315–00	36 – 10
5KS–84320–00	36 – 2
5BN–84330–00	36 – 15
341–84331–60	36 – 12
5G2–84332–60	36 – 13
198–84334–60	36 – 14
306–84346–30	36 – 6
4E2–84347–00	36 – 5
42X–84366–00	36 – 16
4NK–84394–00	36 – 1
2F9–84395–00	36 – 7
3SX–84397–00	36 – 4
4NK–84527–01	37 – 9
5BN–84553–00	37 – 13
5BN–84700–11	37 – 1
4NK–84702–00	37 – 2
5BN–84703–10	19 – 38
31L–84714–00	37 – 5
5BN–84717–10	37 – 14
4YP–84721–00	37 – 3
5BN–84735–00	37 – 4
5BN–84751–30	19 – 39
4AG–85111–00	19 – 35
3Y6–85130–02	19 – 41
4NK–85885–00	8 – 44
2KR–W0041–00	31 – 2
4WM–W0045–00	28 – 8
3JB–W0047–00	28 – 5
51L–W0048–00	28 – 11
3JB–W0057–00	28 – 4
4VR–W1752–00	15 – 6
5BN–W216R–X0–XN	19 – 10
5BN–W216R–Y0–P3	19 – 10
3DR–W253E–00	29 – 13
3D8–W2587–10	31 – 1
5SC–W8250–21	39 – 14
4VR–Y1754–00	15 – 1
5BN–Y2151–2A–XJ	19 – 1
5BN–Y2151–2B–P3	19 – 1
4VR–Y2343–70	23 – 9
4TR–Y2410–M0–03	25 – 1
4TR–Y2410–V1–X2	25 – 1
90101–06534	32 – 10
90101–06576	9 – 6
	9 – 13
90101–06764	29 – 19
90101–10303	5 – 5
90101–12694	18 – 14
90105–062A2	18 – 25
90105–082A4	18 – 3
90105–082A5	32 – 63
	32 – 69
	40 – 18
90105–08307	18 – 9
90105–084A1	18 – 4
90105–10012	32 – 30
90105–10152	33 – 5
90105–101A9	21 – 8
90105–10232	18 – 13
90105–10253	18 – 12
90105–10285	22 – 20
90105–102A3	32 – 48
	32 – 57
90105–10727	32 – 38
90109–06468	32 – 17
90109–083G4	28 – 2
90109–085G1	29 – 31
90109–08781	1 – 41
90109–08782	1 – 40
90109–100G0	28 – 13
90109–125F1	21 – 14
	21 – 16
90110–06010	11 – 43
90110–06011	2 – 5
90110–06059	9 – 20
90110–06074	38 – 12
90110–06200	20 – 30
90110–06249	32 – 7
90110–06254	20 – 24
90110–08019	1 – 19
90110–08212	33 – 3
90116–08404	10 – 5
	10 – 10
90116–10405	10 – 9
90116–10593	22 – 2
90116–10611	10 – 4
90119–06097	20 – 11
90119–06118	20 – 2
	20 – 9
90119–06170	2 – 12
90119–06236	18 – 21
90119–08126	22 – 3
90123–08046	38 – 5
90149–05299	25 – 32
90149–05321	16 – 10
	40 – 13
90149–06011	25 – 19
90149–06131	38 – 15
90149–06154	19 – 27
90149–06302	2 – 14
	20 – 22
90149–08002	39 – 19
90149–08067	13 – 28
90149–08152	10 – 25
90151–08022	10 – 24
90152–05008	32 – 47
	32 – 56
90157–02031	35 – 7
90157–05079	39 – 25
90157–10043	19 – 17
	19 – 22
90159–05183	39 – 17
90159–06016	13 – 14
90170–06010	38 – 16
90170–06128	4 – 11
90170–06228	17 – 21
90170–10011	29 – 9
90170–16256	13 – 5
90170–20310	13 – 21
90170–22187	20 – 16
90176–06003	19 – 36
90176–08001	26 – 23
90176–08080	1 – 17
90176–10075	22 – 35
90176–12052	23 – 25
90176–22081	23 – 7
90179–05523	25 – 33
90179–06411	32 – 27
90179–08148	38 – 6
90179–08327	3 – 8
90179–08491	19 – 20
	19 – 25
90179–08684	18 – 5
90179–10395	1 – 9
90179–10658	18 – 11
90179–12004	18 – 15
90179–18396	15 – 4
90179–25033	23 – 5
90183–06023	20 – 10
90183–06053	20 – 8
90185–08097	9 – 3
	9 – 8
90185–14070	15 – 11
90201–05033	35 – 10
90201–06043	19 – 34
90201–06057	19 – 37
90201–06062	20 – 28
90201–060A3	36 – 20
90201–062P7	9 – 43
	32 – 14
	32 – 23
90201–065G8	37 – 12
90201–065K5	36 – 21
90201–08016	8 – 16
90201–08042	26 – 25
90201–08609	1 – 18
90201–10131	1 – 10
90201–10591	5 – 4
90201–107E9	33 – 4
90201–112U0	21 – 9
90201–124G9	21 – 18
90201–12575	17 – 11
90201–12588	17 – 10
90201–12688	17 – 23
90201–14220	23 – 12
90201–14577	29 – 17
90201–14633	15 – 10
90201–152L7	29 – 27
90201–18262	13 – 26
90201–20279	32 – 62
	32 – 68
90201–220T0	23 – 8
90201–25290	12 – 5
90202–05057	9 – 42
90202–05193	25 – 20
90202–24190	23 – 3
90202–26142	23 – 2
90206–12074	17 – 25
90206–14086	32 – 8
90209–06011	25 – 9
90209–22191	14 – 3
	14 – 16
90209–27192	14 – 12
90214–16026	13 – 3
90215–08229	1 – 39
90215–16157	13 – 4
90215–18178	17 – 1
90215–22210	13 – 20
90240–06108	32 – 13
	32 – 22
90249–12008	32 – 26
90267–32018	20 – 5
90269–05039	19 – 29
90280–05048	3 – 10
90280–07036	13 – 2
90338–08163	23 – 16
90338–08174	7 – 21
90338–08226	39 – 37
90338–10132	9 – 27
90340–14132	10 – 27
	22 – 22
90340–14153	11 – 7
90340–32140	11 – 9
90380–28131	5 – 7
90387–0600V	20 – 26
90387–06043	2 – 13
90387–06093	36 – 23
90387–0610J	36 – 22
90387–07038	37 – 10
90387–1003G	32 – 31
90387–123X6	21 – 19
90387–1510D	22 – 37
90387–151R1	29 – 28
90387–16547	10 – 7
	10 – 12
	10 – 14
90387–173M5	27 – 5
90387–173R6	27 – 15
90387–17543	21 – 5
90387–25017	22 – 13
90387–2511R	15 – 16
90401–10020	31 – 11
90401–16166	1 – 36
90430–08119	13 – 27
90430–10005	31 – 12
90430–17168	1 – 37
90445–11587	7 – 19
90445–16641	32 – 36
90446–14359	20 – 7
90460–53200	7 – 25
90462–08070	11 – 38
90462–10115	11 – 33
90464–05141	40 – 8
90464–05188	39 – 31
90464–10190	39 – 34
	40 – 7
90464–15192	25 – 30
	30 – 2
90464–18246	23 – 24
90464–20191	39 – 32
90464–20213	39 – 33
90464–23041	39 – 35
90464–25002	19 – 43
90467–08092	9 – 48
90467–10038	25 – 23
90467–10039	7 – 4
90467–11032	25 – 27
90467–11106	7 – 20
90467–12053	25 – 28
	25 – 41
90467–12124	25 – 42
90467–14015	1 – 26
90467–19065	9 – 29
90468–08104	9 – 36
90480–01559	20 – 20
90480–10289	20 – 25
90480–10627	11 – 22
90480–12320	18 – 28
	20 – 14
	20 – 21
90480–13018	1 – 43
	2 – 11
90480–13398	7 – 32
90480–15061	19 – 15
90480–24186	20 – 17
90501–06022	16 – 7
90501–10245	32 – 25
90501–10312	38 – 17
90501–15722	22 – 31
90501–23738	13 – 13
90501–60716	15 – 13
90506–08227	17 – 7

PART NO.	REF. NO.
90506–20369	32 – 11
90506–23490	32 – 33
90506–29507	32 – 34
90507–20002	29 – 14
90508–16577	13 – 25
90508–18023	32 – 3
90508–290B5	17 – 4
90508–32536	17 – 8
91314–06020	6 – 12
	9 – 23
	20 – 27
91314–06025	5 – 12
	6 – 11
	11 – 44
	31 – 9
91314–06030	11 – 15
	11 – 32
91314–06035	1 – 28
	11 – 16
91314–06040	11 – 12
91314–06045	11 – 13
	11 – 31
91314–06055	10 – 22
	11 – 14
	11 – 30
91314–06065	11 – 29
91314–06070	11 – 45
91314–08016	34 – 16
91314–08020	24 – 41
91314–08025	23 – 15
91314–08030	23 – 10
91314–08035	9 – 17
91314–08040	24 – 39
91314–08060	10 – 16
91314–08100	10 – 18
91317–06012	11 – 39
	26 – 15
91317–06016	7 – 33
91317–06020	7 – 6
	7 – 34
	11 – 23
91317–06030	6 – 3
91317–06045	10 – 21
91317–06085	2 – 4
91317–06095	10 – 19
91317–08080	10 – 17
91380–06045	10 – 20
91401–20012	32 – 15
91401–20012	32 – 24
91401–20015	32 – 61
	32 – 67
91402–20012	32 – 5
91701–06032	32 – 60
	32 – 66
91702–06022	32 – 4
91815–16017	10 – 2
	11 – 35
92014–05016	7 – 16
92014–06035	11 – 37
92014–08035	19 – 19
	19 – 24
92014–08040	19 – 18
	19 – 23
	23 – 19
92017–06012	25 – 10
92017–06025	36 – 18
92017–06030	36 – 19
92017–08025	9 – 11
	9 – 16
92017–10020	9 – 18
92902–04100	36 – 9
92904–06600	1 – 35
92907–04600	38 – 20
92907–05200	9 – 41
92907–05600	40 – 3
	40 – 6
92907–06100	26 – 3
	26 – 21
	32 – 18
92907–06200	9 – 24
	13 – 18
92907–06600	1 – 33
	5 – 16
	7 – 35
	9 – 21
	33 – 7
	33 – 9
92990–06600	9 – 7
	9 – 14
	12 – 15
92990–10600	22 – 36
93101–14089	11 – 26
93101–30084	22 – 5
93101–35097	15 – 8
93101–38098	22 – 12
93102–12106	17 – 5
93102–18278	13 – 23
93102–25017	21 – 4
93102–28022	27 – 4
93102–65277	22 – 21
93105–45017	27 – 2
93109–12075	11 – 2
93109–18020	21 – 13
93210–09525	13 – 17
93210–10096	6 – 2
93210–14369	11 – 8
93210–15151	6 – 10
93210–15566	11 – 34
93210–18322	10 – 8
	10 – 13
	10 – 15
93210–27370	11 – 6
93210–29196	40 – 12
93210–32172	11 – 10
93210–36769	7 – 5
93210–48530	29 – 10
93210–60426	22 – 11
93210–61750	29 – 11
93210–62446	1 – 31
93210–64297	11 – 42
93210–71360	15 – 7
93210–74316	11 – 20
93210–84724	2 – 3
93210–89568	1 – 24
93211–00612	1 – 27
93211–39569	22 – 19
93306–00401	14 – 9
	15 – 17
93306–00428	14 – 20
93306–20711	15 – 2
93306–30212	29 – 5
93306–30213	29 – 4
93306–30317	27 – 3
93306–30525	14 – 8
93306–30539	22 – 9
93306–90602	16 – 2
93311–21044	22 – 33
93311–43729	22 – 6
93315–21813	13 – 22
93316–01301	22 – 17
93332–00010	21 – 3
93399–99931	23 – 1
93399–99932	24 – 50
93410–22039	22 – 30
93440–12052	1 – 3
	1 – 6
93440–20088	22 – 34
93440–25084	14 – 4
	14 – 17
93440–30077	14 – 13
93450–22027	3 – 5
93515–32029	13 – 30
93604–16092	16 – 4
93604–20156	16 – 5
93605–10108	5 – 6
94113–1613E	27 – 11
94117–15009	29 – 22
94213–16305	27 – 12
94217–15299	29 – 23
94313–16175	27 – 13
94317–15173	29 – 24
94430–16005	27 – 9
94435–15002	29 – 20
94591–41118	5 – 8
94701–00262	1 – 42
95024–06012	19 – 33
95024–06030	34 – 13
	34 – 32
95024–08012	26 – 13
95027–06008	39 – 5
95027–06010	19 – 40
	23 – 22
95304–06700	17 – 22
95304–08700	30 – 12
95307–05700	35 – 11
95307–06600	13 – 19
	37 – 11
95307–06700	32 – 9
95604–06100	38 – 8
95604–08200	29 – 32
95604–14200	29 – 29
95607–05100	9 – 40
95607–06100	38 – 14
95607–10200	32 – 32
	32 – 39
95607–12100	21 – 17
95607–12200	21 – 15
95617–08630	1 – 20
95704–06500	34 – 14
	34 – 33
95707–05500	19 – 42
95707–08500	23 – 20
95707–10500	1 – 11
95804–06020	39 – 2
95807–06010	19 – 9
95807–06012	18 – 30
95807–06014	18 – 27
95814–08020	19 – 5
95814–10100	18 – 10
95817–08014	18 – 23
95817–08016	19 – 4
	25 – 11
95817–10025	18 – 6
95827–08035	15 – 19
97004–06020	38 – 7
97007–06016	26 – 20
97007–06025	26 – 2
97024–06016	1 – 34
97024–06020	17 – 17
97027–06016	1 – 32
	5 – 15
97070–06025	12 – 14
97707–40106	7 – 29
97707–40516	37 – 6
97707–50125	7 – 10
97707–60020	39 – 36
97707–60114	9 – 31
97707–60120	9 – 32
97780–40525	37 – 7
98502–04008	36 – 8
98507–03008	25 – 16
98507–04008	8 – 30
	8 – 30
98507–04014	8 – 31
98507–04016	38 – 19
98507–05008	30 – 9
98507–05020	40 – 2
	40 – 5
98507–05025	38 – 24
98507–06020	33 – 8
98507–06030	33 – 6
98580–05025	38 – 22
98704–05012	36 – 17
98707–03020	38 – 10
98707–05035	16 – 6
99001–06600	32 – 45
	32 – 54
99001–10600	17 – 9
	17 – 12
99009–11400	6 – 5
99009–12400	17 – 24
99009–18400	22 – 28
99009–19400	32 – 20
99009–25500	11 – 27
99530–10114	11 – 11
99530–10120	11 – 28
99530–14016	10 – 6
	10 – 11
99530–17016	1 – 7